



HUks86B • HUks93R

HUFS88B • HUFSP98

HUks86B - HUks93R
ScootKid3-Wheel Kids Scooter

HUFS88B / HUFSP98
ScootKid 4-Wheel Kids Scooter

Child & Toddler Toy Scooter with Built-in LED Wheel Lights

USER MANUAL

Wear protective gear when riding

Adult supervision for assembly and use

GENERAL

We can rest assured that you have acquired a high quality product and also we offer you an excellent after-sales service. Before you convince yourself of the unique driving experience offered by your new scooter, please read the attached instructions carefully. They include these instructions in a safe place so that you can refer to them in the future. Please kindly note that the product specifications subject to change without notice, thanks for your kind attention.

Have fun with your new scooter!

Important Instructions and Warnings

IMPORTANT: Before you allow your child to use our scooter, please read the operating safety instructions carefully firstly, and ensure that the steering rod is fully engaged and all the screws are tight. Also ensure that the wheels have been correctly secured and that they show no signs of wear.

IMPORTANT: Undoing the axle screws several times will reduce the effect of the screw securing product. This means that the screws may come loose by themselves. You should therefore always check the screws regularly and use the scooter after tightening the screws.

WARNING:

- Adult required, this product contains small parts while unassembled.
- The toy needs to be used with caution, since skill if required to avoid falls or collisions causing injury to the user or third parties.
- The wearing of helmets protective equipment for elbows, knees, wrists and palms as well as shoes with flat rubber soles is recommended.
- Close quick-action lock securely and ensure that it is correctly positioned.
- Do not ride down slopes.
- Child must be supervised.
- Brake can become hot.
- Maximum permissible weight: 60 kg.

OPERATING SAFETY INSTRUCTIONS

- Child should practice first to gain control of the scooter. We recommend that you practice your scooter on a traffic-free car park or on open asphalt play areas.
- Ensure that your child always wears a helmet, wrist, elbow and knee pads, as well as shoes with rubber soles. Not to be used in traffic 60 kgs max.
- Ensure that your child does not attempt any experiments or risky maneuvers with it. Riding style should always be adjusted to the personal skill of the rider.
- Ensure that your child does not travel at speeds exceeding 5 km/h.
- Ensure that your child does not ride on roads, paths or other places with motor vehicle traffic.
- Ensure that your child does not make any modifications or alterations to your scooter which would put your safety at risk. If you do, the guarantee is expired.
- Ensure that your child does not ride the scooter in the dark or at night. Only one child may ride on the scooter.
- Ensure that your child does not ride down any steep hills. The brake is not designed to decelerate from high downhill speeds. Always look ahead while you ride so that you can quickly stop at any time. The brake can get hot with prolonged use. Avoid skin contact.
- The brake pad becomes hot when it is used. Make sure that your child does not keep the brake on for a long period of time. Explain to your child that direct skin contact may cause burns.
- The scooter must not be used on wet, oil, sandy, icy, rough or uneven surfaces. Never use the scooter in wet conditions.
- Kerbstones and cobblestone pavements affect your balance. It is better to get off. Even lowered kerbstones can knock you off balance.
- Watch out for longitudinal and transverse grooves in the asphalt! The narrow wheels may get stuck in tram rails and manhole covers, for example and lock up.
- Some metal parts may corrode after a certain time, especially when used near the sea or left outdoors too often.
- The scooter may not be used on public roads. When boarding on pedestrian walking areas, keep to the correct side according to the rules of the road as much as possible. Watch out for Pedestrians, Wheelchair users, Cyclists, Rollerblade and Animals. Always observe traffic rules and regulations.
- Load capacity is up to 60 kg body weight for the scooter.

- **HUFS88B / HUFSP98:** Ages 5-12 Years **HUKS86B / HUKS93R:** Ages 1-5 Years
- Always take care not to risk injuring fingers when folding and unfolding scooter.
- Explain to your child the risks of using the scooter as how to use it. Supervise your child while they are using the scooter. **HAVE FUN WITH YOUR NEW SCOOTER!**

PLAY INSTRUCTIONS

Hold on to the ends of the T-Bar or Ring Bar with your hand. You steer the board through the slightest of weight displacements. To get under way, you stand with one leg (the foot approx at 45° angle to the direction of travel) on the board and push yourself off using the other leg. If you stand with your right leg on the board, you can use left leg to accelerate. If you stand with your left leg on the board, you can use right leg to accelerate. After gaining momentum you stand with your legs apart on the board, so that both feet are approx at 45° angle to the direction of travel. **Enjoy your scooter!**

ASSEMBLY INSTRUCTIONS

Free assembly. Unfold your scooter and check your scooter carefully that all screws are tight and the wheels are OK, the scooter is now-ready for use.

BRAKE

The brake is a friction brake and only designed for reduction of speed on flat surfaces -avoid going downhill. Brake at low speed by gently pushing your foot, resting far back on the board, against the back wheel plate. You need to push harder if you are traveling faster. Be careful however: if you push the brake too hard and slow down too abruptly, you may risk of falling. It is best to practice how to use brake at walking speed.



Attention: The brake and protection plate can get very hot.

HUFS88B / HUFSP98: Ages 5-12 Years



HUKS86B / HUKS93R: Ages 1-5 Years





Fold and unfold (Uninstalled sliding sleeve)



Unfold: Put long Allen key into the hole of the Steering rod and location pin. Pull long Allen key upward to unfold the scooter, the flow is shown in Figure A and B, unfolded Scooter as shown in Figure C.



Fold: Put long Allen key into the hole of the Steering rod and location pin. Pull long Allen key upward to fold the scooter, the flow is shown in Figure D and E, folded Scooter as shown in Figure F.

Seat and drawer installation (Method 1) RECOMMENDED



Put seat housing into the steering rod.



Insert the front covering into seat housing.




Use the Allen key to fix firmly with the screw.



Done as image shown

Seat and drawer installation (Method 2-1)

 Remove and install collar clamp and T-Bar

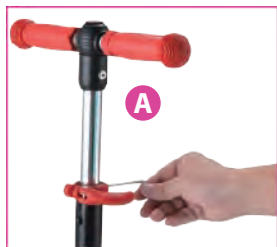

Open the lever of the collar clamp and use the Allen key to loosen the screw, as shown in Figure A



 
Loosen the screw with Allen key, as shown in Figure B.



Press the button and pull up the T-Bar.



Remove the collar clamp.

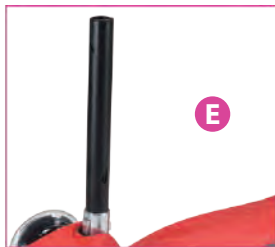

Finish as shown in Figure B



If installing T-bar and collar clamp, go back from E to A

Seat and drawer installation (Method 2-2)



Insert the front covering into seat housing and use the Allen key to fix firmly with the screw.



Put the complete Seat into Steering Rod.



Done as image shown



Press down the seat, finish as shown in Figure above.



Put the drawer into the seat



Put T-bar into the Steering Rod and Fix the collar clamp, Finish as image shown

Sliding Sleeve Installation



Put the sliding sleeve into Steering rod.



Tighten the screws with the Allen key

Put T-bar into the Steering Rod and Fix the collar clamp. Finish as image shown. →



Seat and drawer installation (Method 1) RECOMMENDED



Unfold: Pull sliding sleeve upward to unfold the scooter, as shown in Figure A and B, complete unfolding Scooter as shown in Figure C.

 


Fold: Pull sliding sleeve upward to fold the scooter, as shown in Figure D and E, complete folding scooter as shown in Figure F.

MAINTENANCE INSTRUCTIONS


Change Deck

1. Loosen the 6 screws (A) as shown on the picture (arrows).
2. Remove deck and tighten the screw (A).
3. Check for tight fit after you have traveled about 5km with the new board.

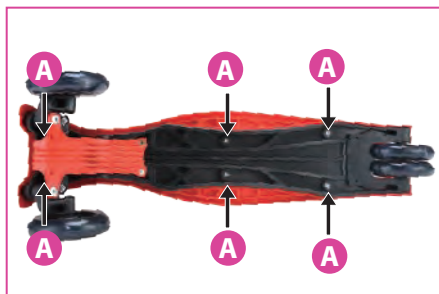


Change Brake

 1. Firstly Loosen the 6 screws(A) , please refer to the changing deck.
2. Remove deck and loosen the screws on the brake (B).
3. Replace the brake and work back from 2 to 1.

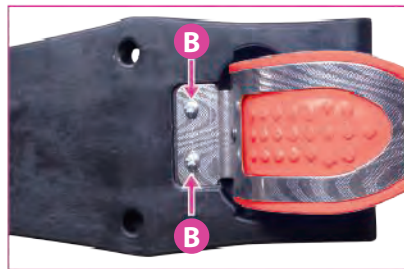


Change Steering Spring

 1. Loosen the 4 screws (C) as image shown (arrows).
2. Remove low mudguard and loosen the screws on the steering spring(D).
3. Pull the spring upwards and remove it.
4. Tighten the screws (C) and (D) until it's completely fixed.

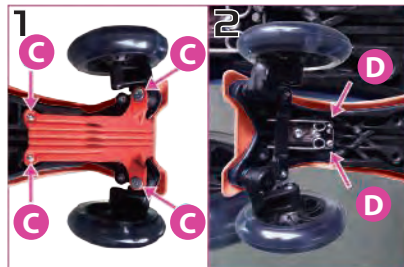

Remove or Change Collar Clamp

 1. Loosen the 2 screws (E) and (F) as image shown (arrows).
2. Pull the collar clamp upwards and remove it.
3. Tighten the screws (E) and (F).

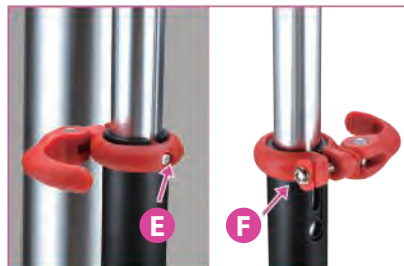

Remove or Change Sliding Sleeve

1. Firstly Pull the collar clamp upwards and remove it.
2. Loosen the 2 screws (G)as shown on the picture (arrows).
3. Pull the sliding sleeve upwards and remove or replace it.



SAFETY TIPS

The scooter is a new fun piece of product which is safe when used carefully and correctly. However, as with any sporting product, a small risk cannot be excluded and we recommend that you protect hand joints, elbows and knees from bumps and grazes. A helmet will also contribute to your safety. To ensure you do not slip it is best if you wear shoes with a rough sole. You should always adjust your speed according to your ability and the conditions and when in doubt, dismount if there is a risk of unseen traffic.

WARRANTY ITEMS

Three months warranty covering defects in material and workmanship is provided for the scooter starting from the date of purchase. During the warranty period, we will inspect and decide that the problem has been caused by a defect in material or workmanship, your scooter will either be repaired or replaced with an identical or equivalent scooter. If you need repair or replace, please directly contact your local seller or distributor.

The warranty shall not include damage caused by:

1. This warranty only applies to initial purchasers.
2. Improper attempts at repair or modifications the scooter.
3. External influences (eg. impact against curb stones, rails, obstacles on road, etc.)
4. Improper usage, usage for purposes other than those intended, negligent handling or normal wear and tear.

No person, seller, distributor shall be allowed to modify or to supplement the terms and conditions of this limited warranty.

HUFS88B / HUFSP98

ScotKid 4-Wheel Kids Scooter

Child & Toddler Toy Scooter with Built-in LED Wheel Lights,
Portable Folding Style (Ages 5-12 Years)

Features:

- Mini Kick Scooter Fun
- 4-Wheel Tricycle 'Trike' Style
- Stand & Cruise Kick Scooter Design
- Lightweight, Compact & Portable
- Multi-Color LED Wheel Lights Illuminate When Rolling
- Convenient Folding Design for Portability
- Long Lasting, Super Smooth Gliding Wheels
- Easy Maneuvering Lean-to-Steer Technology
- Adjustable T-Bar Handlebar Height
- Multi-Wheeled Scooter Stability
- Lab Tested & Safety Certified
- Indoor/Outdoor Use
- Suitable for Ages Up to 12 Years
- Fun for Kids: Small Children & Young Toddlers



Technical Specs:

- Handlebar Height Setting: 24.8" - 32.3" -inches
- Wheel Size Diameter: 120mm Front, 80mm Rear
- Construction Material: Aluminum Metal, Engineered ABS
- Wheel Type / Wheel Material: Engineered Polyurethane
- Recommended Age: 5 - 12 Years
- Weight Capacity: Up to 132 lbs. Max

HUKS86B / HUKS93R

ScotKid3-Wheel Kids Scooter

Child & Toddler Toy Scooter with Built-in LED Wheel Lights, Storage Box Comfort Seat, Adult Push-Bar Handle (Ages 1-5 Years)

Features:

- Mini Kick Scooter Fun
- 3-Wheel Tricycle 'Trike' Style
- Sit & Cruise Kick Scooter Design
- Lightweight, Compact & Portable
- Convenient Storage Box Child Comfort Seat
- Unique Foot Rest & Seat for Cruising
- Removable Adult Push-Bar Safety Handle
- Multi-Color LED Wheel Lights Illuminate When Rolling
- Adjustable T-Bar Handlebar Height
- Multi-Wheeled Scooter Stability
- Folding Design for Portability After Removing Storage Seat
- Long Lasting, Super Smooth Gliding Wheels
- Easy Maneuvering Lean-to-Steer Technology
- Lab Tested & Safety Certified
- Indoor/Outdoor Use
- Suitable for Ages Up to 5 Years
- Fun for Kids: Small Children & Young Toddlers



What's in the Box:

- Kids Scooter
- Removable Storage Seat
- Safety Push-Bar Handle

Technical Specs:

- Handlebar Height Setting: 20.9" - 24.8" -inches
- Wheel Size Diameter: 120mm Front, 80mm Rear
- Construction Material: Aluminum Metal, Engineered ABS
- Wheel Type / Wheel Material: Engineered Polyurethane
- Recommended Age: 1 - 5 Years
- Weight Capacity: Up to 110 lbs. Max
- Total Open Scooter Size (L x W x H): 21.7" x 9.1" x 24.8" -inches (without Push Bar)
- Total Folded Scooter Size (L x W x H): 21.7" x 9.1" x 11.8" -inches (without Push Bar)



Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com