

JOVIAL

JOVGFST89

Foldable 3-Wheel Golf Push Cart

New Deluxe Scorecard Holder, Upper & Lower Brackets with Strap



WARNING:

- For your own safety, please read and understand these warnings and keep this user guide for future reference.
- Always make sure the cart is fully extended and locked before use. Always make sure the cart is folded and locked properly before lifting or transporting.
- Do not run while using this product.
- Do not use accessories other than those designed for use with your cart.
- Keep all packing materials away from children and recycle where possible or where required by law.

MAINTENANCE

- To clean the trolley, wipe with a soft, dry cloth.
- Car polish may be used to maintain finish.
- Lubricate moving parts every 6 months.


WARNING:


- Keep hands and fingers away from moving or sliding parts!
- Always keep control of the Golf Push Cart Do not let it run down hills without full control.




PARTS LIST

- Α Foam handle
- В Umbrella holder base
- C Scorecard holder
- Handle tube D
- Ε Upper joint
- Upper bag bracket
- G Seat
- Н Upper frame
- Lower frame
- Left wheel mechanism lock
- Right wheel mechanism lock J1
- Footbrake K
- Lower bag bracket
- Front wheel M
- Ν Fixing strap
- 0 Umbrella holder storage rack
- Rear wheel Ρ

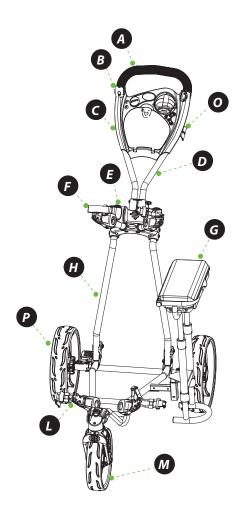


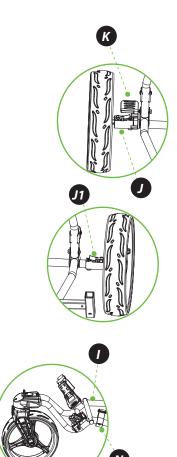


ASSEMBLY INSTRUCTIONS

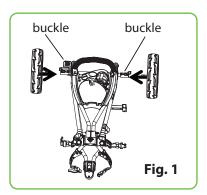


Assembly rear wheel sets insert the wheel holes then press the buckle towards down as Fig. 1.

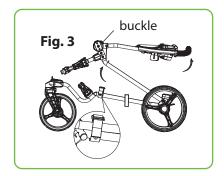

Open the fixing strap and buckle to unfold the cart as Fig. 3.

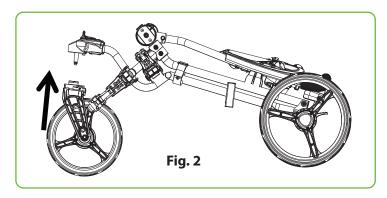

Assemble the front wheel set as Fig. 2.

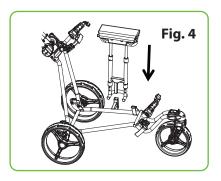


Put the seat on the frame bar as Fig. 4.

FOLDING STEPS




Remove the seat from frame bar as Fig. 5.

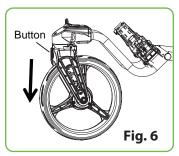

Press the button to take off the front wheel as Fig. 6.




handle per the drawing position as Fig. 7.

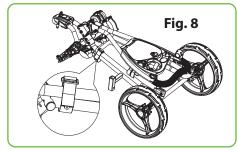


Release the buckle, fold Fix the velcro strap around the upper the upper frame and the and lower frame as shown Fig. 8.

USING THE FOOT BRAKE

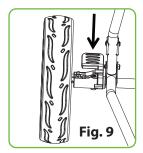


Push down brake pedal to stop the rear wheel and raise up to release the rear wheel as Fig. 9.

SWIVEL FRONT WHEEL INSTRUCTION

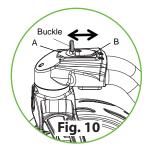




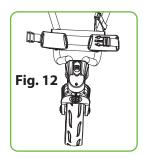



The buckle can move from the front to the back as Fig. 10. The wheel can swivel when the buckle is on the "A" position as Fig.11, and the wheel can go straight line when the buckle is on the "B" position as Fig. 12.

FRONT WHEEL ADJUSTABLE STRAIGHT SYSTEM

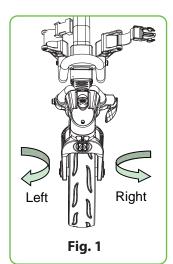



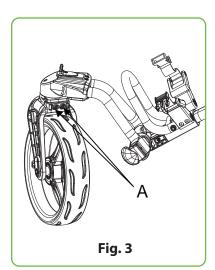

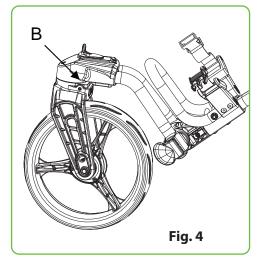

WHEN FACING THE CART

If the cart veers to RIGHT: Use the Allen wrench (as shown in Fig. 2) to lose the 2 screws (A) on the backside of the front wheel frame as shown in Fig. 3. Then adjust the front wheel to center position by turning the screw (B) counterclockwise as in Fig. 4. Tighten the 2 Screws (A) after the front wheel alignment is done.

If the cart veers to LEFT: Use the Allen wrench (as shown in Fig. 2) to lose the 2 screws (A) on the backside of the front wheel frame as shown in Fig. 3. Then adjust the front wheel to center position by turning the screw (B) clockwise as in Fig. 4. Tighten the 2 Screws (A) after the front wheel alignment is done.

FEATURES:


- New Deluxe Scorecard Holder
- Upper and Lower Bracket with Strap
- Foam Handle Grip
- Ergonomic Padded Adjustable Handle
- Includes Scorecard Holder, and Patented Bag Holder
- Simple Quick Braking System
- Durable and Compact Size for Easy Storage and Transportation
- Easy to Fold and Unfold
- Designed for Multiple Pushing Positions

WHAT'S IN THE BOX:

• (1) 3-Wheel Golf Push Cart

TECHNICAL SPECS:

- Construction Material: Steel Frame
- Max. Load Capacity: 33.1 lbs.
- Front Wheel Size: 9.5" -inches
- Rear Wheels Size: 11.5" -inches
- Folded Product Dimension (L x W x H): 23.6" x 38" x 15.2" -inches
- Unfolded Product Dimension (L x W x H): 23.6" x 56.6" x 44.1" -inches

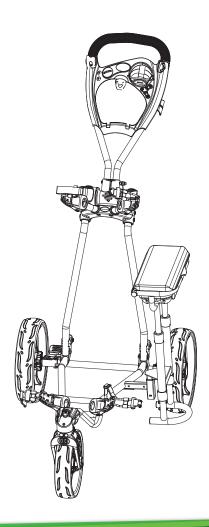

JOVIAL

Questions? Comments? We are here to help!

Phone: (1) 718-535-1800 Email: support@pyleusa.com