



*NCBL12*

Professional Home Kitchen Blender

Digital Countertop Power Pro Blender  
with Pulse Blend

***User Manual***

IMPORTANT SAFEGUARDS AND CAUTIONARY INFORMATION  
SAVE THESE INSTRUCTIONS  
**FOR YOUR SAFETY, CAREFULLY READ ALL INSTRUCTIONS  
BEFORE OPERATING YOUR NUTRICHEF NCBL12.**  
For household use only!

**IMPORTANT SAFEGUARDS**

When using any electrical appliance, basic safety precautions should always be observed, including the following:

- **READ ALL INSTRUCTIONS BEFORE OPERATING YOUR BLENDER.**
- To protect against risk of electrical shock do not put cord, plug, or base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- **Avoid contacting moving parts.**
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, electrical repair, mechanical repair, or adjustment.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- Do not blend hot liquids.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surface including stove.
- Keep hands and utensils away from moving blades while processing food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but must be used only when the food chopper is not running.
- **Blades are sharp.** Handle carefully.
- This appliance is intended for processing small quantities of food for immediate consumption. This appliance is not intended to prepare large quantities of food at one time.
- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Be certain cover is securely locked in place before operating appliance.
- Do not attempt to defeat the cover interlock mechanism.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.  
Do not modify the plug in any way.

### **⚠ CAUTION:**

#### **To reduce the risk of personal injury and/or product/property damage:**

- This product is intended solely for indoor, non-commercial, non-industrial use in processing liquids and foods for human consumption; do not use the product outdoors or for any other purpose.
- Always operate the product with the Blade Assembly in place.
- Do not attempt to place the Jar on the Base or remove the Jar from the base while the motor is running.
- To disconnect the product from an electrical outlet, pull directly on the plug; do not pull on the Power Cord.
- Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
- If using an extension cord with this product, the marked electrical rating of the cord set must be at least as great as the electrical rating of the product.
- Always operate the product on a flat, level, stable surface.
- Do not allow the Power Cord to hang, such as over the edge of a table or counter, where it may be tripped over or pulled.

### **SAFETY WARNINGS:**

**Whenever used, the following terms identify safety and property damage messages and designate a level of hazard seriousness.**

- ⚠ This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

**DANGER:** Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

**WARNING:** Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

**CAUTION:** Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury.

**NOTICE:** Addresses practices not related to personal injury, such as product and/or property damage.

## PRODUCT CONFIGURATION:



1200W  
Power base



Extractor  
Blade



Stay-fresh  
Resealable  
Lids



Lip Ring



32oz  
colossal cup



Short Cup



Flip Top Lid

## TO USE:

### NOTICE:

- 32oz Colossal Cup is for 700ml max capacity.  
Do not fill the Jar with food or liquids past the capacity level.
- Short Cups are for 300ml max capacity.  
Do not fill the Jar with food or liquids past the capacity level.
- Do not operate the product empty.

## TO ASSEMBLE

### CAUTION:

**Do not plug the product into an electrical outlet until it is fully assembled.**

- *Before using the product for the first time, disassemble and wash as follows:*
  - Remove the Blade Assembly (4) from the Jar (2) by turning the Blade Assembly (4) counterclockwise.

### CAUTION:

Use caution when handling the Blades, as they are extremely sharp.

- Wash all parts except the Motor Housing (6) and Power Cord (8) in warm, soapy water and then rinse and dry thoroughly.

### NOTICE:

Do not immerse the Motor Housing (5) or Power cord (7) in water or other liquids, and do not place any parts of the product into a dishwasher or extremely hot water. Do not use abrasive cleaners to clean any part of the product.

- Twist the Blade Assembly (4) onto the top of the Jar (2). Securely tighten by turning clockwise.
- Place the Motor Housing (5) on a flat, level, stable surface, and then place the Glass Jar (2) on the Motor Housing (5) and turn clockwise until it is firmly in place.
- Attaching the Lid (1) onto the top of the Jar (2). Securely tighten by turning clockwise.

## **NUTRIBLAST**

1. Ensure the product is unplugged from the electrical outlet.
2. Pour liquid and ingredients into the Jar (Colossal Cups or Short cup), and/or cut all solid ingredients into pieces small enough to fit into the Jar.
3. Twist the Extractor Blade Assembly onto the top of the Jar.  
Securely tighten by turning Clockwise.
4. Plug the product into a standard 120-volt AC electrical outlet.
5. Place the cup with blade assembly onto the Power Base. Press down the cup and twist to lock the motor on. The button on the bottom light green.
6. One minute later, the Power Base stop working. You can see the **NUTRIBLAST** is ready when it looks smooth and creamy.
7. When the Blade has stopped, the Blade Assembly can be removed from the Power Base.

## **MACROBLAST**

1. Ensure the product is unplugged from the electrical outlet.
2. Pour liquid and ingredients into the Jar (Colossal Cups, Tall Cup, Stainless Steel Cup or Short cup), and/or cut all solid ingredients into pieces small enough to fit into the Jar.
3. Twist the Extractor Blade Assembly onto the top of the Jar.  
Securely tighten by turning Clockwise.
4. Plug the product into a standard 120-volt AC electrical outlet.
5. Place the cup with blade assembly onto the Power Base. Press down the cup and twist to lock the motor on. The button lights **green**.
6. Press button within 5 seconds, machine goes into **MACROBLAST** mode and button light turns blue.
7. One minute later, the Power Base stop working.  
You can see the **MACROBLAST** is ready when it looks smooth and creamy.
8. When the Blade has stopped, the Blade Assembly with cup can be removed from the Power Base.

## USER GUIDE:

	Type load	Attachment	Capacity	Operating Time
Blending	Carrots and water	Colossal cup with Cross Blade	280g carrot, 420g water	1min
	Carrots and water	Cup with Cross Blade	220g carrot, 330g water	1min
Grinder	Rice	Colossal cup with Cross Blade	800g	60s
Chopper	Coffee beans	Small cup with Cross Blade	100g Max	60s

## TROUBLESHOOTING:

1. If the product doesn't work, check the power plug if securely inserted into the power outlet and switched on, whether the pitcher is securely locked into position.
2. Do not place hot or boiling ingredients into the blender; allow to cool lower than 60 degrees centigrade before placing into the blender.
3. When using your blender for the first time, you may notice an odor coming from the motor. This is normal and will dissipate with use. Processing for a very long time will overheat the appliance and causes the unusual smell, turn the blender OFF and let it cool for 60 minutes.
4. If the blade or motor should jam while processing, you should pull out the power plug, take out the stem, and reduce the process load.

## CLEANING AND MAINTENANCE

**The appliance must be cleaned immediately after each use. Regular maintenance of your appliance will keep it safe and in proper operational order.**

1. Turn off the appliance when not in use. Always grab by the plug to remove from outlet. Immediately after each use, clean the product as instructed under the **"To Assemble"** section. Use a small brush (not included) to remove particles of food lodged underneath the Blades.
2. If you will not be using the Blender for an extended period of time, please keep the machine in a safe and dry place.
3. You can clean the accessories in water except the motor base.
4. Take off the plug before cleaning the motor base, always use a dry cloth to clean, never flush or dip in water.

### Features:

- Home Kitchen Power Pro Blender System
- Powerful High-Speed Blending Motor
- Sleek, Modern Food Blender Style
- Convenient Lid Covers for Protein-Packed Gym Smoothies-to-Go
- Simple Electric Plug-in Design
- Hassle-Free Button Controls
- Stainless Steel Cutting Blade
- Powerful 360° Cylindrical Impact for Instant Nutrition Extraction
- Reinforced Serrated Blades Blend Ice Easily
- Stain Resistant & Easy-to-Clean
- Large Capacity Easy-Pour Containers
- BPA Free, Food Grade Construction
- Safe for Placement on Any Kitchen Table or Counter
- Perfect for Mixed Drinks, Fresh Juices, Smoothies, Milkshakes & More

### What's in the Box:

- Electric Blender Base
- Short Mug
- (2) Oversize Mugs
- Cross Blade
- Drinking Lid
- Lip Ring
- Solid Lid
- Food Recipe Book

### Technical Specs:

- High-Powered Blender Motor: 1200 Watt
- Blend Speed Settings: Up to 24,000+ RPM
- Blend Cup Capacity: 24 oz. / 10 oz.
- Noise Operating Level: <90dB
- Construction Material: Clear Tritan Blend Container, Engineered ABS + Aluminum Housing
- Power Cable Length: 3' ft.
- Power Supply: 120V
- Total Blender Size (L x W x H): 5.9" x 6.0" x 15.0" -inches



**Questions? Issues?**

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)