

nutrichef



NCDH4S

Premium Food Dehydrator Machine

4 Stainless Steel Trays with Digital Timer
and Temperature Control, 350 Watts

USER MANUAL

Table of Contents

Safety Instruction	2
Getting to Know Your Dehydrator	4
Display	5
Before First Use	6
Using Your Dehydrator	6
Maintenance / Cleaning Method	10
Specifications	11

SAFETY INSTRUCTION

Always follow basic safety precautions when using your dehydrator.

READ ALL INSTRUCTIONS.

GENERAL SAFETY

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
2. **This appliance is intended to be used in household and similar applications such as:**
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
3. This food dehydrator is designed for **DOMESTIC USE ONLY** and is not suitable for commercial use. Do not use it for outdoors.

4. When using the food dehydrator ensures that it is on a flat, level and sturdy surface, ensure no risk that it may fall. Also that it can take the weight of the unit during use.
5. Failure to follow all the instructions listed may result in electric shock, fire or serious personal injury. The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur while the product in use
6. Do not leave the food dehydrator unattended during use.
7. Always keep the food dehydrator out of children as they are unable to recognize the hazards associated with incorrect handling of electrical appliances.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
9. Before plugging the food dehydrator into the mains electrical supply, check that the voltage and power supply comply with the specifications on the food dehydrator's rating label.
10. Make sure that the food dehydrator is switched off and remove the plug from the mains electrical supply when it is not in use; before it is cleaned and whilst it is being repaired.
11. Ensure that the food dehydrator and power cord is not hung over sharp edges and keep away from hot objects and open flames; otherwise the plastic will melt and cause a fire.
12. Under no circumstances should the food dehydrator or plug be immersed in water or any other liquid. Do not use the appliance with wet hands.
13. Check the food dehydrator and power cord regularly for damage.
14. Do not use the food dehydrator should there be damage to the plug or cord, following a malfunction, or after it has been dropped or damaged in any way.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Repairs to the food dehydrator should only be performed by a qualified electrician. Improper repairs may place the user at risk.
17. None of the product's parts are dishwasher safe, unless explicitly specified otherwise.

18. Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug; do not pull on the cord.
19. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
20. Never use an unauthorized attachment.
21. Avoid contact with moving parts. Keep hands, hair, clothing, spatulas and other utensils away during operation to reduce the risk of injury to persons and/or damage to the machine.
22. Please don't turn the draught of engine towards others or tinder.
23. Please don't keep it beside anything heating. Please keep the plug away from pressing; otherwise it will cause a fire or electric shock.
24. If you pass this appliance on to a third party, these operating instructions must also be handed over.

Caution

- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces. Don't keep the device in the watery environment;
- Keep the device away the place of high temperature,ray and wetly.
- Don't operate the device with wet hands.
- Please turn off the power supply in the watery environment.
- In the event where the appliance is dropped into the water, turn off the power at the power outlet and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT.

- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.
- **ATTENTION!** Do not run the appliance for more than 24hours in one single use. After 24 hours. Unplug and let it cool down for at least 2 hours before operating again.
- Do not operate near gas spray cans.

- Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
- The power cord can not be squeezed by something heavy or sharp, otherwise it will cause a fire or electric shock.
- The temperature of accessible surface may be **HIGH** when the appliance is operating.


GETTING TO KNOW YOUR DEHYDRATOR

FEATURE OF DEHYDRATOR


This unit features an automatic fan, which circulates warm air producing a nice evenly dried device! Dried foods are a great treat to snack on because they hold almost all of their nutritional value and flavor.

- Perfect way to preserve fruit, snacks, vegetables, bread, flowers and more.
- With four trays, size of each tray is 235.5X181mm, each tray can't load more than 0.3kgs of food
- If you want to dry thicker food, you can take out one tray to make the height higher between two trays.
- The trays are easy to be cleaned.
- Close the door can dry the food more efficient

Food Dehydrator Diagram

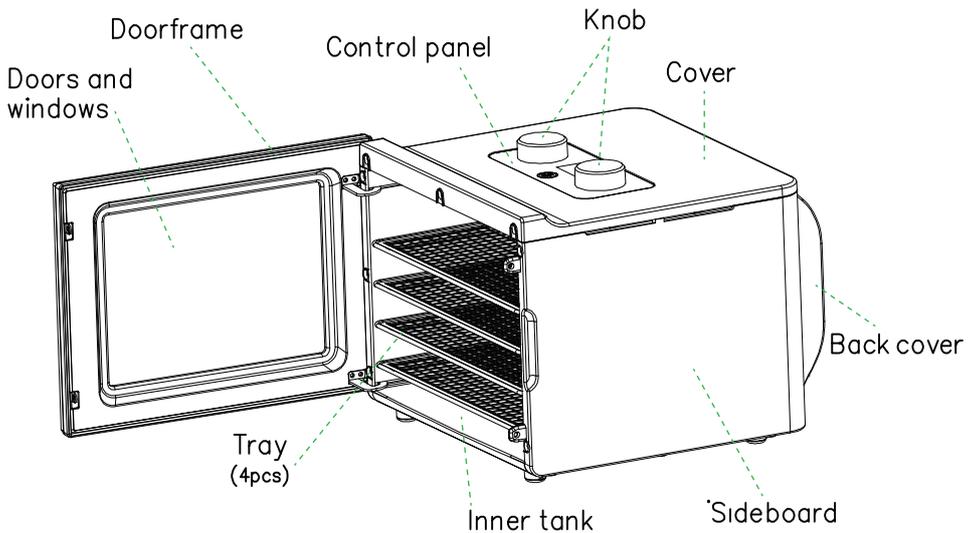

DISPLAY

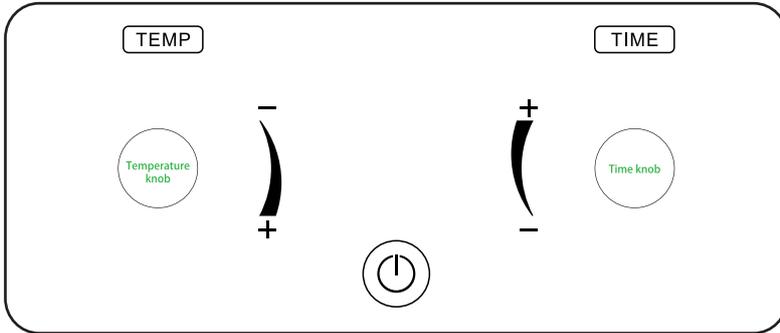

Controls

- Press button to start or stop the dehydrator.
- Turn the left side Temperature knob, to adjust the temperature.
Clockwise is increase (counterclockwise is decrease)
- Turn the right side Time knob, to adjust the time.
Clockwise is increase (counterclockwise is decrease)

BEFORE FIRST USE

CLEANING

1. Before using the first time, wipe all parts of the appliance. Clean the 4 trays, damper door and slag pans with a lightly moistened cloth. Use detergent as needed. Don't will host part of the immersion in water or other liquids!
2. After cleaning the unit must be run for 30 minutes without placing any food for drying during this period. Any smoke or smells produced during this procedure are normal. Please ensure sufficient ventilation. After the running in period, rinse the racks in water and dry all parts. This act is only necessary for the first time. (Don't wash the host part)
3. Unplug the dehydrator from the power supply and let it cool down before cleaning. Use a soft brush to remove food sticking. Dry all parts before storing the dehydrator.
4. Do not clean the appliance with aggressive chemicals or abrasives in order not to damage the surface.


ASSEMBLING THE APPLIANCE

1. Make sure that the dehydrator sits steadily on a solid, level surface. Stock the drying trays and connect the plug with a wall socket. The dehydrator is now ready for use.

USING YOUR DEHYDRATOR

OPERATION

1. **Put the clean food in the trays** – Do not overload the trays and never overlap the food. Close the damper door.
2. **Function buttons as below:**

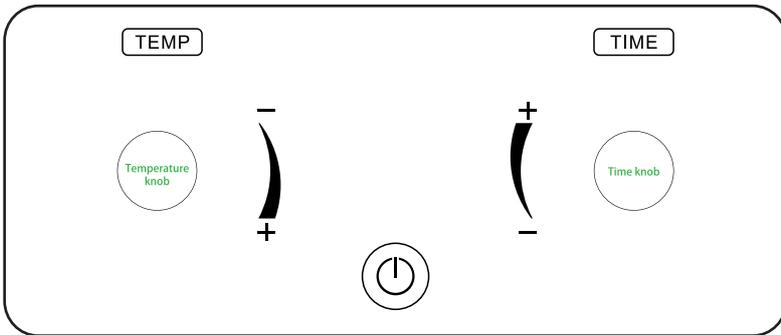

1. Plug dehydrator into wall outlet, the screen light up and there is a beep sound at the beginning when it starts up. After one second, the product enter to the standby mode. Then, the temperament shows "000", the time shows "00", the other icon will be off.
2. Press the "ON/OFF" button, the screen will display the default temperature is 158°F, the default time is 10h and flashing. The Fahrenheit, hour and clock ICONS display on the screen. Press the "ON/OFF" button again to enter the default parameters of working condition, before pressing the "ON/OFF" button, you can adjust the time and temperature. After setting the time and the temperature, press the "ON/OFF" button again, then enter to the working mode. If not press the "ON/OFF" button, the product will exit the system automatically and return to standby mode.
3. **Setting temperature:** Clockwise is increase (counterclockwise is decrease), temperature range is 95-158°F (one gear for every 9°F);

4. **Setting time:** Clockwise is increase (counterclockwise is decrease), time range is 1-24h (one gear for every 1h)

Working mode: When the product is working, (the clock, Fahrenheit and hour icon are on), the screen displays the setting temperature, and the time displays the countdown. When the countdown is less than 1 hour, the time counts down to 60 minutes, the minute indicator is on, and the hour indicator is off.

5. There is a “bee” sound when you press the button every time.
6. During the working mode, press the “ON/OFF” button, the temperature and the time icon are flashing, you can adjust the time and temperature. After the adjustment, press the “ON/OFF” button to confirm. If there is no operation within 5 seconds or did not press the “ON/OFF” button to confirm, the system will automatically enter the previous program (follow pre-adjustment program).
7. After times up, the product will have 20 “bee” sound, and enter to the standby mode.
8. Press the "ON/OFF" button for 3 seconds to turn off the product, enter to the standby mode.

NOTE:

- Set low temperature for thin/small pieces of food or for a small load of food. Set high temperature for drying thick/big pieces of food and large loads. The thermostat can also be used to decrease the temperature as the food is near the end of its drying cycle making it easier to control the final moisture level in the food.
- Make sure that the fan base is always in place when operating the dryer. If you do not have time to dry all the food in one day, you can dry them the next day. In this case, you should store the food in a container/polyethylene bag and put it in the freezer.

3. Unplug the unit from the power point.

Hints

- This dehydrator includes 4 trays and an overheat protection. The host contains heating elements, motor, fan and thermostat.
- The air vents on the tray allow air to be circulated.
- Using a controlled heat temperature, Air from the back flow into each tray drying moisture.
- Depending on the moisture in the food itself and the humidity in the air, drying operation time can change. Use the dryer in a dust free, well ventilated, warm and dry room. Well air ventilation is also important.
- Fruit and vegetables dried in your food dehydrator will be different in appearance from those sold in health food stores and supermarkets. This is due to your food dehydrator uses no preservatives, no artificial coloring and only natural additives.
- Records of humidity, weight of produce before and after drying times, will be helpful to improving your drying techniques for the future.

DRYING TIPS

Drying time for pre-treatment fruit will vary according to the following factors:

1. thickness of pieces or slices
2. number of trays with food being dried
3. volume of food being dried
4. moisture or humidity in your environment
5. your preferences of drying for each type of dried food

It is recommended to:


- Check your food every hour.
- Rotate and/or re-stack your trays if you notice uneven drying.
- Label food with contents dried, date and weight before drying. It will also be helpful to note the drying time for future reference.
- Pretreated food will give the best effect in drying.
- Correct food storage after drying also will help to keep food in good quality and save the nutrients.

STORAGE

- Store food only after they have cooled down.
- Food can be kept longer if stored in a cool, dry and dark place.
- Remove all the air you possibly can from the storage container and close tightly.
- Optimal storage temperature is 15°C/59°F or lower.
- Never store food directly in a metal container.
- Avoid containers that “**breathe**” or have a weak seal.
- Check the contents of your dried food for moisture during the weeks following dehydration. If there is moisture inside, you should dehydrate the contents for a longer time to avoid spoiling.
- For best quality, dried fruit, vegetables, herbs, nuts, bread should not be kept for more than 1 year, if kept in the refrigerator or freezer.
- Dried meats, poultry and fish should be stored for no more than 3 months if kept in the refrigerator, or 1 year if kept in the freezer.

MAINTENANCE/CLEANING METHOD

After using, unplug the dehydrator from the power supply and let it cool down before cleaning. Use a soft brush to remove food sticking on the trays. Dry all parts with a dry cloth before storing the dehydrator. Clean the surface of body with wet cloth. Use paper towels to remove any excess marinade. Do not clean the appliance with aggressive chemicals or abrasives in order not to damage the surface.

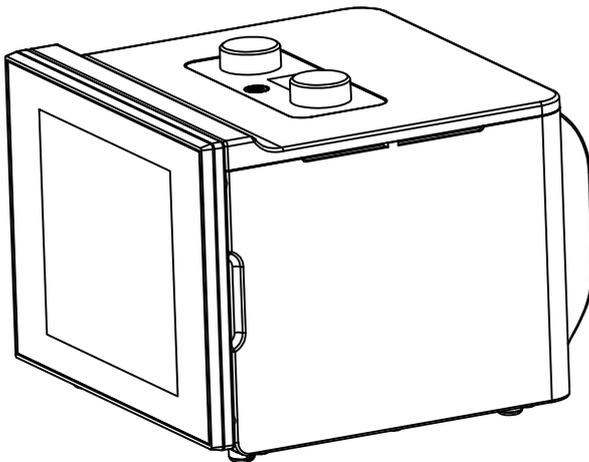

Features:

- Food-grade ABS and Glass Front Door
- 4-layer Living Drawer
- Electronic Probe and Timing Temperature Control
- 360° Hot Air Circulation
- Switch Door Magnetic Induction
- Built-in Rear-mounted Motor and Internal Fan
- Circulates Warm Air
- Easy to Store and Clean
- Safe and Quiet to Use
- Double knob control LED display
- Dishwasher Safe
- Automatic Shutoff
- Memory Function
- Includes Overheat Protection
- Included Mesh Screen & Fruit Roll Sheet
- Free Recipe Book with 50 Original Recipes
- Adjustable Time and Temperature
- Perfect Way to Preserve Fruit, Snacks, Vegetables, Bread, Flowers and more

What's in the Box:

- (1) PP Food Dehydrator
- (4) Stainless Steel Trays

Technical Specs:

- Construction Material: PP
- Power Supply: AC 120V, 60Hz
- Power Output: 350W
- Time Range: 1 - 24 hrs.
- Temperature Range: 95°F–158°F (35°C–70°C)
- Product Dimension: 11.81" x 10.04" x 8.27" -inches



Questions? Issues?
We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com