



nutrichef



NCEGB50

Household Smokeless Detachable Electric Bamboo Grill

Double U-shaped Heating Tube Electric Grill,
Non-stick Cooking Surface
and Adjustable Temperature Knob

USER GUIDE






Please read this instruction manual carefully to use this appliance safely and to obtain the best results.

Connections to Main Supply

Make sure the supply voltage in your home is the same as the voltage marked on the rating plate of the appliance.

General Safety Instructions

1. Children are not aware of the dangers of electrical appliances. Never leave the appliance unattended during use. Therefore always keep the appliance outside the reach of children.
2. The appliance is only suitable for household use.
Never use the appliance outdoors.
3. Certain parts of the appliance may become hot during use.
Refrain from touching these areas so as not to burn yourself.
4. Make sure that the appliance and the power cable never come into contact with hot devices such as hotplate or naked flames.
5. Do not allow the power cable to hang down over the edge of the sink, worktop or table.
6. Make sure your hands are dry when you touch the appliance, the power cable or the plug.
7. Never submerge the appliance in water or another liquid.
8. The appliance needs to dissipate its heat in order to prevent fire. Therefore it is vital to make sure that the appliance has sufficient clearance on all sides and cannot come into contact with flammable materials. The appliance may not be covered up.
9. Do not use the appliance near explosives or flammable materials.
10. Do not use a metal scouring pad to clean the appliance. Fragments of metal could come loose and touch the appliance's electrical parts causing it to short circuit.
11. **Always switch the appliance OFF if:**
 - It malfunctions while you are using it.
 - Before you start maintenance.
 - You fit or remove accessories.
 - You unplug the appliance.
 - You have finished using the appliance.

- 
12. Only use an extension cord that is in good condition.
 13. Never switch the appliance off by pulling the cable.
 14. Always engage a recognised, trained service engineer if the appliance or the cable is damaged, malfunctions have occurred and/or the appliance requires repairs.
 15. Carrying out your own or having inexpert repairs carried out can cause considerable danger for the user.
 16. We accept no liability for damage caused by incorrect usage or the ignoring of the regulations in this manual.
 17. Use that does not comply with the manual is not covered by the responsibility and the warranty of the manufacturer.
 18. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
 19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 20. Children should be supervised to ensure that they do not play with the appliance.
 21. The surfaces are liable to get hot during use.
 22. Appliances are not intended to be operated by means of an external timer or separate remote-control system
 23. The temperature of accessible surfaces may be high when the appliance is operating.
 24. The temperature of accessible surfaces may be high when the appliance is operating.
 25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
Keep the appliance and its cord out of reach of children less than 8 years.

26. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

27. **WARNING:** This appliance includes a heating function. Surfaces, other than the functional surfaces may develop high temperatures. Since temperatures are perceived differently by different people, this device should be used with **CAUTION**. Hold the appliance exclusively to grip surfaces intended to hold and use such heat protection measures as heat protection Gloves or pot holders. Areas which are not intended to grips must be given sufficient time to cool.

28. When cooking, **DO NOT PLACE** the appliance against a wall or other appliances.

Note: *If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similar qualified person in order to avoid a hazard.*

Product Image





Before First Use

1. Before using for the first time, operate the appliance for 10 minutes without any food. This in order to remove the “new” scent. A small amount of smoke may also be noticeable. Ventilate the room during this period.
2. Let the grill plate cool down en clean them (see chapter clean & care).

Operation

Grilling

1. Connect the appliance to the mains socket.
2. Grease the grill plate slightly with butter.
3. Cut the meat into little pieces in order to minimize the preparation time.
4. Spice the food.
5. Preparation time depends on the sort and thickness of the food.
For a good result we advise to turn the food several times during grilling.
6. Never us hard or sharp objects on the non-stick baking surface.
The surface can be damaged easily by scratching.

Clean & Care

- Before cleaning the appliance, always make sure that the plug has been removed from the supply socket.
- Allow the appliance to cool down before cleaning.
- The grill pan and the mini pans can be washed in hot soapy water.
Rinse and dry thoroughly.
Never use hard or sharp objects on the non-stick baking surface.
The surface can be damaged easily by scratching.
- You can clean the exterior with a damp cloth and dry afterwards.
Never immerse the appliance in water.
Do not use abrasive cleaners, these can cause damage to the material.

Warranty

The importer will give, under the following conditions, 12 months warranty from the date of purchase on this appliance, against defects, which have been caused by fabric- and/or material faults.

1. In the warranty period, as mentioned above, no costs will be charged for wages and material costs. Repairs, which are carried out under warranty, will not extend the warranty period.
2. Defect appliances or parts will automatically become property of the importer.
3. Every claim for warranty will have to be accompanied by a proof of purchase.
4. Claims for warranty can only be honoured by the dealer where the appliance has been purchased or by the importer.
5. Warranty is only valid for the first buyer and is not transferable.
6. **Warranty is not valid, for damage caused by:**
 - a. Accidents, misuse, wear and tear or neglect.
 - b. Wrongful installation, and/or use in a way contrary to the holding laws, technical standards or safety standards.
 - c. Connection to another voltage than indicated on the rating plate.
 - d. Unauthorised modifications.
 - e. Unauthorised repairs.
 - f. Improper packaging of the returned goods.
7. **Claims cannot be made in case of:**
 - a. Losses during transport.
 - b. Removal or modification of the rating plate.
8. Excluded from warranty are electrical cords, lamps and glass parts.
9. This warranty does not give a right to claim damages other than replacement or repair of defective parts. The importer can never be held responsible for damages or any other inconveniences caused by appliances, which are delivered by him.
10. Costs of transportation, packaging and freight insurance are always for the buyer's own account.
11. This appliance is not suitable for professional use.

Service Centre



If the product doesn't function properly, please contact your dealer or an authorised service centre.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Features:

- 2-in-1 Healthy Aluminum Non-stick Grill and Griddle
- Dishwasher Safe
- Detachable for Fast and Easy Clean Up
- Smokeless Grill
- Reversible Cooking Plate
- Environmentally Friendly Food Grade Construction
- 100% Natural Bamboo Wood Tray
- Removable Plug with Thermostat Control Knob
- Steel Oil Tray
- Ideal for Grilling like Steaks, Burgers, Vegetables, and Fish

What's in the Box:

- Electric Bamboo Grill
- Bamboo Tongs

Technical Specs:

- Construction Materials: Die Casting Aluminum
- Functions: Dismountable Oil Collector, Non-stick Cooking Surface, and Adjustable Temperature Knob
- Power Output: 120V
- Power Supply: 1800W
- Coating: Non-Stick
- Product Dimensions: 23.30" x 11.70" x 2.95" -inches



Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com