

NCHDMK2

Electric Hot Dog Machine

Hot Dog Steamer and Bun Warmer

nutr^{ic}hef

USER MANUAL

To use this hot dog machine properly and safely, please read the following instructions carefully.

1. Always operate **NCHDMK2** from an earthed domestic 220-240V 50Hz power socket.
2. Close supervision is necessary when any appliance is used by or near children. Never operate this appliance unattended.
3. Do not use a damaged power plug, power cord or loose power outlet in order to avoid electric risk.
4. **DO NOT PUT** the cord under the carpet, blankets. Always keep the power cable away from walkway in room.
5. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another.
6. Ensure the hot dog machine is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the appliance.
7. **DO NOT OPERATE** this machine near water sources or flammable liquids
8. **DO NOT OPEARTE** this machine on or near any hot surface
9. To prevent the risk of electric shock, do not put the machine or power cord and plug into the water or any liquids.
10. Use of an extension cord is not recommended as it may overheat and cause risk of fire.
11. When you have finished using the machine, turn the switch to “**MIN**” position and unplug it from the socket. Wait until the appliance is completely cool down before moving or cleaning.
12. Make sure the plug connects with the power socket in good condition, if it is need to change. All repair works must be made by a professional (authorized distributor). **NEVER TRY TO REPAIR** the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center
13. This hot god machine only suite for indoor use.
14. When using the hot dog machine, do not put the food into the water plate directly, it must placed into the basket.
15. The water plate must put into water when using this hot dog machine.
16. The appliance surfaces are liable to get hot during use.



PREPARATION BEFORE USE

1. Check that the voltage marked on the product corresponds with your supply voltage. Ensure the controller is in “**OFF**” position before plugging in.
2. Do not use it on damp or wet surface or near water.
3. When using this hot plate for the first time, there may be a smell of smoke coming from the surface of the heating element. This is normal because of the invisible protective coating in production.

Operation

1. Put the hot dog machine on a balance surface, put the water into the water plate, and the water should not exceed 80% of the water plate.
2. Fix the glass cylinder on the water plate and put the food into basket, then put the basket into the glass cylinders carefully then put on the cover.
3. Connect to the power supply socket. Turn the switch from “**MIN**” to “**MAX**” position and the indicator light is on for working, the hot dog machine is in a state of heating.
4. After using the **NCHDMK2**, turn the switch to “**MIN**” position and unplug it from the socket.

WARNING

1. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
4. The temperature of accessible surface may be high when the appliance is operating.

MAINTENANCE & CARE

1. Make sure the plug is removed from the power supply socket. After the hot dog machine set is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.

PLEASED DO NOT CLEAN THE SET WHEN IT IS STILL HOT.

2. **DO NOT USE** hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose
3. Except the removable water plate, basket, glass cylinder, do not immerse the main body in water to clean.

NCHDMK2

Electric Hot Dog Machine

Hot Dog Steamer and Bun Warmer

Features:

- Professional Hot Dog Steamer
- Used For Both Cooking and Keeping Warm
- Low Power Consumption
- Easy to Clean
- Integrated Tank Divider to Separate Heating and Cooked Product
- Stainless steel cover with plastic handle
- Glass cylinder
- Stainless steel wire cage and rack
- Stainless steel water tray
- 2 aluminum bars for warming up buns or bread
- Heating Temperature Control via a Thermostat Knob
- Power On/Off Switch
- Stainless Steel Cooking Hot Plate-Base

Technical Specs:

- Material: Stainless Steel; Glass Cylinder
- Power Consumption: 120V - 50Hz, 420W
- Capacity: Up to 8 Hot Dogs At A Time
- Water Tray Temperature Range: 73.4-208.4°F (923-98°C)
- Aluminum Hot Plate-Base Temperature Range: 248-338°F (120-170°C)
- Product Dimension (L x W x H): 14.65" x 13.23" x 13.88" - inches

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com



nutrichef