

FRONT



BACK

nutriChef

- Wash item with warm water and dry thoroughly before first use.
- For best cooking results, we recommend greasing the non-stick surface prior to cooking.
- **Do not use sharp or metal utensils on the non-stick surface.**
- In order to avoid scratching glass / ceramic hobs, raise the product upwards when moving it, do not slide it.
- **Always match the hob diameter to that of the pot/pan. Using a pot/pan base that has a larger or smaller diameter than the cooking zone may result in a weaker magnetic field and a reduced heat output. In extreme cases, the hob may not recognize the pot/pan and no heat will be generated.**
- Do not overheat the pot/pan.

- Allow the pot/pan to cool down before washing; immersing in cold water may cause warping and damage the non-stick surface.
- **Do not use harsh detergents, metallic brushes or scouring pads whilst cleaning.**
- Hand-wash with liquid detergent and a soft sponge, to help maintain product performance and appearance.

Questions/Concerns: jb@pyleusa.com

