



PBKSR40WT


Desktop Wireless BT Bookshelf Speakers

HiFi Studio Monitor Computer Desk Stereo Speaker System, Connections and Studio Quality Sound, (80Watt MAX)





Please read all instructions before use for the best performance of this product. Save these instructions for future reference.

Box Contents

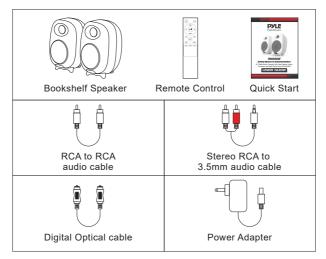

LED Indicators and Button Introduction

 

 

Active Speaker



Passive Speaker

Know Your Remote

́ъл.

(FOVE) (FEEE) (FEEE

01. Power switch 02. Input selection Press in to navigate between audio sources: BT -> Optical -> Coaxial -> LINE IN 03. Sound effects

Press in to navigate between audio sources: Music -> Dialogue -> Movie

04. Volume control

05. Treble control


06. Coaxial input port

- 07. Bass control
- 08. Power port
- 09. Line in input port
- 10. Optical input port
- 11. Left speaker audio output
- 12. Left speaker audio in

(b)	Power button	MUTE	Mute/Unmute
(VOL+)	Volume up	(VOL-)	Volume down
\bigcirc	Previous track	\bigcirc	Next track
()	Play/pause	BT	Bluetooth mode
OPT	Optical mode	INPUT	Input mode
LINE	Line mode	COAX	Coaxial mode
MOVIE	Movie mode	MUSIC	Music mode
DIALOG	Dialogue mode		


www.PyleUSA.com 3

Connection Diagram

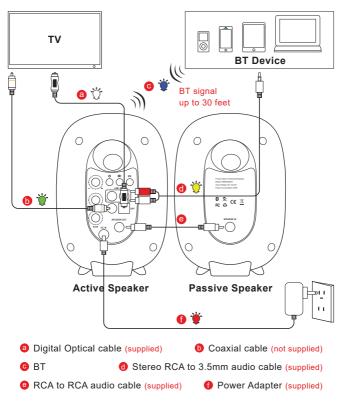

Connecting with a TV

Active Speaker

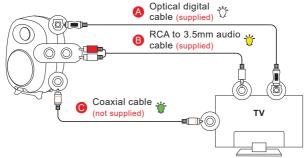

- Method 1. Connecting using an Optical cable. Select Optical mode and set the TV's audio output to "PCM". (More information on PCM page)
- **B** Method 2. Connecting using a RCA to 3.5mm cable. Select RCA mode.
- Method 3. Connecting using an Coaxial cable.
 Select Coaxial mode and set the TV's audio output to "PCM".
 (More information on PCM page)

Setting "PCM" on your TV

When all cables are connected properly, and LED indicator lights properly, if there is no sound from tv or Soundbar, please set your tv as below:

- 1. Press "Menu" on the TV's remote control.
- 2. Press the arrow keys on the remote to scroll to "Audio Settings."
- 3. Press "OK" on the remote control.
- Scroll to "Advanced Audio" and press "OK". Some televisions may not have an"Advanced Audio" menu and may list various audio settings instead.
- Scroll to "Audio Output Mode" or "Digital Audio Output Mode" and press "OK".
- 6. Scroll until "PCM" is displayed as the current audio output.
- 7. Press "OK" to save the settings.

Connecting a Wireless BT Device



- a. Press the "BT" button on the remote or press the "-⊇" button on back panel of the active speaker, the LED indicator blinks blue.
- **b.** Turn on Wireless BT on the BT device.
- c. Select "PyleUSA" and connect it. When your BT device is connected, the LED indicator blinks blue slowly.
- **d.** Play music files from the device, connected via BT, through the bookshelf speaker.

Troubleshooting No sound

- Check if the power indicator light is ON.
- Try to turn up the volume using either the master volume control or remote control.
- Ensure the audio cables are firmly connected and the input is set correctly on the speakers.
- Check if there is signal output from the audio source.

Cannot connect via Wireless BT

- Make sure the speaker is switched to BT input, in other audio input mode BT can not be paired or connected. Disconnect from any BT device by press and hold the volume dial in BT mode, then try again.
- Effective BT transmission range is 10 meters, make sure operation is within the range.
- Try another BT device for connection.

The PBKSR40WT Bookshelf Speaker does not turn on

Check if mains power is connected or if the wall outlet is switched on.

Specifications

Power output:	L/R: 40W + 40W	
Signal to noise ratio dB(A):	L/R: ≥80dB (A)	
Input sensitivity:	LINE IN: R/L: 600±50mV	
input sensitivity.	OPT: R/L: 500±50mFFS	
Frequency response:	40HZ-20KHZ	
Bass unit:	4 inch (102mm)	
Tweeter unit:	1 inch (25.4mm)	



Questions? Comments? We are here to help! Phone: (1) 718-535-1800 Email: support@pyleusa.com