

PYLE

PyleUSA.com



PBMSPG144

Wireless BT Portable Speaker Radio System


USER MANUAL

Please take the time to read this manual carefully before you begin using your new device. Any content revision of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

FEATURES:

- Compact Boom Box Stereo Style
- Portable Travel-Friendly Speaker Design
- Digital Streaming FM Radio
- Built-in Rechargeable Battery
- MP3 Digital Audio File Playback
- Ported Enclosure for Extended Bass
- Full Range Stereo Sound Reproduction
- Rugged & Durable 'Super Tube' Speaker Housing

INSTRUNCTION:

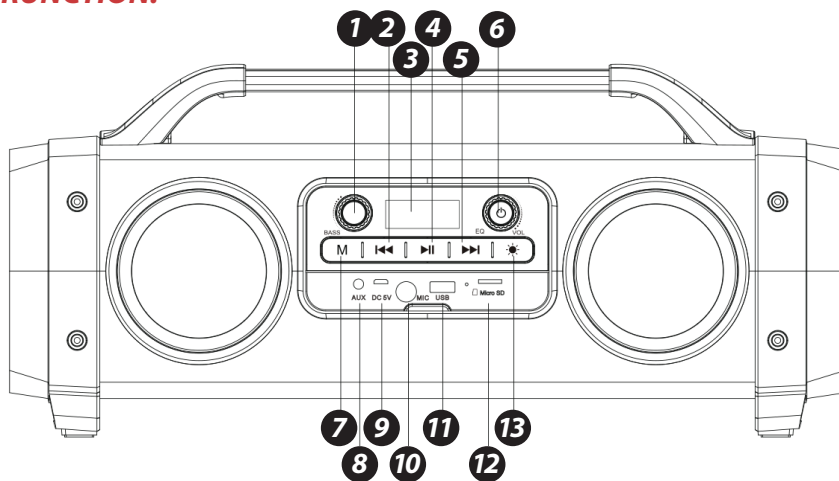

- | | |
|--|------------------------|
| 1. BASS | 8. AUX IN |
| 2. PREVIOUS | 9. DC 5V Charging Port |
| 3. DIGITAL DISPLAY | 10. MIC JACK |
| 4. PLAY/PAUSE | 11. USB PORT |
| 5. NEXT | 12. MICRO SD |
| 6. POWER/VOLUME CONTROL/EQ | 13. RGB |
| 7. MODE (Wireless BT switch, USB disk,
Micro SD, FM and AUX-IN state) | |

RGB light:

RGB will be on when unit is turned on, press RGB button to turn RGB light off and on;

Playing music from USB disk & Micro SD card:

1. Press and hold the power button to "ON".
2. Insert Micro SD card or USB flash disk into slot, the audio files stored will start to play automatically.
3. Short press PREVIOUS or NEXT button on the devices to select songs you like, press and hold to fast backward or forward.
4. Rotate the volume knob to adjust volume down and up.
5. Short press PLAY/PAUSE button to play or pause the music.
6. Short press EQ button to switch between SITE and BASS.
7. Please turn off the unit while without use.

Remark: Under Wireless BT playing mode, insert Micro SD or USB will disconnect the Wireless BT and switch to play USB or Micro SD card. Press the "MODE" button to switch back to Wireless BT mode again.

Wireless BT Streaming:

1. Press and hold the power button to "ON".
2. Activate mobile phone's Wireless BT and search for device name "PyleUSA" then connect it. The unit will beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Short press PREVIOUS or NEXT button on the devices or on your Mobile phones to select songs you like.
5. Rotate the volume knob to adjust volume down and up or adjust the mobile phones' volume.
6. Press PLAY/PAUSE button on the devices or on Mobile phones to play/stop the music.
7. Short press EQ button to switch between SITE and BASS.
8. Please turn off the unit while without use. Songs will play automatically after starting up.

FM Radio:

1. Press and hold the power button to "ON", press the "MODE" button to switch to FM radio state.
2. The audio cable provided can be used as antenna, please insert the audio cable to get the best FM signal before using.
3. Short press "PLAY/PAUSE" button to auto search and store FM Channels;

4. Short press PREVIOUS or NEXT button to switch the stored FM channels.
5. Short press EQ button to switch between SITE and BASS.

AUX-IN:

- Use the supplied audio cable to connect "LINE OUT" of the music players like Phones/MP3/MP4 to the "AUX IN" of this speaker;
- Press the "MODE" button to switch to AUX IN state;
- Short press "PLAY/PAUSE" button to mute, short press again to relieve;
- Short press "EQ" to choose different style you like such as BASS or SITE;

When using an external device, all functions can be controlled by the external device.

Microphone Input:

This product has one Microphone input. Just plug the 6.5MM microphone jack then you can use.

TWS Function:

1. Turn **ON** two identical speakers you want to pair, please note that they must have the same BT pairing name, both under BT mode.
2. Only need to set up one of the two units before pairing with your device.
3. Then press and hold "PLAY/PAUSE" button for around 4 seconds till show "BU" on the digital display and the unit will make "di" voice once successfully paired
4. Then connect your Wireless BT with your phone to play music, one is in left channel while the rest in right channel.

Remark:

1. Press the MODE button to switch for different modes, the order is Wireless BT, USB disk, FM radio and AUX-IN.
2. Turn the power button to "OFF" if not in use.

How to charge:

1. The charger is not included in the accessories. Please use the universal 5V/1A charger to charge this device. Put the provided charging cable into the charging jack, connect the other end to the charger, the charging indicator will keep blinking. (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may can not afford the high current temporarily under the maximum volume)
2. Charge time should be 5 hours. When charging full, the indicator light will switch off.



Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com



WARNING:

This product can expose you to a chemical or group of chemicals, which may include "Cadmium (Cd)" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE