

PYLE
PyleUSA.com

PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?









We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com



PBMSPG82
Portable Wireless BT Speaker
and Microphone Karaoke System
Indoor/Outdoor Wireless PA Stereo
with LED Party Lights, MP3/USB Reader, FM Radio

USER MANUAL

WARNING


-  1. **DO NOT** place objects on top of the device, as objects may scratch the device.
-  2. **DO NOT** expose the device to dirty or dusty environments.
-  3. **DO NOT** insert any foreign objects into the device.
-  4. **DO NOT** expose the device to strong magnetic or electrical field.
-  5. **DO NOT** use the device in the rain.
-  6. Please check with your Local Authority or retailer for proper disposal of electronic products.
-  7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.
-  8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.

Illegal operation may cause personal injury, which could be fatal and may cause damage to property.

Control Board Functions

REMOTE CONTROL

- UNIT STANDBY MODE
- CHOOSE SIGNAL INPUT
- INCREASE MUSIC VOLUME
- NEXT SONG/CHANNEL
- DECREASE MENU VOLUME
- DECREASE MUSIC VOLUME
- INCREASE MENU VOLUME
- MUTE
- REPEAT
- PLAY/PAUSE KEY
- PREVIOUS SONG/CHANNEL
- MENU

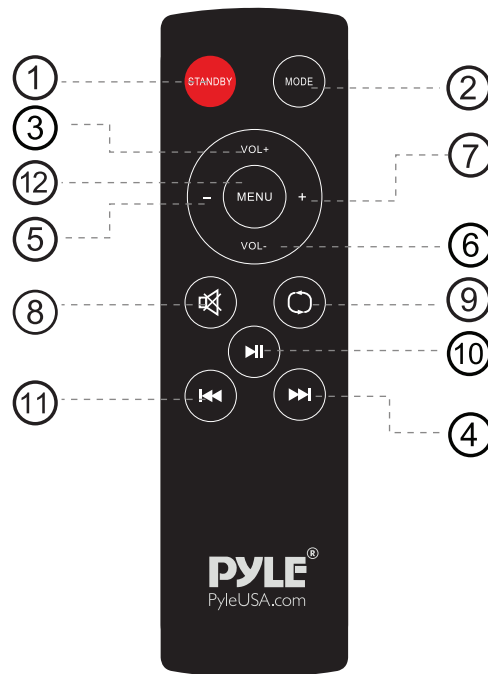

- d(-14---+14) Music "Bass" volume adjustment
- H(-14---+14) Music "Treble" volume adjustment
- N1(00---30) Microphone volume adjustment
- EC (00---10) Microphone echo volume adjustment
- N2(00---30) Guitar volume adjustment
- LED Turn ON/ Turn OFF LED
- U(00---30) Music volume adjustment

TWS FUNCTIONS

For increase sound effect, our unit provides TWS function as follows:


Step-1: Turn ON BT mode on your device and PBMSPG82 .

Step-2: Press and hold one of control board/remote control "▶▶" button more than 3'S, and you will hear "didi", unit will start to connect the other unit automatically, then pair your device BT, now you could enjoy stereo sound, and adjust one unit volume will affect the other unit.

Remark:

- After connection, press and hold again one of control board/remote control "▶▶" button more than 3'S, you will hear "didi", unit's TWS dis-connection.
- TWS connection's distance is about 32.8 in. without obstacle.

Control Board Functions

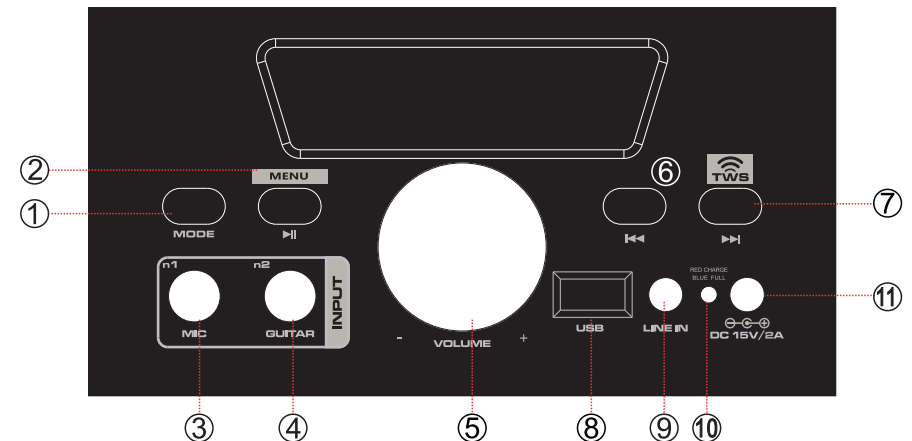

- Choose input signal (Line/FM/Wireless BT/USB)
- Short press to choose menu mode as follows:**
 - d (-14---+14) Music "Bass" volume adjustment
 - H (-14---+14) Music "Treble" volume adjustment

N1(00---30) Microphone volume adjustment
 EC (00---10) Microphone echo volume adjustment
 N2 (00---30) Guitar volume adjustment
 LED Turn on/ Turn off LED
 U (00---30) Music volume adjustment
 Short press to select one on MENU mode then use No.6 volume knob to adjust it.

Press and hold to control USB/FM mode as below:

- When in USB/BT mode, press and hold to play/pause the music
 - When in FM mode, press and hold to scan FM channel automatically
3. Wired microphone slot
 4. Guitar slot
 5. Adjust Music volume/Treble/bass/Mic volume/Mic echo/Guitar volume
 6. Last music on USB mode, last channel on FM mode
 7. Next music on USB mode, next channel on FM mode, short press for next music on Wireless BT mode, press and hold for TWS mode on Wireless BT mode
 8. USB jack for play Mp3 music
 9. 3.5MM AUX input, change your mode into LINE when you use it
 10. Charge LED indicator
 11. DC 15V charging interface

Troubleshooting and Warning

Fault	Possible Cause	Solution
No sound	1. No input sound source 2. Volume is too low	1. Use a better music signal 2. Adjust volume
Distortion of sound	1. Volume too high 2. Speaker may be damaged	1. Turn down the volume 2. Repair or replace it
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on 3. Microphone volume knob is at the lowest position 4. Wireless microphone has low battery	1. Plug microphone properly into the socket 2. Turn on microphone switch 3. Adjust microphone volume properly 4. Replace battery
MP3 does not play	1. The song format in the U disc is incorrect 2. Improper operation has caused a process disorder 3. USB disc is disconnected	1. Transform song format into Mp3 format 2. Reboot the machine 3. Insert USB disc properly

PBMSPG82


Portable Wireless BT Speaker & Microphone Karaoke System

Indoor/Outdoor Wireless PA Stereo with LED Party Lights, MP3/USB Reader, FM Radio

Features:

- True Wireless Stereo Function
- High-Powered PA Speaker System
- Wireless & Portable Stereo Sound
- Wireless BT Music Streaming Ability
- Built-in LED Flashing Party Lights for Stunning Visuals
- LED Lights Bounce to the Beat of Music
- Built-in Rechargeable Battery
- FM Radio with Digital Display
- 2.1 Channel Amplifier Design
- MP3 Digital Audio File Support
- USB Flash Drive Memory Reader
- Aux (3.5mm) Input
- (2) 1/4" Input Jacks (for Microphone / Guitar / Instrument)



 **WARNING:** This products can expose you to a chemical or group of checmicals, which may include "Lead and lead compounds" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.