
 
use of product	► Output:12V
uestion: which functions do start power supply have ? Answer: five in one. It supports power charge/supply for mobile phone, laptop, PSP, MP3/MP4 and other electronic products; possessing lighting function of different modes, it can also guarantee emergency start for auto!	 Dimension: 165*79*40mm USB output:5V2A Charge mode; CC/CV 12V1A Start current:200A Peak current:600A(3S) Cycle life: 3,000 times Applicable temperature range;-20-60°C
Ucstion: how can LED emergency lighting be turned on? Answer: turn master switch of start power to "On" and press () for 3 seconds to start flashlight function. Afterwards, press () LED function to turn normal on to flickering, SOS distress signal light; press () again to directly turn it off. See the figure below: Hold the key for three seconds to turn on LED lighting system	 Notice In case of dormancy for long time, it is suggested to maintain certain batter, capacity and the product shall be charged at least at every three months. During charging process, mild heat of equipment is normal phenomenon but not fault. It is suggested to use the product under room temperature environment away from moisture, high temperature or ignition source. Please store products in dry area away from moisture and erosive materials. Do not use coarse chemicals for cleaning, such as soap or detergent. In case of battery inflation, leakage or peculiar smell, please stop suing battery immediately.
Turn start power "ON"	 7. Do not drop products in use. 8. Children shall use the battery under instruction of parents strict accordance with specification contents to guarantee correct operation. 9. Please do not throw about or burn waste mobile power supply and cherish environment.
	or 12V car powersupply, product will begin to charged. the indicator light will be flash all time. When four indicator lights are on, it indicates the power supply has been fullcharged! Such as shown in the figure below;
Laptop adapter	Question: how to use this product to charge laptop? Answer: turn start power supply to "ON" and to choose power supply voltage to suitable for laptop(eg:in case of 19V voltage at adapter, press ① key to switch to 19V). Afterwards, connect adapter to charge laptop(have 8 adapters to choose which suitable most of laptops.). To supply power to laptop, it in suggested to remove laptop power supply atfirst to increase the service life!

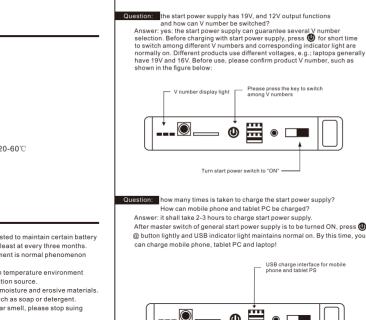


es is taken to charge the start power supply? and tablet PC be charge Answer: It shall take 2-3 hours to charge start power supply. After master switch of general start power supply is to be turned ON, press @ button lightly and USB indicator light maintains normal on. By this time, you can charge mobile phone, tablet PC and laptop!

USB charge interface for mobile phone and tablet PS

▲ | ⊆





 

Operation Instructions:


- Before start the car, please make sure the host minimum 2pcs LED indicated light on, then connect the blue plug fully seated into the host socket, and confirm the Cable Indicator is off.
- 2 .Connect the Red clip to the positive (+) battery terminal, Black clip to the negative (-) battery terminal.
- 3. Start the vehicle.
- 4. When the vehicles starts, please make sure pull up the clamp cable from power bank and then from the car battery terminals. please do not connect the red and black clip to the vehicle battery terminals within 30s.

Intelligent Jumper Cable Special Instructions:

- erate following the instruction of the Cable Indicator: Light on: mean that the connection is correct and the circuit is work, you
- can turn on the engine. Light off: means wrongly connection of positive and negative to the car
- battery terminals, the host won't open and work, please check and make sure connect correctly
- Light quick blinking: means short circuit. the light will off soon. please check and connect again
- Light slow blinking: means battery is under protected from overcharge, the pull up the clamp from the host and car, and then connect again correctly
- according to the first instruction. 5. After start the car and pull up the clamp cable, please wait for 30s if want to try again to connect the black and red clamp,


n auto be started?

^{if} an auto cannot be started by the storage battery because of Answer: if an auto cannot be started by the storage battery because of various reasons, the start power supply can exert supernatural effects. At first, inspect electrical quantity of start power. Generally, the auto can be started when there is one check display of indicator light. Connect positive and negative polarise of storage battery with positive and negative polarities of storage battery. After red polantise and black polantitse are clamped, insert plug of battery terminal into start outlet of start power, turn auto key to start auto. After start the auto, remove clamps from battery.

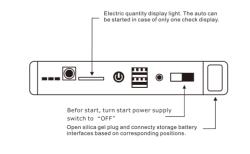

se of mis-operation, what shall happen in case of contact between positive and negative polarities of storage

battery wire clip? Considerate some careless users wrongly connect the positive and negative Ight slow binking, means battery is under protected non-occurage, and relay is cut off to protect the product. Especially after start successfully, if not pull up the clamp, the light will blink slowly, if want to start again, please if wrongly connect the positive and negative position to the car battery terminal, the intelligent clamp cable won't work, no current input and output, so it is more safe.

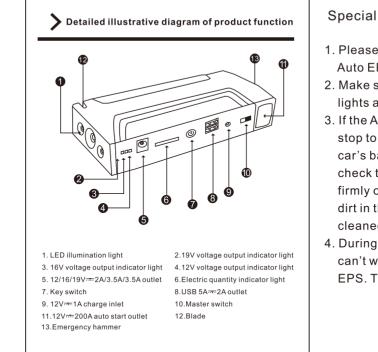

Special Precautions of The Auto EPS

- 1. Please put the blue plug enough in the Auto EPS.
- 2. Make sure that the number of indicator lights are not less than 3.
- 3. If the Auto EPS can not start car, please stop to start car. Please check the clip of car's battery clamped firmly or not. And check the battery clip whether clamped firmly or not, And check there any. rust or dirt in the car? Start the car again after cleaned-up and checked.
- 4. During starting. If the blue indicator off or can't work. Please charger for the Auto EPS. Then it will work.

- 5. During starting. If the Auto EPS can't continue to start car after starting 3-5 times. Please stop to start car. Please check the other breakdowns.Otherwise it will make the fuse and Auto EPS broken.
- 6. When the car starts, remove Auto EPS cable from Auto EPS and disconnect red and black clamps to the car battery terminals within 30 seconds.

We do not take respensibility for loss caused by your operation against above usages If you need the car to start technical support can call the dealer