



PD1000BA - PD3000BA

Home Theater Wireless BT Streaming Preamplifier Receiver

Wireless BT Streaming Home Theater Preamplifier
Receiver Audio/Video System CD/DVD Player
AM/FM Radio, MP3/USB Reader

TABLE OF CONTENTS

BEFORE USE

Safety Precautions	2
Important Safety Instructions	3
Notice and Disc Protection	4
Playable Discs and Accessories	8

CONTROL AND CONNECTION

Front panel, Rear Panel and LED Display	9
REAR PANEL FUNCTION	10
Remote Device Function	11
REAR PANEL CONNECTION	13
Basic connection	14

BASIC PLAYBACK

Preparations	15
Basic Playback	15
Pause/Step Playback	16
Previous and Next	16
Fast Forward and Fast Reverse	16
Stop Playback	16
STANDBY	16

ADVANCED PLAYBACK

Reception of a radio	17
USB/DVD	19
TIME	20
OSD	20
ZOOM	20
SUBTITLE	20

PROGRAM	20
TITLE/PBC	20
LANGUAGE	21
VIDEO	21
P/N	21
REPEAT	21
A-B REPEAT	21
VOLUME AND MUTE	21
MENU	21

SPECIAL FUNCTIONS PLAYBACK

JPEG Disc Playback	22
MP3 Playback	22
MPEG4 Disc Function Introduction ..	22
Kodak Picture CD Playback	23
USB 2.0	24
Divx And Xvid Video Compatibility ..	24
PC-Created Disc Compatibility	24

REFERENCE

System Setup	25
Troubleshooting	32
DVD Special Function	33
SPECIFICATIONS	34

SAFETY PRECAUTIONS



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The symbol for CLASS II (Double Insulation).

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, AS DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

CAUTION: When replacing the direct plug in power supply or a separable, cord-connected power supply, the replacement must be exact duplicate, or one recommended by the manufacturer

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT.

This Digital Video Disc player employs a laser System.

Use of controls, adjustments or the performance of procedures than those specified may result herein hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser may radiate when the cabinet is opened or the interlocks are defeated.

DO NOT STARE INTO BEAM.

SAFETY PRECAUTIONS



This product incorporates copyright protection technology that is protected by Macrovision method claims of certain U. S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

1. Read these manuals

After unpacking this product, read the manual carefully. Follow all the operating and other instructions.

2. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure operation of the product. These protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on bed, sofa, rug or other.

3. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

4. Water and Moisture

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.

5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7. Lightning

For added protection for this product during storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

8. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

9. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

10. Accessories



Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.

11. Disc Tray

Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury and damage to the product.

12. Burden

Do not place a heavy object on or step on the product. The object may fall causing serious personal injury and serious damage to the product.

13. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or damaged in anyway.
- f. When the product exhibits a distinct change in performance; this indicates a need for service.

14. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

16. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

NOTICES AND DISC PROTECTION

NOTES ON HANDLING

- The top and rear panels of the unit may become warm after a long period of use. **This is not a malfunction.**
- When the unit is not use, be sure to remove the disc and turn OFF the power.
- If you will not use the unit for a long period, the unit may not function properly in the future. Turn ON and use the unit occasionally.
- Do not place foreign objects on the tray.

LOCATION

Do not locate the unit in places such as:

- Near heating devices or in enclosed car.
- High temperature (47°C/116.6°F or higher) or high humidity (90% or higher).
- Dirty places.
- Avoid direct exposure to sunlight

DISTURBANCE

- When you place this unit near a TV, radio or VCR the playback picture may become poor and the sound may be distorted. In this case, place the unit away from the TV, radio or VCR.

NOTES ON MOISTURE CONDENSATION


The pickup may be condensed with water under the following situation.

- When you bring the unit directly from a cold place to a warm place.
- When you use the unit in a room where you just turned on the heater, or a place where the cold air from the air conditioner directly hits the unit.
- During the summer, when you use the unit in a hot and humid place just after you move the unit from an air conditioned room.
- The room is vaporous or damp.

If condensation exists, the unit will not operate properly. Remove the disc, connect the power cord of the unit to the wall outlet, turn on the unit, and leave it for two or three hours. After two or three hours, the unit will have warmed up and evaporated any moisture. Keep the unit connected to the wall outlet and moisture condensation will seldom occur.

ON HANDLING DISCS

- Do not touch the playback side of the disc.
- Do not attach paper or tape to disc.

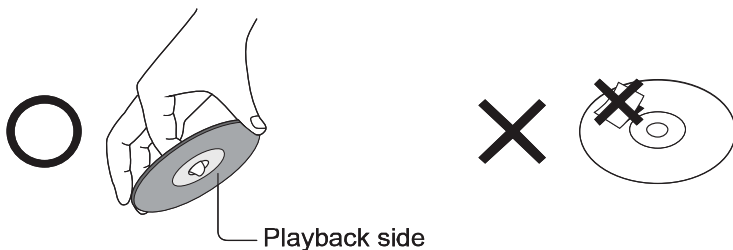

ON CLEANING DISCS

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.




- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl Lps. It may damage the disc.

ON STORING DISCS

- Do not store discs in a place subject to direct sunlight or near heat source.
- Do not store discs in place subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing object on discs outside of their case may cause warping.

STRUCTURE OF DISC CONTENTS



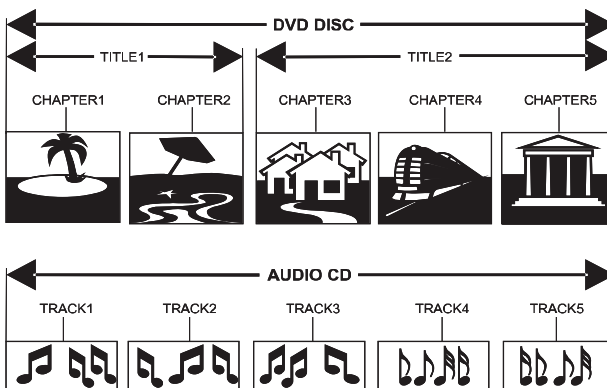





- Normally, DVD discs are divided into titles, and the titles are sub-divided into chapters. Audio CDs are divided into tracks.



Each title, chapter, or track has an assigned number, which is called title number, chapter number or track number respectively. There may be discs that do not have these number.

PLAYABLE DISCS AND ACCESSORIES

The following discs can be played:

DISCS	LABEL	CONTENTS	DISCS	LABEL	CONTENTS
DVD VIDEO		Audio +Video (moving picture)	CD-R		Audio or Video
SUPER VCD (SVCD)		Audio +Video (moving picture)	CD-RW		Audio or Video
Video-CD (VCD)	 	Audio +Video (moving picture)	JPEG		Video(picture)
AUDIO CD		Audio	MP3	MP3	Audio

- Discs than those listed above cannot be played.
- Non-standardized discs, even if they may be labeled as above cannot be played.
- The performance of a recorded disc depends on the method and quality of disc burning. In some cases, the disc may not be played.

ACCESSORIES

- Audio/Video cable 1
- User's manual 1
- Remote control 1
- AM Antenna 1Piece
- FM Antenna 1Piece



Audio/Video
cable



 
User's manual



Remote control




AM Antenna



FM Antenna


FRONT PANEL AND LED FUNCTION

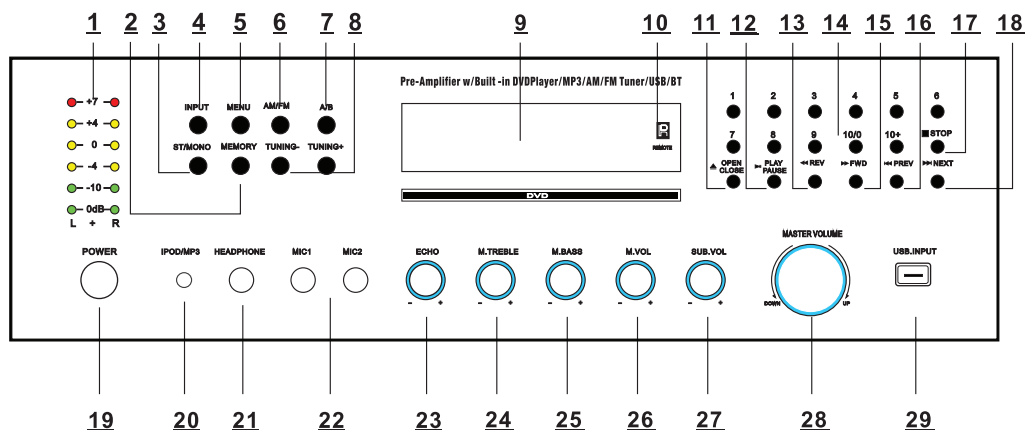

- 1. LIGHT:** Light indicates signal intensity
- 2. MEMORY:** After a station has been found, you can store the station by pressing the **MEMORY** button, and the screen will displays **MEM** above a channel number, then you can press the number knob to save the station, when the channel number displays moving from right to left, it means the station has been saved.
- 3. ST/MONO:** Stereo and Mono selector.
- 4. INPUT:** This is used to select the input sources **DVD/CD/USB, TUNER, IPOD/MP3 AUX**
- 5. MENU CONTROL:** This is used to increment and decrement level for the selected function of Master Volume, Bass, Treble, Balance, Auto Station seek.
- 6. AM/FM:** Press it to select AM/FM when it is tuning
- 7. A/B SPEAKERS OUTPUT SELECTOR:** Three mode: A, B, A+B
- 8. TUNING- / TUNING+:** The two keys are used to adjust to the best signal of the stations.
- 9. FUNCTION DISPLAYED FLUORESCENT WINDOW**
- 10. REMOTE SENSOR WINDOW**
- 11. OPEN/CLOSE CONTROL:** Press this key at any play mode will always turn to disc play mode
- 12. PLAY/PAUSE:** Play and pause control
- 13. REV,FR:** Quick/backward search the set
- 14. NUMBER KEYS:** While in radio status, you can choose the music number directly for example choose "28", press "10+" key twice, then press "8", you can get "28" music or station.

- 15. FWD.FF:** It is quick to enter if on a record search the set
- 16. PREV, SKPR:** Top a song/top a set
- 17. STOP:** Stop control
- 18. NEXT, SKPF:** Next song/next set
- 19. PRESS SWITCH:** Press to switch the power unit **ON** or **OFF**
- 20. IPOD/MP3 JACKS:** IPOD/MP3 connect to these jacks
- 21. HEADPHONE JACKS:** Headphone connect to these jacks
- 22. MIC INPUT JACKS 1&2: KARAOKE** Mic connect to these jacks
- 23. ECHO CONTROL:** Turn the knob to adjust the MIC echo level
- 24. MIC TREBLE:** Adjusts the treble of Mic
- 25. MIC BASS:** Adjusts the bass of MIC
- 26. MIC VOLUME:** Adjusts the volume level. Turn the knob clockwise to increase the MIC volume
- 27. SUB.OUT VOLUME CONTROL**
- 28. MASTER VOLUME CONTROL:** Adjusts the volume level. Turn the knob. Clockwise to increase the volume
- 29. USB INPUT JACKS:** Please note that this USB only can read MP3 files and do not support PWA files. In case of any damage to this unit, when you take USB out, please select the button "PAUSE" or other input source.

REAR PANEL FUNCTION

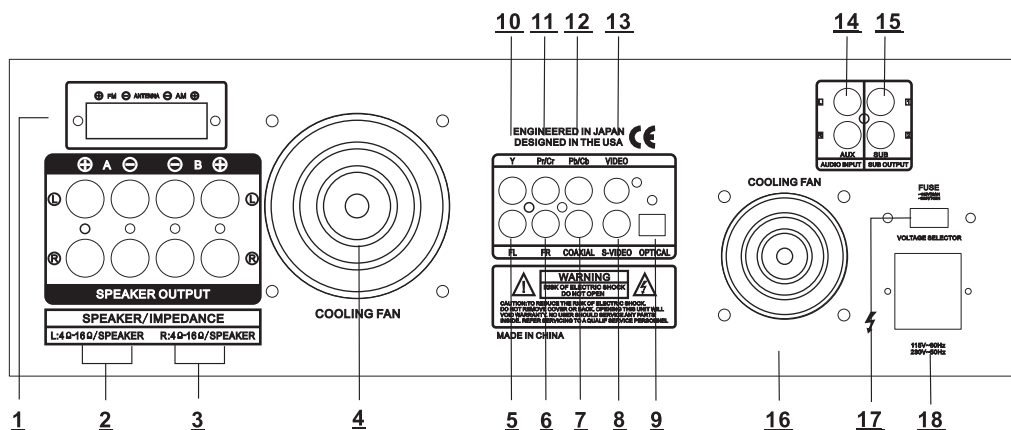


- 1. TUNER ANT:** Connect for AM and FM antennas.
- 2. A SPEAKER OUTPUT TERMINALS:** Connect your speaker system to these terminals.
- 3. B SPEAKER OUTPUT TERMINALS:** Connect your other speaker system(s) to these terminals.
- 4. COOLING FAN**
- 5.6. R/L OUTPUT**
- 7.9. DIGITALAUDIO OUTPUT:** One coaxial one optical, this output can connect to the amplifier with dolby digital or DTS decoder to play the movie with correspondent records.
- 8.10.11.12.13. VIDEO OUTPUT, S-VIDEO OUTPUT, COMPONENT VIDEO OUTPUT**
Press the "relevant" key on remote control to choose the output mode.
- 14. AUDIO INPUT JACKS:** Connect the audio output jacks of MP3, AUX to these jacks.
- 15. SUB-WOOFER OUTPUT JACKS 1&2**
- 16. COOLING FAN**
- 17. 120V/240V SWITCH:** According to power voltage, push this button to the station of the 120V or 240V.
- 18. POWER CORD:** Connect to AC 120V/60Hz & 240V/50Hz outlet.

REMOTE DEVICE FUNCTION


Remote Control Operation

1. Remote control should be operated within 6 meter and the scope of 30° in front of receiver.
2. Make sure that there is no big obstacle between remote control and machine.
3. Remote sensor should be far away from the light. High amounts of light can affect its performance.

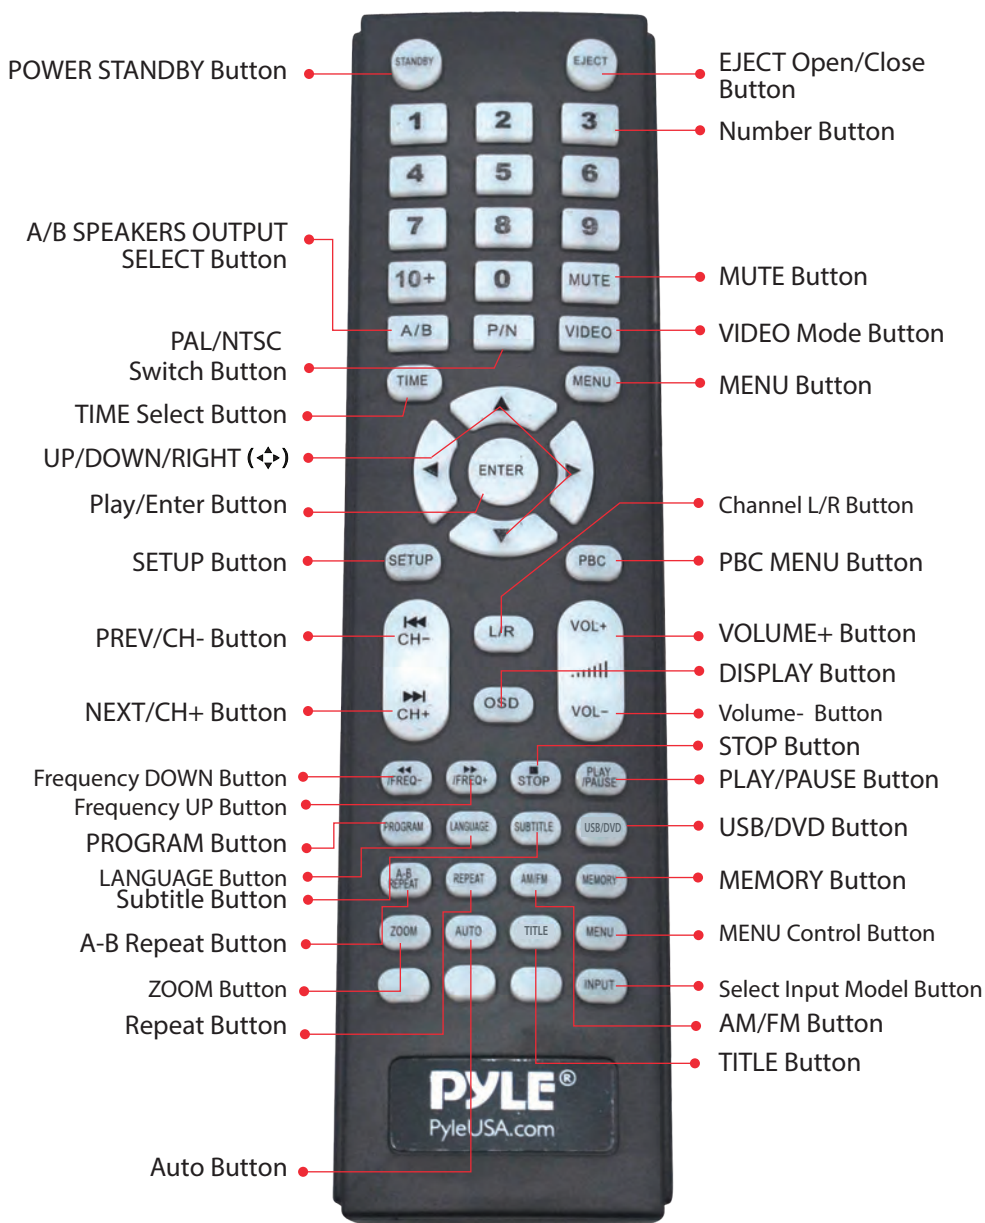

REAR PANEL CONNECTION

Connecting to Amplifier

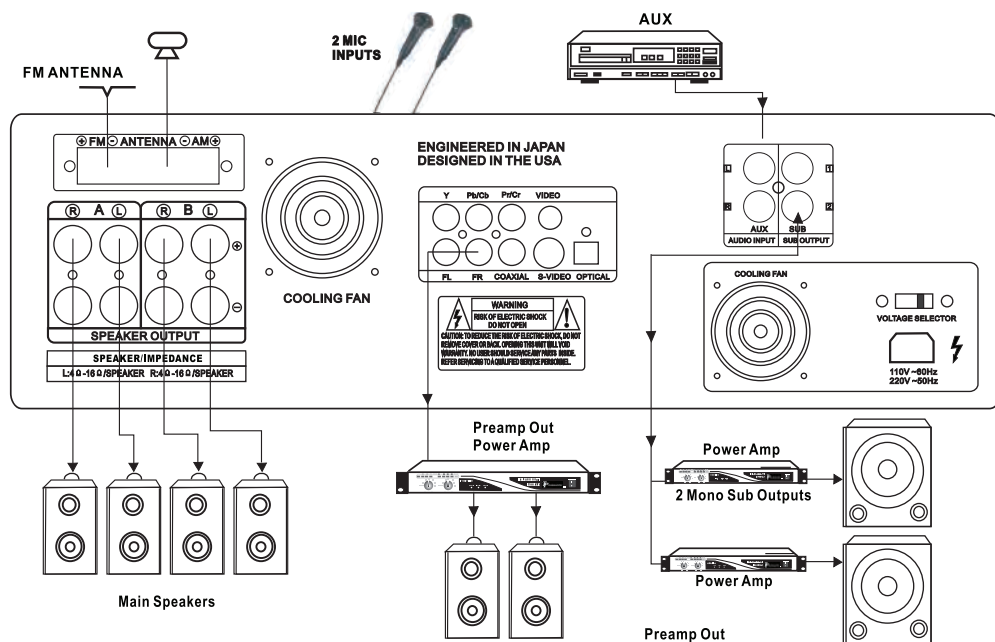


SAFETY INSTRUCTIONS

1. Make sure that all connections are properly connected and the main volume is set to minimum level before turning **ON** the unit.
2. When more than one pair of speakers is used, (specially the main speaker output) make sure that the speakers used have the same wattage and impedance, otherwise the unit may be damaged under high power or long term operation.
3. To avoid humming sounds and unwanted noise, make sure that all the wires are properly inserted.
4. For speaker cords, strip off the vinyl coating and twist the wire tip. Push down the pink jack or loosen the screw terminal, before inserting the wire tip, then fasten it and tighten the screw. Be careful not to let the wires stick out of the terminal otherwise this may cause a short circuit when wires of different terminal contact each other.
5. After the unit is turned **ON**, adjust the main volume to the desired level same with the bass and treble volume, etc.

BASIC CONNECTION

Connecting to a TV with Audio/Video cable

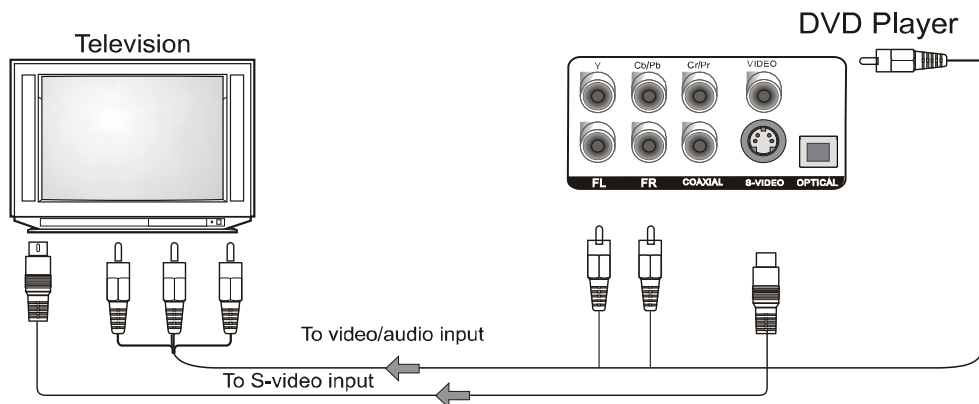


- If the TV has an S-video input, connect the DVD player with an S-video cable. When using an S-video cable, do not connect the yellow video cable.


Note:

The volume adjusting only works when it's connected to a power amplifier. While it's connected to TV set without speakers, the volume cannot be adjusted on this device. You can only adjust the volume on the TV set.

Connecting to an Audio System

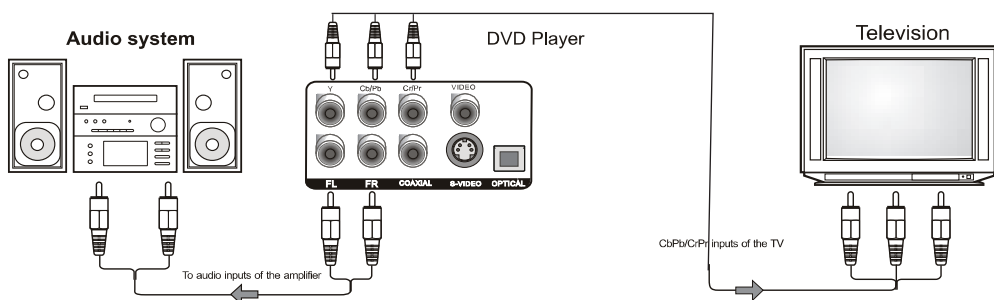

Connecting to an Amplifier Equipment

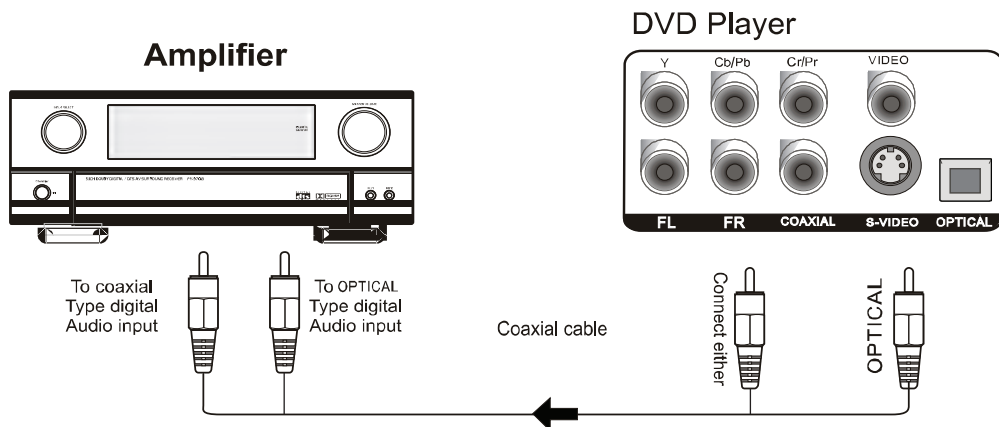

BASIC PLAYBACK

Preparations

- When you want to view a disc, turn on the TV and select the video input connected to the unit

Basic Playback

1. Press **POWER** switch in the front panel to **ON**, the unit turns on and the TV screen will display the start logo. If a disc is already in the tray, it will begin to play once the power is **ON**.
2. Press **OPEN/CLOSE** ▲ to open the disc tray, place a disc on the disc tray.
 - There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the unit to malfunction.
 - Do not place disc which is unplayable in this unit.
3. Press **OPEN/CLOSE** to close the disc tray, the playback will automatically start.
 - Some disc may not playback automatically, you can press **PLAY** ► button to start playback.
4. Some disc may start playback with a menu, use the cursor button on the remote controller to select menu options and press **PLAY** to start, or press digits to select a menu options directly.

Pause/Step Playback

1. Press **PAUSE/STEP II/II▶** first time to pause play back (still mode). The sound will be muted during still mode.
2. Press **STEP II▶** continuous to single step forward to the next frame in the video.
3. Press **PLAY** to resume normal playback.

Previous and Next

While playing, press **PREV ◀◀** key to play back previous chapter. Press until you reach the first chapter. Each press of **NEXT ▶▶** key while playing will skip the current chapter and play the next one.

Fast Forward and Fast Reverse

1. Press **FWD ▶▶** to fast forward through the disc. Each time the **FWD ▶▶** button is pressed, the fast forward motion speed changes.
2. Press **ENTER/PLAY** to resume normal playback.
3. Press **REV ◀◀** to fast reverse through the disc. Each time the **REV ◀◀** button is pressed, the fast reverse motion speed changes.
4. Press **ENTER/PLAY** to resume normal playback.

Stop Playback

1. Press **STOP ■** button to stop mode, the TV screen will show the start logo. As some disc the unit can recall the location where it stopped such as DVD's and audio CD's.
2. Press **PLAY** to playback to resume play-back from the location where playback stopped or from the beginning of the disc.
3. Press **STOP** twice to stop completely.

Standby

Press **STANDBY** key on remote control to switch player to standby mode or to power **ON**.

NOTES:

1. "INVALID KEY" may appear on the TV screen during operation. A "INVALID KEY" means that the operation is not permitted by the unit or the disc.
2. This unit can be controlled by CPU under setting mode. While in screen saver, press any key to activate the unit. If you cannot use this function, you can set **SCREEN SAVER** to **OFF** in **SYSTEM SETUP PAGE** of **SYSTEM SETUP**.

LISTEN TO RADIO, LINE INPUT OPERATION ADVANCED PLAYBACK

- **MP3, AUX EXTERNAL CONNECTION OF AUDIO SIGNAL INPUT**

Press **INPUT** key on the remote control or on the unit's panel. The unit can input MP3/AUX and AM/FM external connection audio signal, the display shows the status. Audio signal of any equipment can be connected.


- **INPUT TRANSFER TO MP3, AUX**

Press **INPUT** key on the remote control or on the unit's panel. The unit can input MP3/AUX and AM/FM external connection audio signal, the display shows the status. Audio signal of any equipment can be connected.

- **LISTEN TO RADIO**


- **FM/AM**

Press **INPUT** key to transfer the radio reception, then press [**FM/AM**] key on the machine or in the remote control. The machine will turn into FM/AM mode, and the display shows the frequency and the channel number of the current radio station.

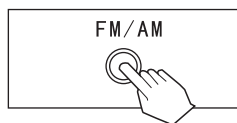


- **MANUAL SCAN**

Press [◀◀/FRE-] or [▶▶/FRE+] key on the unit's panel or on the remote control to carry out manual scan to search for your need

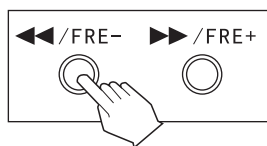

- **AUTO SCAN**

Press **AUTO** key on the unit's panel or on the remote control, then the machine itself will scan within the frequency range once completely automatically

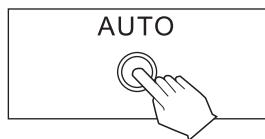

NOTES:


The machine will store the radio station into current channel number when the machine receives one. The effect is much related to the intensity of the signal. If there are no signal or immethodical signal, you'd better choose manual scan or frequency selection scan.

• FREQUENCY SELECTION SCAN

Press [TIME] key on the remote control, the display shows the status. Then you can input the frequency of the radio station you want to listen to.


A. FM frequency range: 87.5-108.0MHz

B. AM frequency range: 530-1620KHz

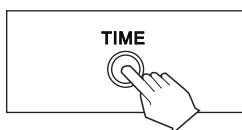

• CHANNEL SELECT

Press [◀◀/Ch] and [▶▶/CH+] key on the remote control or on the panel, then you can select the channel you have already stored.

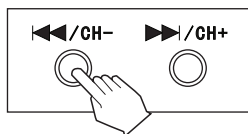


NOTES:

You can store your favorite radio stations in continuous channels.

• MONOPHONY/STEREO MODE SELECT

Press [L/R] key on the remote control to select monophony or stereo mode to listen to the radio.

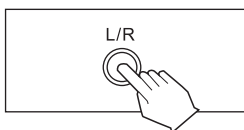

NOTES:

We advise you to select monophony mode when the signal of the radio station you've chosen is not good enough.

- **AUTO STORE RADIO STATIONS**

After starting **AUTO SCAN** function, the machine will store the radio stations received into ordinal channels. The current frequency will be stored into current channel number automatically.

- **MANUAL STORE RADIO STATIONS**

Press [◀/FRE] or [▶/FRE+] key to select the radio station you want to listen to, then press **[MEMORY]** key to store the current radio station into the channel number you want until the signal intensity is strong enough.

TIPS:

If the reception is not good or there's noise and it doesn't become better even after changing into monophony mode, you should suitably adjust the antenna to a good position until you get the best reception.

ADVANCED PLAYBACK

USB READER FUNCTION

- The machine will play USB the same as disks when there is only a single form of playable file in the USB disk or in the triple card.
- MP3 and WMA files have the priority cover others to be played after the machine has scanned if the USB disk contains several forms of playable files.

USB/DVD

When the device is playing DVD, you can press **[USB/DVD]** key, then the screen will display **READ USB** after pressing **[ENTER]** key to turn to USB status. The same when playing USB and you can change into DVD status by following above operation.

USB COPY SUBTITLE KEY FUNCTION

- You can insert USB equipment when the machine is playing MP3, CD or MPEG4. Documents will be copied into the USB after you press **[SUBTITLE]** key on the remote control.
1. When playing MP3 disk, press **[SUBTITLE]** key to copy the files into the USB.
 2. When playing CD disk, press **[SUBTITLE]** key to copy the songs into USB then change them into MP3 file. (select single file or all files to transfer)

NOTES:

It only works when the USB equipment's capacity is large enough. Some styles of the machine don't have the function.

ADVANCED PLAYBACK

IMPORTANT NOTE:

THE FOLLOWING FUNCTION DESCRIPTIONS ARE FOR DVDS OPERATION AND DISPLAY ON SCREEN MAY BE DIFFERENT FOR OTHER DISC FORMATS.

TIME

Once the **TIME** button is pressed, the screen will display messages. Use the LEFT/RIGHT cursor button to select your preference. Press ENTER/PLAY to confirm.

OSD

Pressing this button will display "DVD TT XX/XX CH XX/XX 00:00:05 (chapter elapsed)," "1/3 ENG 5.1CH 1/4 ENG OFF", "DVD TT XX/XX CH XX/XX -00:00:00 (chapter remain)", "DVD TT XX/XX CH XX/XX -00:00:00 (title elapsed)", "DVD TT XX/XX CH XX/XX -00:00:00 (title remain)", the sixth will cancel function.

ZOOM

Press this button to zoom into the picture.

Each time the button is pressed, the magnification level will change.

SUBTITLE

1. Press this button and the screen will display:

" [XX]", "XX" indicates the language of country. (the number of language depends on disc).

PROGRAM

Press this key can store your favorite picture as starting frame. If you have chosen several pictures, the latest picture will be the starting frame. You can cancel it by pressing **[SETUP]**, then press **[ENTER]** key after selecting **[RESTORE]** key of **[LOGO SELECT]** under system settings and the system will restore to the original frame.

TITLE/PBC


For DVD discs - Press this button to display the title menu. Press the digits to select your preferred chapter.

For SVCD and VCD - Follow the menu instructions on screen. Press the digits during PBC playback.

A/B SPEAKERS OUTPUT SELECT

LANGUAGE

Press this button on remote control to change the mode of audio.

For example: [1  XX 5.1CH], "XX" indicates the language of country.
(the number of language depends on disc).

VIDEO

In play or stop status press VIDEO key on the remote control, the device will switch its video-output Interface:TV-RGB, P-SCAN, S-VIDEO, INTERLACE YUV.

P/N

Press the key to switch between NTSC, PAL and AUTO

REPEAT

Press once to repeating CHAPTER.

Press twice to repeat TITLE.

Press thrice to repeat ALL.

Press 4 times to cancel the repeat.

A-B REPEAT

Press A-B to begin start-point, press again to set an end point and complete setting.
The selected section A-B will be repeated. The third press will cancel this function.

VOLUME AND MUTE

Press "+" at the right of the VOLUME to increase volume, "-" to decrease volume.
The first press is MUTE which will display Mute no voice, the second press will return to normal.

MENU

This is used to increment and decrement level for the selected function of Master Volume, Bass, Treble, Balance, AutoStation seek.

By pressing MENU key you can select the functions above. If you want to adjust bass, press MENU key to select bass, then press (master volume+) or (master volume-) on the remote control you can increase or decrease bass. If you want to adjust treble, press MENU key to select treble, then press (master volume+) or (master volume-) on the remote control you can increase or decrease treble. Others function above can also be adjusted in the same way.



SPECIAL FUNCTION PLAYBACK

JPEG DISC PLAYBACK

When playing JPEG disc, a navigation menu will be displayed automatically if the disc is loaded in succession. In the menu, use **UP** or **DOWN** cursor button to select a file, then press **"ENTER/PLAY"** to be played as a slideshow. Press **PREV** or **NEXT** to select the previous or the next picture. Press **PAUSE** to pause the current picture for viewing, press **ENTER/PLAY**, to return to normal playing. Press **ZOOM** to start zoom function, when ZOOM function is on, press **PREV** or **NEXT** to switch between pictures. Pressing the **CURSOR** key can move the enlarged picture and the picture display direction can be changed by pressing **"PROG"** key, including **RANDOM**, **WIPER L**, **WIPER R**, **UP-DOWN**, **LEFT-RIGHT**, **WINDOW V**, **EDGE TO CENTER**, etc.

MP3 PLAYBACK

Place MP3 disc on the disc tray, the DVD player will begin to play once. Simultaneously, a navigation menu will be displayed automatically if the disc is loaded in succession. In the menu, use UP or DOWN cursor button to choose folder. Press **"ENTER/PLAY"** button to confirm. In the folder, use the UP or DOWN button to select the file, then press **"ENTER/PLAY"** to play this file. In this page, using the LEFT cursor button will return to the previous menu. Press **PREV** or **NEXT** to go back to the previous or next page.

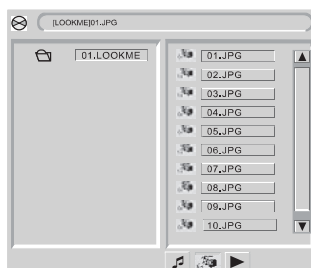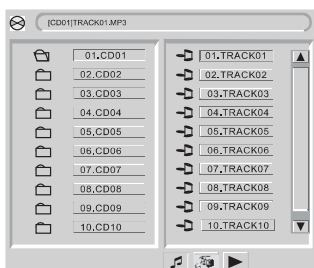

MPEG-4 DISC FUNCTION INTRODUCTION

MPEG-4 is the forth video and audio encoding standard released by MPEG (The abbreviation of "Moving Pictures Experts Group"). VCD is based on MPEG-1 technology and DVD is based on MPEG-2. MPEG-4 takes advantage of narrow bandwidth, pursuing the best picture quality by compressing and transmitting the data in frame reconstructed technology. The audio data is compressed by WMA standard. MPEG-4 is the most advanced compression technology standard in AV field. It has the highest compression rate.

By MPEG-4 technology, we can encode and compress a DVD film into one or two CD-R disc with pretty good picture quality, or can burn several films that has same quality as VCD into one CD-R disc, or burn several films that has similar quality to DVD into DVD-ROM disc.

Note:

1. The MPEG-4 discs available in the market now have many different formats, such as Xvid, AVI, RM etc. But some discs with "MPEG-4" logo in market are not encoded by MPEG technology. It is normal that some of the disc cannot function properly in this player because of the incorrect encoding standard.
2. The MPEG-4 files are displayed as a list in the screen, choose the icon using the cursors and press "ENTER/PLAY" button to playback the movie.
3. As AVI is the MPEG-4 format, and MPEG is MPEG-1 format, please do not combine AVI and MP3/JPEG together into a disc. The player will only recognise MP3 or JPEG in that instance. However MP3 and JPEG can be included into one disc together.

SPECIAL FUNCTION PLAYBACK

Kodak Picture CD Playback

Playback (Normal)

When a Kodak Picture CD is inserted into the unit, an automatic slide show is launched. Each picture in the Kodak Picture CD will be displayed consecutively in a slide-show fashion and will be scaled to fit in the whole TV screen. Some slide-show transition modes are provided, use "PROG" key to select. You can set transition effects for each picture. To display an image indefinitely, press the "PAUSE" key. To view the next or previous picture, press "NEXT" or "PREV" key. To resume the slide show, press the "ENTER/PLAY" key.

Image Rotation

There are four modes to rotate a picture: "Invert", "Mirror", "Left", and "Right".

These operations are allowed only when a picture is being displayed normally and will be cancelled automatically when a new picture is displayed. The arrow key is used to select the different rotation modes:

Up ^ - Invert/Normal

Down v - Mirror/Normal

Left < - Turn left

Right > - Turn right

ZOOM

The "ZOOM" key is used to turn on or off this function. When this mode is on, any picture will be displayed at the last ratio selected by the user. A message on the screen will indicate the current zoom ratio. If zoom mode is on, "ZOOM" key is used to control the ratio of zoom in/out. With ZOOM mode off, a picture is scaled to fit the whole TV screen.

Notes:

During zoom function, slide-show transition and image rotation are disabled. To cancel the zoom function press the "ZOOM" key again to resume the slide-show.

IMPORTANT NOTE:

Quality of pictures displayed on the screen is highly dependent on the viewing device.

USB 2.0

USB 2.0 allows data transfers of 480 Mb/s.

Divx and Xvid Video Compatibility

1. Plays most version of DivX and Xvid Video with standard playback of DivX and Xvid media files.
2. **File Extensions:** .avi and .divx (these must be used for the player to recognize DivX video files).

Note that all files with the .avi extension are recognized as Mp4, but not all of these are necessarily DivX video files and therefore may not be playable on this player.

PC-Created Disc Compatibility

Discs recorded using a personal computer may not be playable in this unit due to the setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information.


Discs recorded in packet write mode (UDF format) are not compatible with this player. Check the DVD-R/RW or CD-R/RW software disc boxes for additional compatibility information.

SYSTEM SETUP

- When you press SETUP button on the remote control, the setup menu will be displayed. It will include "SYSTEM SETUP", "LANGUAGE SETUP", "AUDIO SETUP", "VIDEO SETUP", "SPEAKER SETUP", "DIGITAL SETUP".
- Within the setup menu, you can use UP, DOWN, LEFT and RIGHT buttons on the remote control to move the cursor, and then press ENTER/PLAY button to make your selection. Press LEFT to return to the previous menu.
 - To exit setup menu, you can select the exit setup menu or press SETUP button.

1. SYSTEM SETUP PAGE


Setup TV screen format, video type and all DVD functions.

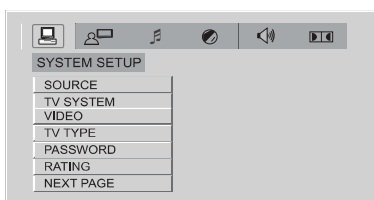

1.1 SOURCE

SOURCE:

This system will automatically read the USB if there is no playable disc loaded. Use the source menu to select and read from either disc and USB directory.

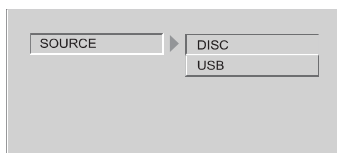


1.2 TV SYSTEM

TV SYSTEM:

This player supports different TV output, including AUTO, NTSC, and PAL systems.

- If your TV supports only NTSC or PAL and had you inadvertently selected the wrong TV system, the TV screen will flicker and only black and white colours will be display. In this case, you should press the SETUP button to set as following Note.

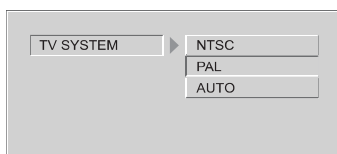


Note: How to Set the TV Type?

- You may switch the NTSC/PAL setting of the DVD player to match the video signal of your TV.
- The table below shows what kinds of disc are compatible with each setting (AUTO, PAL and NTSC)

Disc		Output Format		
Type	Format	Selected TV System Mode		
		NTSC	PAL	MULTI
DVD	NTSC	NTSC	PAL	NTSC
	PAL	NTSC	PAL	PAL

1.3 VIDEO

 VIDEO: Sets the video output.




1.4 TV DIDPLAYTYPE

The TV TYPE will select the different ratio of display TV screen format. There are various types of display on screen for different matches between Disc and TV (Please see Multi-image ratio mode page).

Note:

 - No matter which display format is selected, a picture recorded in standard 4:3 format always displays in the 4:3 aspect ratio.
- The display format of DVD titles may vary; please refer to the information that accompanies your specific DVD title.
- If the DVD title is recorded in 16:9 wide display format while the TV is a standard 4:3 screen, horizontal compression of the image will result.
- Some DVD titles may be recorded in special formats. In such cases, the DVD titles will always appear on the screen in their original format, regardless of which TV display format you select.



SYSTEM SETUP


1.5 PASSWORD CHANGE

PASSWORD CHANGE: You can change the password, please type 4 numerals as new password. The initial password is 0000.



1.6 RATING

RATING: The rating control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches. There are up to 8 censorship classes for DVDs.

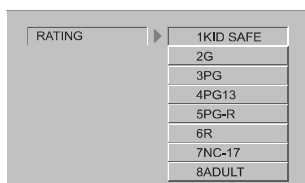

1.7 SCREEN SAVER

 
SCREEN SAVER: If the screen saver is on, then there will be an animated picture on the screen whenever the DVD player is idle for a certain time.



1.8 RESUME

RESUME: This setup can realize the memory playback. When this setup is on, the player will recall the memory where the player stopped under the circumstances of power off or withdrawing the discs. That is to say, when you replay the disc, it will be played from there it stopped last time.

Note: With this function, each disc of different formats can be memorized.




1.9 DEFAULT

DEFAULT: Resets to all the manufacturer's original settings for this DVD player. Press ENTER/PLAY to perform the reset.



2. LANGUAGE SETUP PAGE

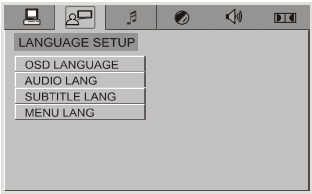


2.1 OSD LANGUAGE

On Screen Display (OSD) Language: Users can select the whole setup menu and on-screen display language.




2.2 AUDIO LANG

AUDIO: Sets the preferred audio language as the default when playing DVD. (If DVD supports these languages)

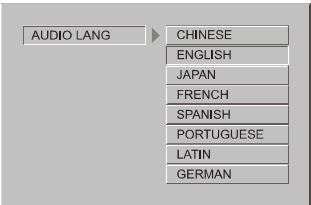

2.3 SUBTITLE LANG


SUBTITLE: Sets the preferred subtitle language as the default when playing DVD. (If DVD supports these languages)

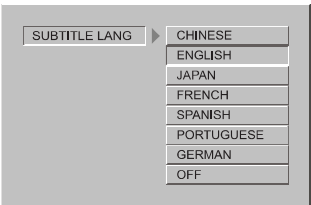


SYSTEM SETUP

2.4 MENU LANG

MENU LANG: Sets the preferred menu language as the default when playing DVD. (If DVD supports these languages)

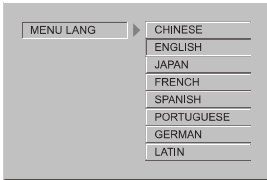

3. AUDIO SETUP PAGE

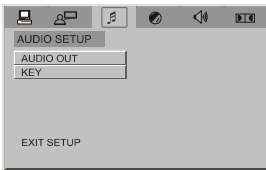


3.1 AUDIO OUTPUT

AUDIO OUT: Sets the audio outputs.




3.2 KEY

KEY :Use the Up and Down arrow button to move the scroll and adjust the key.

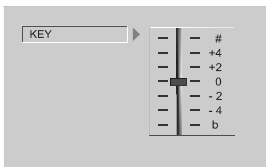


4. VIDEO SETUP PAGE

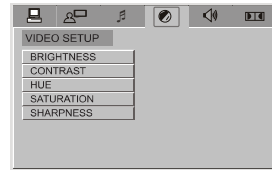


4.1 BRIGHTNESS

BRIGHTNESS: Sets the brightness level of video output.

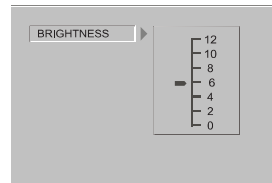


4.2 CONTRAST

CONTRAST: Sets the contrast level of Video output.

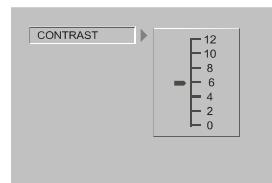

4.3 HUE


HUE: Sets the hue value of the Video.

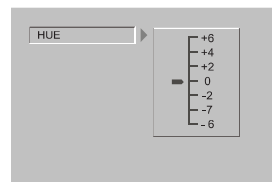

SYSTEM SETUP


4.4 SATURATION

SATURATION: Sets the saturation of the video.

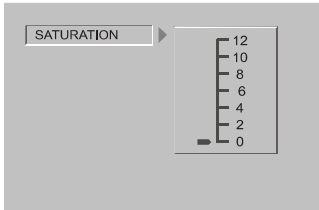


4.5 SHARPNESS

SHARPNESS: Sets the sharpness of the video

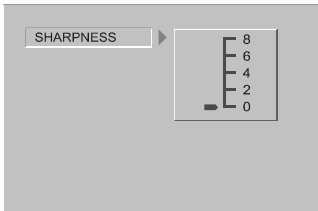


5. SPEAKER SETUP

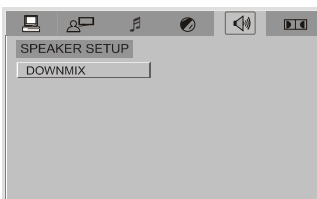


5.1 SPEAKER SETUP PAGE

DOWNMIX MODE: Sets front speakers to LT/RT STEREO, V SURR or 5.1CH.

 - The first 3 settings (LT/RT. STEREO, V SURR) downmix the sound Signal for 2-Speakers. This setting allows you to enjoy a surround sound effect with only two speakers. For this reason a setup for additional speakers (described in the following sections) is disabled when DOWNMIX MODE is set to these settings.
- You have to set the DOWNMIX MODE to 5.1CH if you have selected the Dolby Digital connection and you would like to enjoy true Dolby Digital surround sound.



6. DIGITAL SETUP PAGE

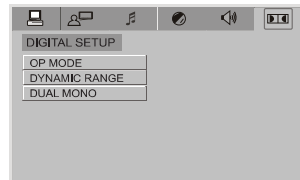

6.1 OPMODE

OP MODE: This can set the type of output and adjust audio frequency.



SYSTEM SETUP


6.2 DYNAMIC RANGE

DYNAMIC RANGE: When LINE OUT is selected, choose this setting to adjust the line out ratio and get different effect. If adjusting to FULL, the audio signal peak value will be the minimum; while adjusting to OFF, maximum.



6.3 DUAL MONO

DUAL MONO: If your amplifier/decoder has Dolby Digital output, you may select stereo, left mono, right mono, or mixed mono mode for your amplifier decoder.

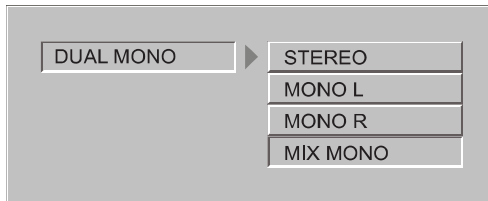









TROUBLESHOOTING

Before calling for service, you can perform the checks described in the troubleshooting guide for immediate solutions.

PROBLEM	POSSIBLE REASON	TREATMENT
The unit doesn't turn ON	The power plug is not plugged in properly or is damaged	Try plugging in again
Remote control doesn't work	No battery or batteries are off	Replace batteries
	The remote control used is out of operational range	Use it with right range
No picture	Unit was not connected properly	Connect again
	Unit was not set up properly	Check setup instructions
Disc cannot be played	Disc error	Label side should be up
	Loader doesn't close tray	Reload disc in tray
	No disc in tray	Put disc in tray
No sound	Unit not connected properly	Connect it again
	Volume too low	Adjust volume
Poor picture quality and audio	Disc dirty	Clean the disc
	Disc scratched	Replace Disc
	Disc warped	
Display correctly but no response	Operation is wrong	Renew operation
Without response	Main unit is jammed	Reset








DVD SPECIAL FUNCTION
SETTING THE TV SCREEN SIZE

Multi-aspect ratio suit to different TV screen size.

Picture format on Disc	TV Screen Size		
	4:3		16:9
	Pan Scan	Letter-box	Wide Screen
4:3 			
16:9 			

Functions Supported by DVD discs

There are many functions available on DVD discs and the functions vary per player and per manufacturer

	Regional code and signal system		Picture proportion modes
	Dolby digital surround sound		Parental Control
	Number of languages		Angles for viewing
	Subtitle languages		

SPECIFICATION

PD1000BA - PD3000BA

Home Theater Wireless BT Streaming Preamplifier Receiver

Wireless BT Streaming Home Theater Preamplifier Receiver Audio/Video System
CD/DVD Player AM/FM Radio, MP3/USB Reader

MODEL	PD1000BA	PD3000BA
USB Flash Drive Reader		✓
MP3 Digital Audio File Compatibility		✓
MAX Output Power	1000 Watt	3000 Watt
	200 Watts x 2 @ 8 Ohm 360 Watts x 2 @ 4 Ohm 450 Watts x 2 @ 2 Ohm	300 Watts x 2 @ 8 Ohm 550 Watts x 2 @ 4 Ohm 800 Watts x 2 @ 2 Ohm

Features:

- Audio + Video Home Theater System
- Built-in Bluetooth for Wireless Audio Streaming
- MP3 Digital Audio File Playback
- SD Memory Card & USB Flash Drive Readers
- Connects to TVs Soundbars Speaker Systems
- Front Loading CD/DVD Player
- 4-Channel Receiver System
- Powers up to (4) Loud Speakers
- AM/FM Radio with 50 Station Memory Presets
- Aux (3.5mm) Input Jack
- (4) Pair Speaker Terminal Binding Posts
- (2) Pair RCA (L/R) Audio Inputs
- Subwoofer RCA (L/R) Output
- Optical (Digital) Audio Output
- (2) 1/4" Microphone Inputs
- 1/4" Headphone Jack
- Video Outputs: S-Video RCA YPbPr (Component Video)
- VFD Display

- Front Panel Control Center
- Output dB (Decibel) Level LED Display
- Mic Echo Treble Bass Volume Subwoofer Controls
- Built-in Ventilation Cooling Fan
- Rack Mountable System

Bluetooth Connectivity:

- Built-in Bluetooth for Wireless Music Streaming
- Works with All of Your Favorite Devices
(iPhone, Android, Smartphone, iPad, Tablet, Computer, etc.)
- Bluetooth Wireless Network Name: PYLE
- Bluetooth Version: 3.0
- Bluetooth Wireless Range: Up to 35' ft.

What's in the Box:

- Preamplifier Receiver
- Remote Control
- Detachable Rack Mount Brackets
- RCA Connection Cables
- AM + FM Antennas
- Power Cable

Technical Specs:

- MAX Output Power: 1000 Watt
- Impedance: 8 Ohm
- Aspect Ratio: 4:3/16:9
- Video System: PAL/NTS
- Audio S/N Ratio: >90dB
- Frequency Range: +/-14 dB
- Integrated IC Radio Tuner
- CD/DVD Disc Compatibility: DVD/CD/VCD/CD-R/CD-RW/MP4
- Power: 120/240 Volt Switchable
- Dimensions (L x W x H): 16.9" x 14.6" x 5.7" -inches

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE