


# PDMICKT34

## Wired Microphone Kit

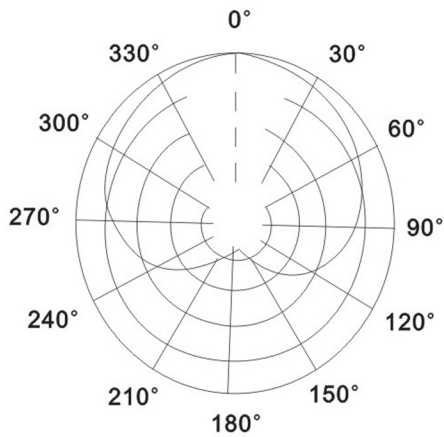


Cardioid (at 1KHz)

### Features:

Includes (3) Handheld Microphones & (3) XLR Audio Cables  
 Built-in Acoustic Pop Filters  
 Ultra-Wide Frequency Response  
 High Signal Output for Vocals & Singing  
 Rugged Construction & Steel Mesh Grill  
 Reinforced Sound Cartridge  
 ON/OFF Switch for Stage Control  
 Perfect for Stage Performances or In-Studio Use

### Technical Specs:


Mic Element: Hyper-Cardioid  
 Pickup Pattern: Unidirectional Moving Coil  
 Mic Construction Material: Zinc Alloy  
 Audio Cable Connectors: XLR to 1/4"  
 XLR Cable Length: 26'+ Ft.  
 Open Circuit Sensitivity: -54 dB  
 Frequency Response: 60Hz-15kHz  
 Output Impedance: 600 Ohm, +/-3dB (0dB=1V/Pa @ 1kHz)

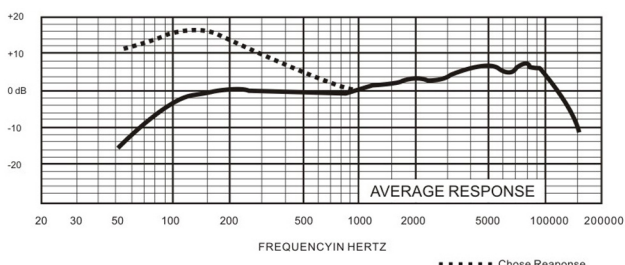

Connecting and disconnecting the microphone cable:

1. Insert the XLR connector into the microphone. If necessary, rotate the connector to align the key on the connector and the groove in the microphone, push the connector into the microphone until it clicks.
2. To disconnect the cable and microphone, grasp the connector while depressing the tab. Pull the connector away from the microphone.

### Usage:

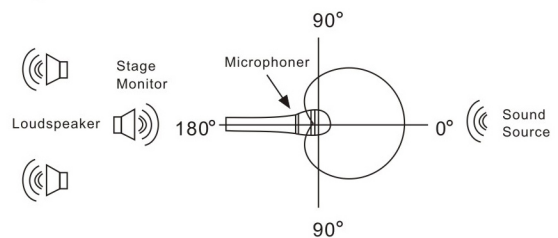

1. For the best Gain-before-feedback and isolation from undesired background noise, aim the microphone toward the sound resource and away from undesired sound resource.



2. Do not cover any part of the grille with your hand, covering the grille alters the sound and distorts the polar pattern increasing the chance for feedback.

### Cautions:

1. If the head of the microphone is covered by hand or brought close to the speaker, a howling sound may be generated. To prevent this, first decrease the volume, then place the microphone so that it is not pointed to the speaker and that there is a sufficient distance between the microphone and speaker.
2. It is important to keep foreign particles out of the grill and the windscreen because they may alter the frequency response of the microphone. The grill shall be periodically cleaned using warm, soapu water, rinsed with plain water and letdry before replacing.
3. Due to the high sensitivity of the cartridge, do not drop it from high or apply strong shock to it.
4. To maintain the sensitivity and quality of sound reproducing, avoid exposing it to moisture and exreme temperatures.