

OWNER'S MANUAL

PYLE®

INDOOR/OUTDOOR
WEATHERPROOF SPEAKER SYSTEMS

ALL WEATHER DESIGN
FOR MARINE-BOAT-PATIO AND POOL

www.PyleUSA.com

STALLATION

 
MOUNTING THE BRACKET

1. Remove the bracket knobs and the bracket from the speaker
2. Hold the bracket up to the mounting surface. "PYLE" can be mounted either horizontally or vertically, hold the bracket so that the speaker wire fits through the large, circular wire hole in the bracket, align the bracket to be square with the surrounding (Use A level for accuracy)
3. Mark the locations of the three shaped screw holes, use all of the holes
4. Drill pilot holes into the mounting surface
5. Gently pull the speaker wire through the wire hole in the center of the mounting bracket, the bracket so that the holes all line up
6. Use your hardware to attach the bracket to the mounting surface

FINAL ADJUSTMENTS

1. After checking that the speaker is in-phase and works correctly, angle the speaker for the best sound
2. Hand tighten the bracket knobs only, power tools may over-tighten the knob, and strip the threads of the insert
3. Check that the entire installation is safe and secure

MOUNTING

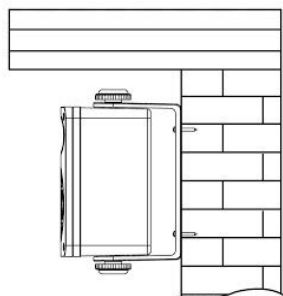

OWNER'S MANUAL

PDWR40W/PDWR40B

Excellent for use on Boats,Marinas,Decks,
Patios,Poolside,Outdoors,etc.

Completely Water Proof

Each PDWR40B Features:

- 5 1/4" Aluminum Injection Cone Woofer
- 40 OZ.Magnet Structure
- 1" High Compliance Mylar Tweeter
- Capacitor Crossover Network
- Bass Reflex Vent for added Bass Response

Heavy Duty ABS Construction

Quick Connect/Disconnect Speaker Terminals

Unique Spring Loaded Mounting System


Removable Rustproof Mesh Grills

Power.....200 Watts RMS/400 Watts Peak

Frequency Response.....40-22K HZ

Impedance.....4 Ohms

 
Dimensions.6.25" (W)x9.25" (H)x5.75" (D)

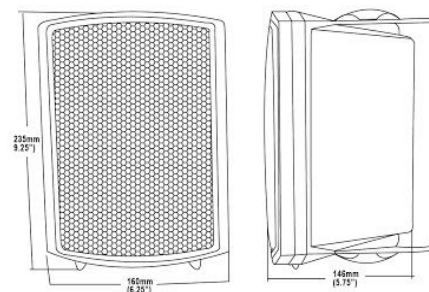

Connecting your Speakers

Connecting the speakers to your amplifier or receiver.

 - First turn your amplifier off to avoid damage which may result from accidental shorting of the speaker leads.
- Correct phase polarity is critical for proper stereo imaging and bass performance. The red (+) terminal on your amplifier or receiver must be connected to the red (+) terminal on your speaker, the same applies for the black (-) terminal.
- Connect one loudspeaker at a time to ensure proper connection of left and right channels. Make sure all wires are firmly fastened.
- If you notice a high level of bass or central image focus, double check your connections for proper polarity.

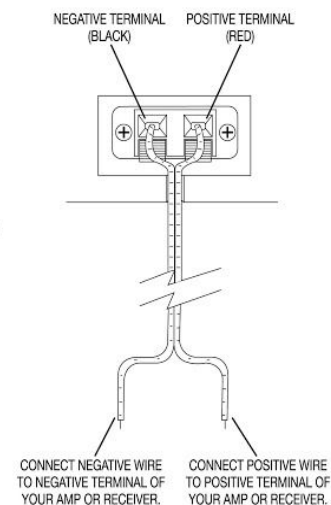

PDWR40W/40B/210*297mm/80克双铜/正反面印刷