

# PYLE

PyleUSA.com



## ***PG680A***

### **5.25" Portable Wireless BT Streaming Speaker**

Portable Audio Speaker, with Built-in Rechargeable Battery,  
With carrying strap, Clear Sound performance,  
MP3/USB/ /FM Radio (180 Watt MAX)

***USER GUIDE***

 **Illegal operation may cause personal injury, which could be fatal.**

 **Illegal operation may cause damage to property.**

***Important Safety Instructions:***

**1. Read these instructions carefully.**

**2. Read all warnings**

**3. Follow all instructions.**

4. Please do not expose this apparatus to water, corrosive liquid or gas.

Store the apparatus in a dry and clean place.

5. **DO NOT** install the speaker system near windows, or any heat sources such as radiators, heat registers, gas stoves or other apparatus that produce heat.

6. **DO NOT** place any naked flame sources, such as lit candles, on or near the apparatus.

7. Clean only with dry cloth.

8. **DO NOT** place objects filled with any kind of liquid on the speakers

9. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Liquids can cause a failure and/or fire hazard.

10. **DO NOT** insert metal bar/wire or any other object in the speaker hole.

11. Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.

12. To reduce the risk of electric shock, **DO NOT** handle the plug with wet hands.

13. Before moving the speakers, please pull out the power adapter and disconnect from any other equipment.

14. **DO NOT** block any ventilation openings of the device, otherwise it will cause a rise in internal temperature of the apparatus and thus cause damage to the circuit.

15. **DO NOT** press the switches or other keys with force.

16. Unplug the power cable immediately if your device emits smoke or acts abnormally. Seek professional help from your nearest service center.

17. Only use attachments recommended by the manufacturer.

Use of other attachments may be hazardous.

 
18. **DO NOT** throw used batteries in with your household rubbish.

Follow instructions from your local council about safe disposal.


## Using the Remote Control

### Installing the Batteries

Remove the battery cover from the back of the Remote Control as shown and insert 2xAAA size batteries ensuring correct polarity.

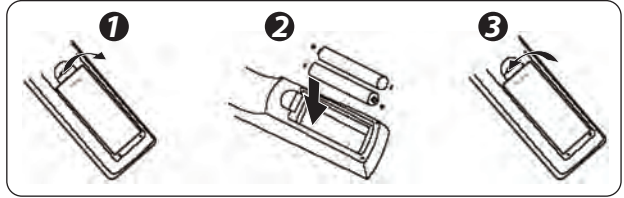

 
1. Mute
2. Fm radio
3. 0-9 keys
4. Repeat
5. Tws
6. Play/pause
7. Previous song
8. Volume+
9. Next song
10. Volume-
11. Record key
12. Mic Priority
13. Record play
14. Mic vol-
15. Mic vol+
16. Wireless BT
17. Bass+
18. Bass-
19. Aux
20. Echo+
21. Echo-
22. Usb
23. Treble+
24. Treble-

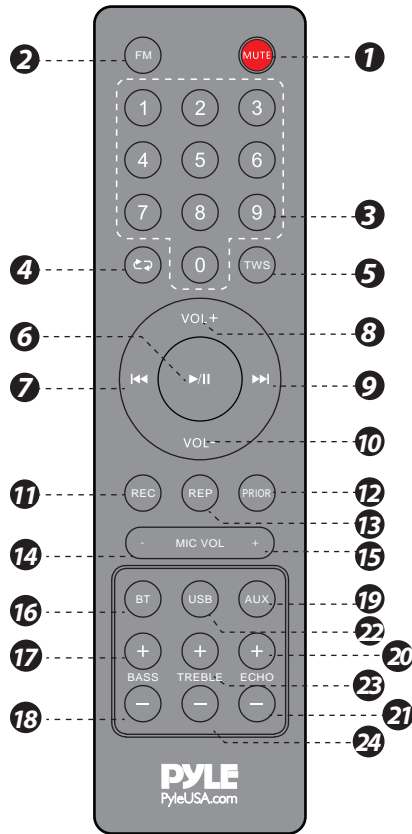

### Note for remote:

1. The remote control should be used within 6m from the device, around 30 degree on the left/right side, pointed directly towards the speaker system.
 
## OVERVIEW:

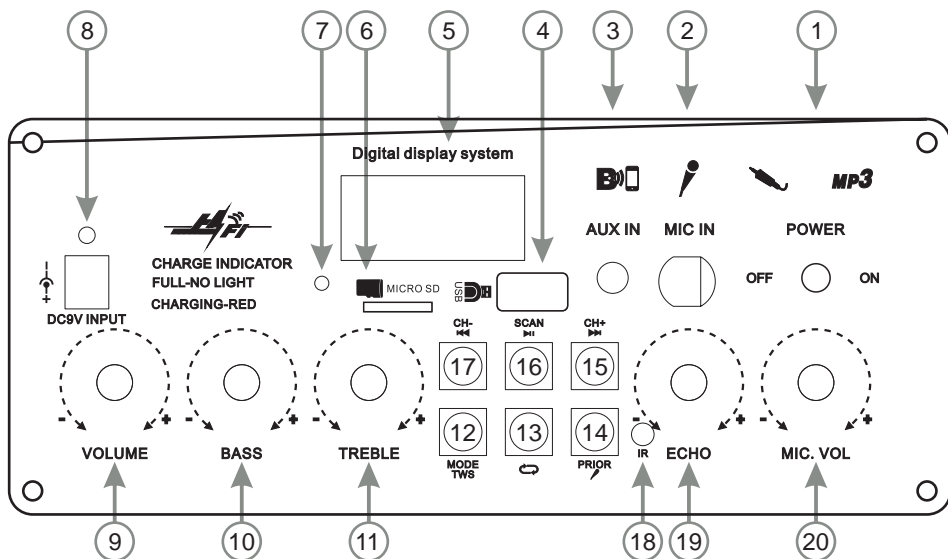

- |                     |   |
|---------------------|---|
| 1. POWER            | 12. MODE/TWS  |
| 2. MIC INPUT        | 13. REPEAT  |
| 3. AUX INPUT        | 14. MIC PRIORITY  |
| 4. USB INPUT        | 15. NEXT SONG/FM+   |
| 5. DISPLAY          | 16. PLAY/PAUSE/IN FM MODE,<br>SHORT PRESS TO SEARCH RADIO STATION |
| 6. MICRO SD INPUT   | 17. PREVIOUS SONG/FM-   |
| 7. CHARGE INDICATOR | 18. IR REMOTE RECEIVER  |
| 8. DC INPUT         | 19. ECHO  |
| 9. VOLUME           | 20. MIC VOL   |
| 10. BASS            |   |
| 11. TREBLE          |   |

**CONNECTING WIRED MICROPHONE** (microphone not supplied)  
Connect the microphone to MIC IN input and switch on.

### Note:


If you are playing music from any other input, connecting the microphone will not mute the sound output.

### Voiceover Function

The voiceover function is available with any input.

Play a track through AUX/USB/MICRO SD/FM/Wireless BT;  
connect a microphone to MIC IN and sing along for a "karaoke" effect.

### **Built-in Recording Function:**

1. USB Drive or Micro SD card must have a Song or Songs (MP3, WMA, or FLAC files) saved before trying to record.
2. Turn ON the unit then insert the USB or Micro SD into the proper slot.  
**Note:** Micro SD card should be inserted with  gold connection strips facing front of Portable Speaker.
3. Wait for first song on **USB** or **Micro SD** to start playing, then plug in Microphone and test the Microphone if working. Adjust Volume and Echo.
4. Short press **REC** on the Remote to start recording.
5. When finished recording Press **REC** on the Remote to save the recording.
6. Press **REP** to play recording.

### **Note:**

*When recording the first time a folder will be created on the USB Drive or Micro SD card named AB\_REC.*

### **USB/MICRO SD**

Keep the speaker away from high temperatures, high magnetic field and high frequency interference. If the speaker hangs, please switch it off and switch on again, or unplug USB/MICRO SD card and re-plug. The speaker will work normally again. The maximum size of usb/micro sd device that can be connected is 64GB.

### **MUSIC FORMAT SUPPORT MP3, WMA, FLAC**

1. **USB** port, plug and play.
2. **MICRO SD** slot. Plug and play.
3. **Mode key:** Choose input source from these options: AUX/USB/MICRO SD/FM/Wireless BT.
4. **Play/pause key:** when playing, press this key to pause, press the key again to play.
5. **Previous/Next key:** when playing, single press of this key will play next/previous song as per your wish.
6. **Repeat key:** when playing, pressing this key can replay the current song or all songs as per your wish. Press once for single repeat; Press twice for repeat all.

## **FM RADIO FUNCTION**

1. Turn **ON** the unit and press repeatedly the **MODE** key on unit, or the **FM** on remote control and select FM function (the display will show the frequency).
2. Press the **PLAY** button on the unit or the key **▶||** on remote control to activate the auto memory (the radio starts an automatic search for available radio stations and saves them automatically).  
The station's number stored depends on the radio signal in your area.  
During the search, press **PLAY** button on the remote control to stop searching.
3. Use the **NEXT** and **PREV**, or the keys **◀◀** and **▶▶** on the remote control to listen to the various radio stations saved in memory.
4. To change to a preset station, use the number keys on the remote control.  
For example, to call up the station number 12, first press 1 and then 2.

## **WIRELESS BT STREAMING**

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices Smartphones, Tablets, Laptops, Computers, etc.
- BT Version: 5.0
- BT Network Name: 'PYLEUSA'
- Wireless Range: Up to 32' ft.

## **WIRELESS BT OPERATION**

1. Turn **ON** the machine and press the **MODE** on unit, or the **BT** on remote control to select the BT function, the display shows "**BLUE**".
2. In the **BT** mode, the system automatically enters search mode.
3. Activate the **Wireless BT** feature on the external device to be coupled.
4. Initiate a search for devices. The device shows up as "**PYLEUSA**".
5. Press the **PLAY** button on the unit or the key **▶||** on remote control, to start playing and the buttons **NEXT** and **PREV**, or the keys **◀◀** and **▶▶** for the selection of songs.

## **CHARGING INSTRUCTIONS**

1. This speaker has a high capacity 7.4V battery. Please connect to AC port with the power adapter to charge. The speaker has an indicator light that will illuminate when the speaker is on charge. When the speaker is fully charged, the indicator light will off. It takes around 6 -8 hours to fully charge the speakers. Disconnect power adapter as soon as battery is fully charged.

**Note: Over charging will damage the battery.**

2. Please fully charge the speakers if they are not used in a long time. Please charge the speakers every 2 months, otherwise the battery may get damaged.

**Note: When the battery of the speaker is low, please charge it within 48 hours.**

## **TWS FUNCTION**

**For increase sound effect, our unit provides TWS function as follows:**

**Step-1:** Make sure two same units are in BT mode.

**Step-2:** Turn ON BT mode on your device and connect one of the units.

**Step-3:** Press and hold the TWS button on each unit, and two units will pair automatically.

**Remark:** After two units pairing, press and hold TWS button again to quit pairing.

## **WHAT'S IN THE BOX:**

- Speaker System
- Remote Control
- Power Adapter

## **TROUBLESHOOTING**

Users may try to solve common problems by following these guidelines. If the problem persists and can't be solved, please contact Customer Service for assistance.

## TROUBLESHOOTING

Check the following points before contacting a repair company.

Symptom	May caused by	Solution
No sound when powered ON	<ol style="list-style-type: none"><li>1. No input sound source</li><li>2. Volume knob is in the lowest position</li><li>3. Voice switch OFF</li><li>4. USB/MICRO SD card not plugged</li></ol>	<ol style="list-style-type: none"><li>1. Input AUX signal</li><li>2. Adjust volume</li><li>3. Turn on voice switch</li><li>4. Plug USB/MICRO SD card, play MP3</li></ol>
Sound Distortion	<ol style="list-style-type: none"><li>1. Volume is too loud</li><li>2. Audio file error</li></ol>	<ol style="list-style-type: none"><li>1. Turn the volume down</li><li>2. Check and change the audio file</li></ol>
No sound comes from the Microphone	<ol style="list-style-type: none"><li>1. Microphone socket may not be plugged properly.</li><li>2. Microphone switch may not be on</li><li>3. Microphone volume is on lowest mode.</li></ol>	<ol style="list-style-type: none"><li>1. Ensure the microphone is correctly plugged into the socket.</li><li>2. Turn on the microphone</li><li>3. Adjust the microphone volume as per users wish</li></ol>
No sound comes after inserting USB/MICRO SD card	<ol style="list-style-type: none"><li>1. Incorrect file format</li><li>2. USB/MICRO SD card may not be plugged in properly.</li></ol>	<ol style="list-style-type: none"><li>1. File format should be MP3</li><li>2. Plug USB/MICRO SD card correctly</li></ol>
Charging indication - red light flashing when there is low charge	Charging adapter is not inserted properly.	It will not affect the speaker system. The light is only used for indicating whether the unit is charging.
Unable to charge or the battery works only for short duration	<ol style="list-style-type: none"><li>1. Connect power cord to charge</li><li>2. Battery not fully charged</li><li>3. Battery life may have ended</li></ol>	<ol style="list-style-type: none"><li>1. Check if the power cord is connected properly</li><li>2. Extend charging time; normally it takes 6-8 hour to fully charge</li><li>3. Replace old batteries with the same specification as the old batteries.</li></ol>
Speaker makes loud noises	<ol style="list-style-type: none"><li>1. Mic switched ON but too close to the speaker</li><li>2. Microphone switched ON but is not being used.</li><li>3. Microphone volume is too loud</li><li>4. Mobile phone is too close to the speaker</li><li>5. Other wireless equipments may be placed very close to the speaker.</li></ol>	<ol style="list-style-type: none"><li>1. Keep the mic 2 meters away from the speaker</li><li>2. Turn off mic if not in use.</li><li>3. Adjust microphone volume to lower mode</li><li>4. Keep mobile away from the speaker whilst attending a call.</li><li>5. Keep speaker away from other wireless equipment</li></ol>



## **FEATURES:**

- True Wireless Stereo System
- Portable Speaker System
- High-Powered Loudspeaker Style
- Wireless BT Music Streaming Ability
- Built-in Rechargeable Battery
- FM Radio with Digital LED Display
- Connect & Stream Audio from External Devices
- Aux (3.5mm) Input Connector Jack
- USB Flash Memory Reader
- Micro SD Card Reader
- 6.5mm Microphone input
- Battery Level LED Indicator Lights
- Recording Function
- Microphone Priority Function
- Microphone Echo Adjust Knob
- Bass & Treble Adjust Knobs
- For Indoor / Outdoor Use

## **TECHNICAL SPECS:**

- Construction Material: Wooden case + leather + woven cloth
- Max Power Output: 180 Watt Max
- Sound System: 5.25" -inch Subwoofer + 2" Tweeter
- USB Interface Type: 2.0
- Digital Audio File Support: MP3/WMA/FLAC
- Maximum USB Flash Support: 64GB
- Remote Control Battery Operated, 2 pieces AAA Batteries (Not Included)
- Battery Life: Up to 3.5 Hours (Charge Time: Approx. 5 Hours)
- Rechargeable Battery: 7.4V, 4400mAh – 32.56 Wh
- Power Supply: AC110~240V, Auto Switchable (9V/2A Power Adapter)
- Product Dimensions (L x W x H): 12.6" x4.7" x 8.9" (Inch)

### **California Prop 65 Warning**

#### **WARNING:**

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE

***Questions? Issues?***

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)