

PYLE

PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

PYLE

PyleUSA.com



PHP18DJT

8" Portable Wireless BT Speaker System
TWS Function, Built-in Rechargeable Battery, LED Display,
FM/Aux/MP3/USB/SD w/ 1/4" Input Jack for Microphone

USER GUIDE

WARNING



1. **DO NOT** place objects on top of the device, as objects may scratch the device.



2. **DO NOT** expose the device to dirty or dusty environments.



3. **DO NOT** insert any foreign objects into the device.



4. **DO NOT** expose the device to strong magnetic or electrical field.



5. **DO NOT** use the device in the rain



6. Please check with your Local Authority or retailer for proper disposal of electronic products.




7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.



8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.

Illegal operation may cause personal injury, which could be fatal and may cause damage to property. For safety, we do not suggest to charge unit and use microphone together.


CONTROL BOARD FUNCTIONS

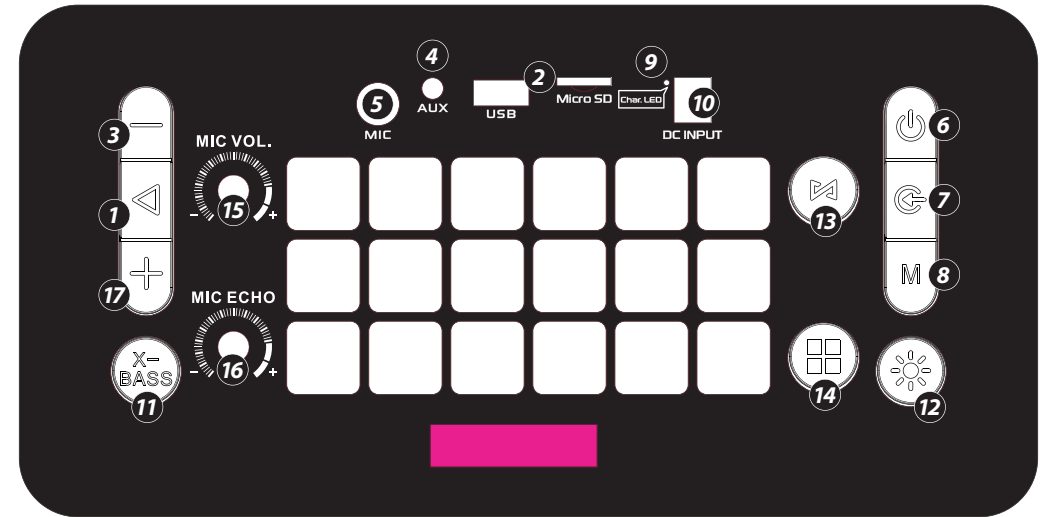

1. Play/stop music on USB/Micro SD/BT mode, scan FM channel on FM mode
2. USB and micro SD memory card input jack
3. Press and hold to decrease music volume, short press to choose last channel
4. 3.5MM AUX input jack
5. 6.5MM microphone input jack
6. Power switch button
7. **Mode button:** short press to select USB/Micro SD/AUX/BT/FM mode
8. **Menu button:** short press to select Bass (b) or Treble (E) or main volume (U), and then use Prev (-) or Next (+) button to decrease or increase
9. **Charge LED indicator:** Red light in charge, blue light full charge
10. DC 9V charge input jack
11. Increase bass effect button
12. Front LED light mode button
(Top mushroom LED light swift button at the back of unit)
13. **TWS Function button:** Two unit both on Wireless BT mode, press this TWS button to start TWS pairing.
14. 4 kinds of DJ effect selecting button
15. Microphone volume knob
16. Microphone echo knob
17. Press and hold to increase music volume, short press to choose next channel

REMOTE CONTROL FUNCTIONS

1. Standby button
2. Choose input AUX/FM/BT/USB signal
3. Mute button
4. Play/Stop button on Mp3 mode, scan function on FM mode
5. Next song on USB/Micro SD Card, next channel on FM mode
6. Previous song of USB/Micro SD Card, last channel on FM mode
7. EQ effect on Mp3 mode
8. Increase speaker volume
9. Choose song number directly on Mp3 mode
10. Stop button
11. Decrease music volume
12. Repeat song on USB/Micro SD Card

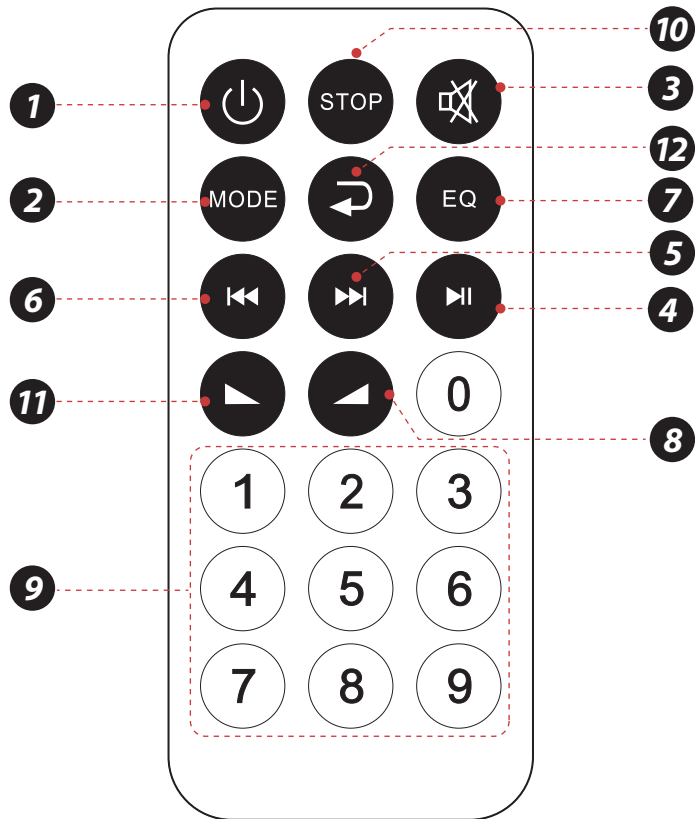

TROUBLESHOOTING

| Fault | Possible Cause | Solution |
|-----------------------|--|--|
| No sound | 1. No input sound source. 2. Volume is too low. | 1. Use a better music signal. 2. Adjust volume. |
| Distortion of sound | 1. Volume too high. 2. Speaker may be damaged | 1. Turn down the volume. 2. If speaker is damaged, repair or replace it. |
| Karaoke does not work | 1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is at the lowest position. | 1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Adjust microphone volume properly. |
| MP3 does not play | 1. The audio format in the USB is incorrect. 2. Improper operation has caused a process disorder. 3. USB disc is disconnected. | 1. Convert audio format into Mp3 format. 2. Reboot the machine. 3. Insert USB disc properly. |

Wireless BT Connectivity:

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices
- Smartphones, Tablets, Laptops, Computers, etc.
- Wireless BT Version: 5.0
- Wireless BT Network Name: 'PYLEUSA'
- Wireless Range: Up to 32' ft.

Features:

- True Wireless Stereo System
- High-Powered Speaker System
- Wireless & Portable Speaker System
- Wireless BT Music Streaming Ability
- Includes Wireless Microphone for Karaoke Fun
- Multi-Color Flashing Ring LED Lights
- Built-in LED Lights for Stunning Visuals
- FM Radio with Digital LED Display
- Built-in Rechargeable Battery
- Aux (3.5mm) Input
- MP3 Digital Audio File Support
- Connect & Stream Audio from External Devices
- USB Flash Drive Memory Reader
- Micro SD card reader
- 1/4" Input Jacks for Microphone
- Ported Enclosure for Extended Bass Response
- Integrated Extending Carry Handle
- Treble & Bass sound performance adjustment
- Convenient trolley and wheels
- X-Bass button for more powerful bass
- Many kinds of DJ sound effects selection for more fun
- Perfect for the Backyard or Park Visits - Instant Party Anytime, Anywhere!

What's in the Box:

- Speaker System
- Wireless Microphone
- Remote Control
- Power Adapter
- AUX Cable
- Tablet stand

Technical Specs:

- Power: 600 Watts MAX
- Sound System: 8" Subwoofer + 1.5" Tweeter
- Selectable LED Light Modes: Many kinds of LED lights modes
- Digital Media File Compatibility: MP3, WMA (USB 2.0)
- Maximum USB Flash Drive Support: Up to 64GB
- Housing Construction Material: ABS + Iron Net + Wooden
- Built-in Rechargeable Battery: Li-ion 3600mAh, 7.4V
- Battery Operated Remote Control: 1 Piece Button Cell Battery CR-2025 (Included)
- Power Supply: 110/240V (9V Power Adapter)
- AUX Cable Length: 3.94 ft.
- Dimensions (L x W x H): 11.8" x 11.6" x 20.7" -inches
- Tablet Stand Dimensions (L x W x H): 6.9" x 4.3" x 2.7" -inches



WARNING:

This product can expose you to a chemical or group of chemicals, which may include "Lead and lead compounds" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.