

PYLE

PyleUSA.com



 
VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?
We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com

PYLE

PyleUSA.com

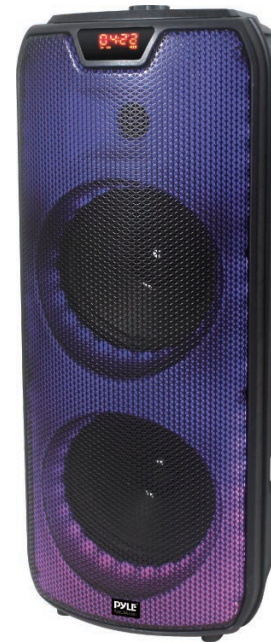

PHPD82A




PHPD82B

Dual 8" Wireless BT Portable PA Party Speaker

Portable PA & Karaoke Party Audio Speaker,
with Built-in Rechargeable Battery, Flashing Party Circular Rotary Lights,
MP3/USB/ /FM Radio (300 Watt MAX)

USER GUIDE

 
WARNING



1. **DO NOT** place objects on top of the device, as objects may scratch the device.



 2. **DO NOT** expose the device to dirty or dusty environments.



3. **DO NOT** insert any foreign objects into the device.



4. **DO NOT** expose the device to strong magnetic or electrical field.



5. **DO NOT** use the device in the rain



6. Please check with your Local Authority or retailer for proper disposal of electronic products.



 
7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.



8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.

ILLEGAL OPERATION MAY CAUSE PERSONAL INJURY, WHICH COULD BE FATAL.
ILLEGAL OPERATION MAY CAUSE DAMAGE TO PROPERTY


CONTROL BOARD FUNCTIONS

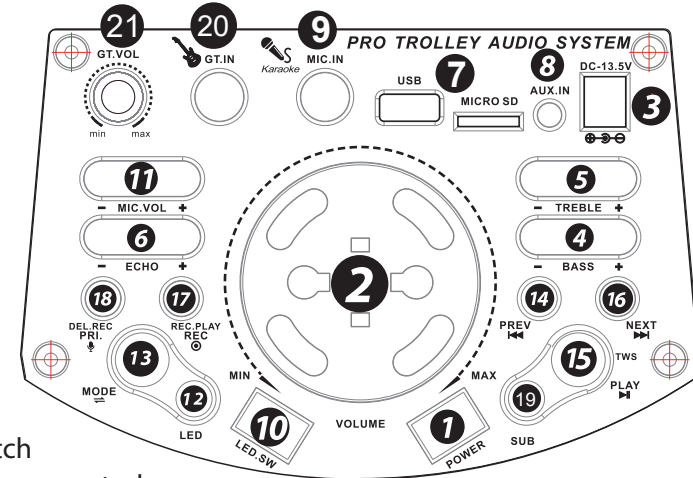

1. Power Switch
2. Master volume control
3. DC 13.5V input jack
4. Bass volume control knob
5. Treble volume control knob
6. Microphone Echo control knob
7. USB and Micro SD Memory Card Slot
8. 3.5MM AUX input jack
9. 6.5MM microphone input jack
10. LED light switch
11. Microphone volume control knob
12. LED MODE
13. Mode button: Short press to choose BT, FM, AUX, USB, SD mode
14. Previous
15. Play/Pause/press and hold for TWS function
16. Next
17. Short press to start recording, and short press again to save and play recording
Press and hold press to play recording files, and press and hold again to quit recording
18. **Microphone priority button:** Short press to start microphone priority.
When playing the recorded file, press and hold to delete current recording.
19. X-BASS
20. Guitar input
21. Guitar Volume

REMOTE CONTROL FUNCTIONS

 - Power:** Used to turn on/off the MP3 player power.
- MODE:** Used to switch the AUX/USB/BT/ Radio
- Mute button
- In FM mode, press to search radio station automatically and save.
- Next song of USB/In FM mode, short press to select next frequency, press and hold to fast-forward frequency
- Previous song in USB//In FM mode, short press to select last frequency, press and hold to fast backtrack frequency.
- EQ solution
- Repeat song
- Increase volume
- Decrease volume
- Play/Pause/In FM Mode, press to select saved radio station.
- Choose song number directly/In FM mode, choose FM frequency directly.

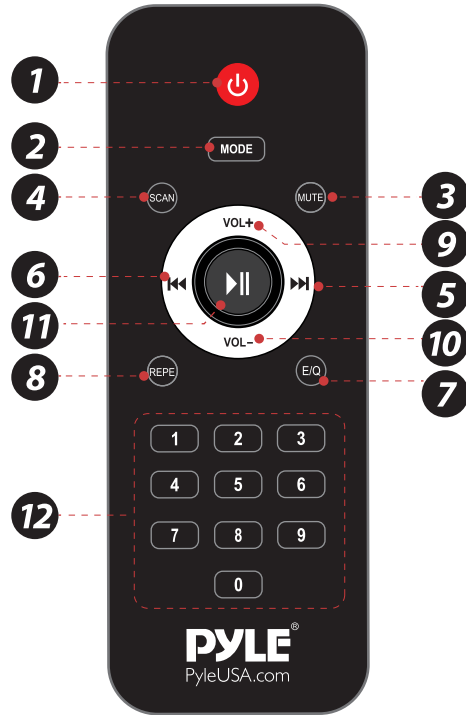

TROUBLESHOOTING

Fault	Possible Cause	Solution
No sound	1. No input sound source. 2. Volume is too low.	1. Use a better music signal. 2. Adjust volume.
Distortion of sound	1. Volume too high. 2. Speaker may be damaged	1. Turn down the volume. 2. If speaker is damaged, repair or replace it.
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is at the lowest position.	1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Adjust microphone volume properly.
MP3 does not play	1. The audio format in the USB is incorrect. 2. Improper operation has caused a process disorder. 3. USB disc is disconnected.	1. Convert audio format into Mp3 format. 2. Reboot the machine. 3. Insert USB disc properly.

Wireless BT Connectivity:

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices
- Smartphones, Tablets, Laptops, Computers, etc.
- Wireless BT Version: 5.1
- Wireless BT Network Name: 'PYLEUSA'
- Wireless Range: Up to 32' ft.



This product can expose you to a chemical or group of chemicals, which may include "Lead and lead compounds" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.

TWS FUNCTION

For increase sound effect, our unit provides TWS function as follows:

Step-1: Turn ON BT mode on your device and connect the machine.

Step-2: Press and hold each control board "TWS" button more than 3's, and you will see "ON" on display, unit will start to connect the other unit automatically, now you can enjoy stereo sound, and adjusting one unit volume will affect the other unit.

Remark:

- After connection, press and hold again one of control board "TWS" button more than 3's, you will see "OFF" on display, unit's TWS dis-connection.