



# PYLE

PyleUSA.com



## ***PHSKR14***

### **3-Piece Wireless BT Streaming Stereo System**

DVD Shelf System for Home with DVD Player, MP3, USB, FM Radio, Bass Reflex Speaker, and Remote Control

***USER GUIDE***





## TABLE OF CONTENTS

<i>SAFETY INSTRUCTIONS</i>	3
<i>REMOTE CONTROL</i>	4
<i>FRONT PANEL</i>	7
<i>REAR PANEL</i>	8
<i>CONNECTIONS</i>	9
<i>SYSTEM SETUP FOR DVD MODE</i>	10
<i>REMOTE FUNCTIONS</i>	11
<i>HOW TO SEARCH</i>	13
<i>SYSTEM SETUP</i>	14
<i>TROUBLESHOOTING</i>	15
<i>USB COPY</i>	15
<i>COMMON OPERATION</i>	17
<i>FEATURES AND TECHNICAL SPECS</i>	17

## Safety Instructions

### Basic Safety Requirements

1. Unplug the unit during lightning storms or when you do not intend to use it for a long period of time.
2. To remove the plug from the electrical outlet, do not pull on the supply cable. Grasp the plug firmly and pull to remove.
3. If the supply cord is damaged in any way, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
4. Place the unit where there is good ventilation.  
Place on a flat, hard and stable surface.
5. Do not place the unit on a bed, sofa, rug or similar surfaces as this may lead to the ventilation openings being blocked.
6. Do not expose the unit to direct sunlight or place it in any abnormally hot locations.
7. Do not place the unit under any heavy object or in an unventilated place.
8. This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing.  
Take the unit to the authorised service centre for inspection and repair.
9. Due to the high risk of fire or electric shock, do not expose this unit to rain or moisture. Do not open the cabinet as dangerous high voltages are present inside the enclosure. Only qualified service personnel should attempt to open the cabinet.
10. There is a laser system inside this unit classified as CLASS 1 LASER PRODUCT.  
Do not stare directly into the beam as this may harm your eyes.
11. If it is very cold, please place the unit in a warm room and turn the power on for about an hour. After that, the unit will be ready to be used.
12. Always ensure that the product is unplugged from the electrical outlet before moving or cleaning. Clean it with a soft cloth slightly moistened with a mild detergent. Do not use any abrasive pads, scouring powder or solvents such as alcohol as they may damage the surface of the unit.
13. Do not use discs with scratches and/or deformities.



Cracked



Broken




Deformed

As a disc is rotated at a high speed, it is dangerous to play a broken or deformed disc. Do not apply any tape or glue to the disc as this could lead to damage of the player. Should there be a strange noise or vibration whilst playing, if the picture or sound skips, or if the picture is distorted, stop the player immediately.

## Remote Control Function Keys

**Note:** Use 2 x 'AAA' batteries (Don't included). Keep away from children.

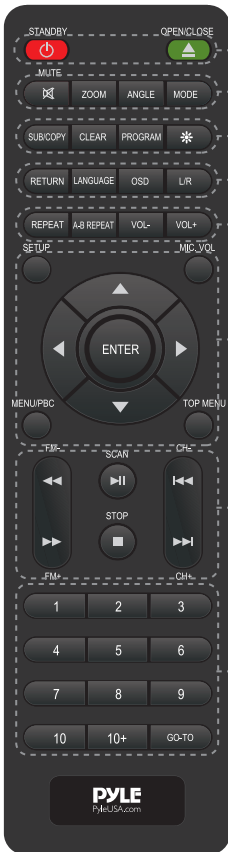

1. **Standby/Power on/off switch:** Press to open/close the unit power. In this mode, the unit is still consuming a small amount of power.  
**OPEN/CLOSE:** ▲ Open/Close the disc tray.
2. **Mute:** Press to mute or unmute the sound  
**Zoom:** Magnifies/Shrinks the screen image size  
**Angle:** Choose the different angles in the same image (Only support have multi-angle discs)  
**Mode:** Press to choose DVD/USB/FM/Line in (AUX)/BT modes
3. **SUB/COPY:** Press subtitle button to displays the subtitles in dvd mode (Only supports multi-subtitle discs) Copy music contents from loaded CD disc to inserted USB drive  
**Clear:** When using PROGRAM feature, press CLEAR to clear the input number.  
**PROGRAM:** First, press PROG to enter program status. Then, press ◀ ▶ ▲ ▼ to select the item. Press 0 to 9 to specify the 2-digit order (To reset, press clear). Press ◀ ▶ ▲ ▼ to select Start, press OK to start programmed playback. Press STOP ■ twice to clear the whole program.  
**LED:** Press to Turn ON/OFF the speaker light (Remote or unit Button). In standby mode, the LED light is OFF in default. In Power on mode, the LED light will be turned on automatically.

- 
4. **Return:** After pressing "Menu" (In ON mode), choose a program then press "Return" to top menu. (Only for VCD/SVCD/DVD discs)

**LANGUAGE:** Chose the different languages in dvd discs.  
(Only supports multi-languages discs)

**OSD:** Press OSD on the remote control to display single elapsed time, single remaining time, total elapsed time, total remaining time and other information about the disc.

**L/R: Press to set:** Stereo, Mono L, Mono R, Auto L, Auto R in SVCD VCD or CD format.

5. **Repeat:**

Repeat 1, Repeat ALL, RANDOM, RANDOM OFF (Only for USBVCD/CD discs)

Repeat chapter, repeat Title, repeat ALL, Repeat off (Only for DVD discs)

**IN USB mode:** Include Repeat directly

**In FM/Line in/BT mode:** Do not work

**A-B Repeat:**

Specifies the parts you want to play repeatedly.

1> During playback, press A-B REPEAT to specify starting point (point A).

2> When you reach the ending point (point B), press it again.

**Vol-/Vol+:** Decrease/increase the audio volume.

6. **SET UP:** Enter or exit the system setup menu.

**MIC. VOL**

**First press:** Mic volume

(Adjust volume totary to increase/decrease mic volume)


**Second press:** Echo

(Adjust volume totary to increase/decrease echo volume)



**Selects items, input position, etc.**

- For moving the display position of enlarged images
- For rotating JPEG images



**Enter:** Confirm menu selection

**Menu/PBC:** Display the menu

Sets PBC of VCD equipped with Playback. Control (PBC) Function to On/Off.

**Top Menu:** Displays the top menu

## 7. **FM-/FM+ (REV/FWD)**

**In FM mode**

Short press to next/previous channel

Press and hold to manual search

(Unit will stop to current scanning channel automatically)

**In DVD/USB mode**

Forward/Backward (x2, x4, x8, x20)

**Line in/BT:** Do not work

**PLAY/PAUSE/SCAN**

Play or pause track

Auto scanning the stations in FM mode

**STOP:** Stop playback

**CH-/CH+ (PREV/NEXT)**

**In FM/DVD/USB/BT mode:** Previous/Next track

**Line in/BT mode:** Do not work

## 8. **1-10+**

 
To select title/chapter track numbers etc.

e.g., 5: 5

15: 10+5 or 15 > —

**GO-TO:** Specifies the point of time where you would like to start playback.

## Front Panel

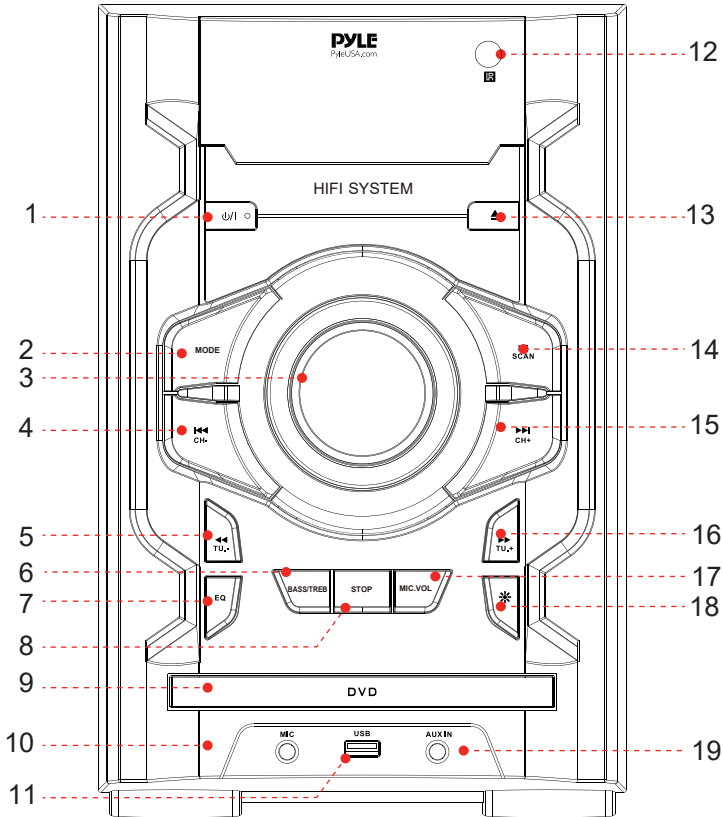

1. POWER BUTTON

2. MODE BUTTON

(DVD/USB/FM/Line IN (AUX)/BT)

3. VOLUME

4. PREV/CH-

5. PEV/TU-

6. TREBLE/BASS

7. EQ (Flat/Rock/Jazz/Pop/Classic)

8. STOP Button

9. DISC TRAY

10. MIC

11. USB PORT

12. REMOTE CONTROL SENSOR

13. OPEN/CLOSE BUTTON

14. PLAY/PAUSE/SCAN

15. NEXT/CH+


16. FWD/TU-

17. MIC VOLUME

18. LIGHT SWITCH

19. AUX INPUT

## Rear Panel

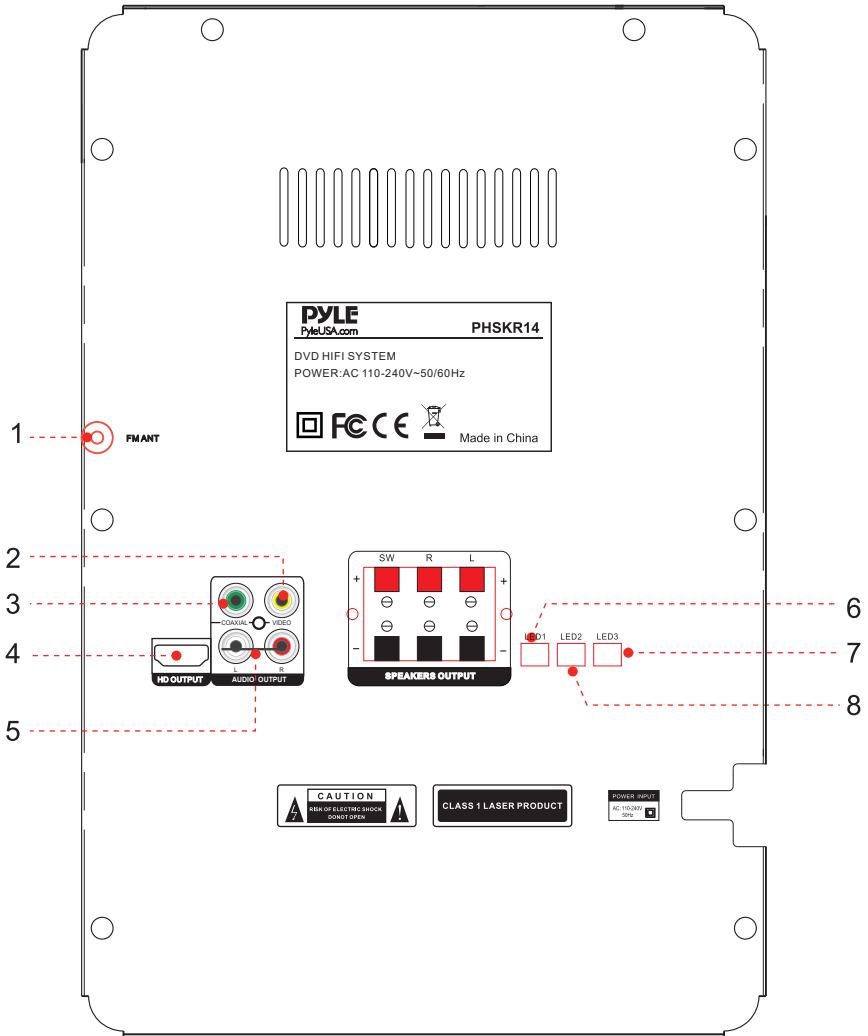 

1. FM ANT

2. VIDEO OUTPUT

3. COAXIAL OUTPUT

4. HD OUTPUT

5. L/R OUTPUT

6. LED 1


7. LED 3

8. LED 2



# CONNECTIONS
 
## Connecting to a TV Set

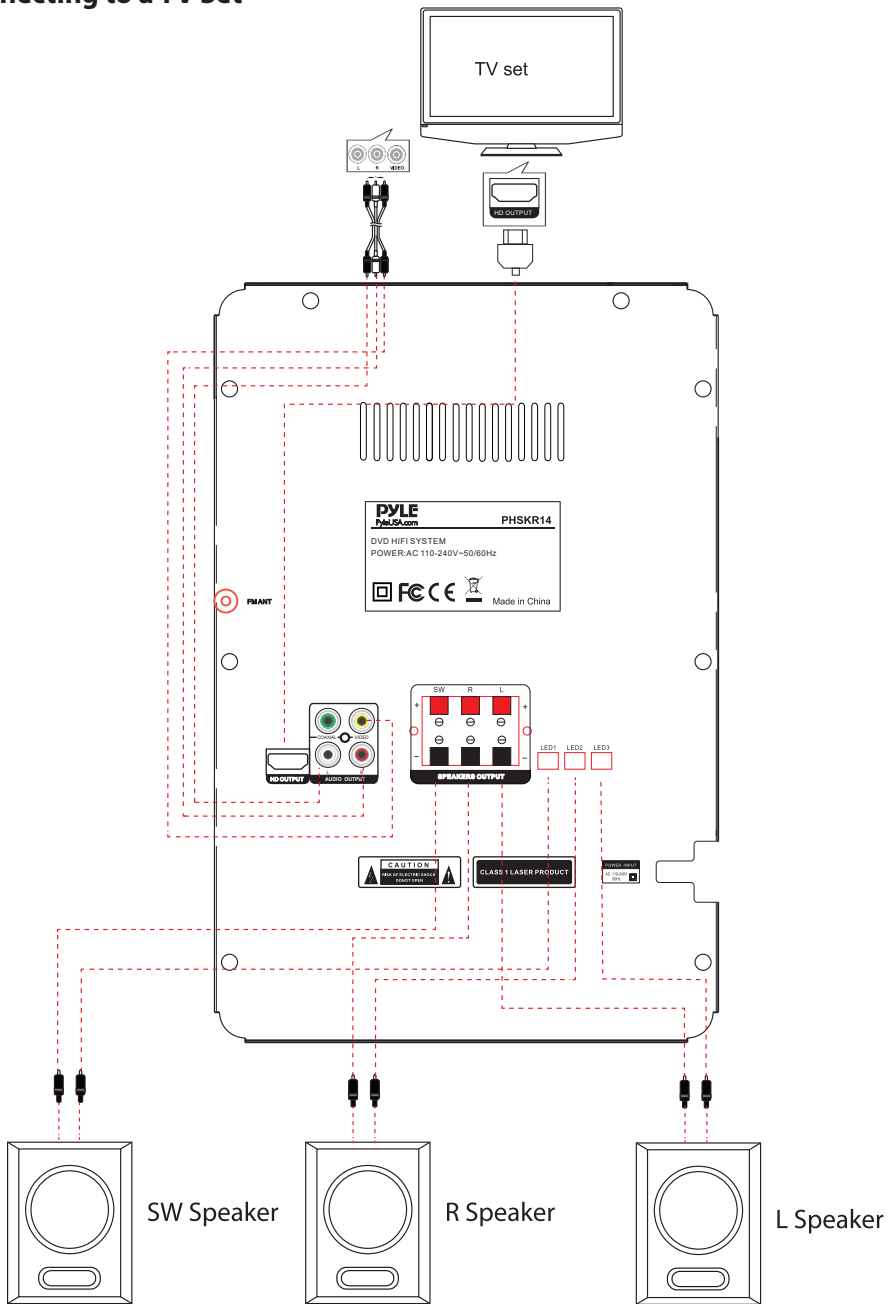

## SYSTEM SETUP FOR DVD MODE

### Setup

Follow the steps below to check the connection:

1. Turn **ON** the TV and shift to "VIDEO INPUT".
2. Turn **ON** other units such as an audio or VCR if they are connected.

### Turning the Unit ON:

1. Press the **POWER** button on the panel. The DVD player will automatically read a disc if it has already been inserted in the player.
2. Press the **OPEN/CLOSE** button to open the disc tray to insert or replace a disc.
3. Insert a disc onto the disc tray and press **OPEN/CLOSE** button again to close the disc tray. The Screen will display disc type.
4. The DVD player will select the states of playback.

DISC FORMAT	STATE OF PLAY
CD/ MP3	First track.
VCD/SVCD with PBC	From the menu screen, press the PBC button on the panel or on the remote control to play back from the beginning.
VCD/SVCD without PBC	Automatically plays from the beginning.

**Note:** PBC is the abbreviation for PLAYBACK CONTROL. If a disc has PBC, it means that it has a menu from where you are able to choose a track, chapter or other instruction at the beginning of playback.

### Playing a Disc

ACTION	BUTTON ON PANEL	KEY ON REMOTE CONTROL
Play	PLAY/PAUSE	PLAY
Pause	PLAY/PAUSE	PAUSE
Next track or chapter	NEXT	NEXT
Previous track or chapter	PREV	PREV
Stop	STOP	STOP

### Turning the Unit OFF

Press the **STOP** button, then press the **OPEN/CLOSE** button to open the disc tray. Remove the disc and close the disc tray by pressing the **OPEN/CLOSE** button again. Then press the **POWER** button to turn off the player. It is recommended that discs are removed before the player is turned off. Remove the plug from the outlet on the wall if the player will not be used for a long time.

## REMOTE FUNCTIONS

NO.	OPERATION	DISC	INSTRUCTION
1	STOP RESUME	ALL FORMATS	Press STOP button to enter Stop mode. The TV screen will display the starter logo. With certain disc types, such as DVD, the player can resume playback from the point where it was stopped. Press RESUME to resume playback from the location where playback was stopped or from the beginning of the disc. Please note: The player will go into SCREEN SAVE MODE if there is no activity within one minute. Press any key to return to NORMAL mode.
2	FAST FORWARD	VCD SVCD DVD	Press FWD button to fast forward through the disc. Each time the FWD button is pressed, the fast forward motion speed changes. Press PLAY to resume normal playback.
3	REWIND	DVD SVCD VCD	Press REV button to rewind through the disc. Each time the REV button is pressed, the rewind motion speed changes. Press PLAY to resume normal playback.
4	BACKWARD	DVD	To repeat a chapter, DVD title or the whole DVD content, please see below: <ul style="list-style-type: none"> <li>- Press REPEAT once to repeat the contents of the chapter.</li> <li>- Press it twice to repeat the contents of the title.</li> <li>- Press it three times to repeat the contents of the DVD disc.</li> <li>- Press it four times to cancel the repeat mode.</li> </ul>
5	A-B REPEAT	ALL	To repeat a specific section of the DVD content, please follow the steps below: Press the A-B key to set Point A as the starting point. Press the key again to set Point B as the end point. The part between A and B will be played repeatedly. Press A-B key a third time to cancel this function.
6	ZOOM	DVD SVCD	Press the "ZOOM" button continuously to increase the size of the picture by X1, X2 or X4. Use the "UP", "DOWN", "LEFT" and "RIGHT" buttons to move the picture.
7	RETURN	DVD SVCD VCD2.0	Press this key to return to the main menu.
8	PBC (Playback Control)	SVCD VCD2.0	The PBC allows the user to play Video CDs interactively. If PBC is ON, the user can use the digit buttons to select a track but only from the menu. If PBC is OFF, the user can select the track directly.
9	MENU	DVD	Press this key to play the selected menu.
10	DIRECTION& ENTER	ALL	Press this key to choose the selected column you want, and then press "ENTER" to confirm.
11	LANGUAGE SUBTITLE	DVD	Press this key to shift from one language(subtitle) to another(need disc support).

12	L/R	DVD SVCD VCD	Continuously press this key to select left channel, right channel or stereo. You should first choose audio output as 2 CH in the setup menu.
13	MUTE	ALL	Press "MUTE" to turn off sound and press again to turn on.
14	VOLUME+/-	FORMATS	Press "VOLUME" to increase and decrease the sound.
15	OSD	DVD SVCD VCD	On Screen Display (OSD). Users can select the whole setup menu and on-screen display language.
16	PROG	SVCD VCD CD	Press the PROG button to setup the playback sequence manually, i.e. if you want to playback track 2, 11 and 102, do the following: 1. Press 2, 2. Press+10,1 3. Press +10 ten times, then 2. Finally, press "PLAY" to go to your chosen track.
17	SETUP	ALL FORMATS	Press the "SETUP" button to select the various functions of your player, for example, audio output, parental control, etc. Refer to chapter 6 for further details.

## HOW TO SEARCH

 
DISC	OPERATIONS	TV SCREEN
DVD	Press the GO-TO button once to display the Screen Search menu. Press twice to cancel. In the Search Menu, you can use the UP/DOWN cursor buttons to select an item. Then press PLAY to confirm.	TITLE: 01/06CH CHAPTER: 001/002
DVD	<ul style="list-style-type: none"> <li>•To play Title 2, press GO-TO on the remote control, then press 2 and then PLAY.</li> <li>•To play Title 1 chapter 5, press GO-TO on the remote control, RIGHT, then press 5 and PLAY.</li> </ul>	TITLE: 2/2
	<ul style="list-style-type: none"> <li>•Press "GO-TO" again to directly input a specific time for example:</li> <li>•If you want to play the DVD at 1:23:45 point (one hour, twenty third minute and forty fifth second) input 1,2,3,4,5 and press PLAY.</li> <li>•If you want to play the DVD at the 00:23:45 point (twenty third minute and forty fifth second) input 2,3,4,5 and press PLAY.</li> </ul>	
SVCD/ VCD/ CD/	Press "GO-TO" to directly input the time. Please note: <ol style="list-style-type: none"> <li>1. Turn off PBC for SVCD and VCD 2.0 before using the search function.</li> <li>2. CD: You may directly input the track number you want to listen to. In other words, you do not need to use the search function.</li> </ol>	
MP3	The search function is not available when playing MP3 discs.	

## SYSTEM SETUP

### TV SYSTEM

Europe: PAL

USA: NTSC

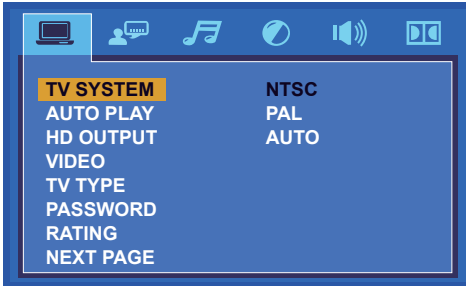


### LANGUAGE SETUP

Select different on- Screen Display (OSD) language.




### AUDIO SETUP

 Use this menu to select your audio output.

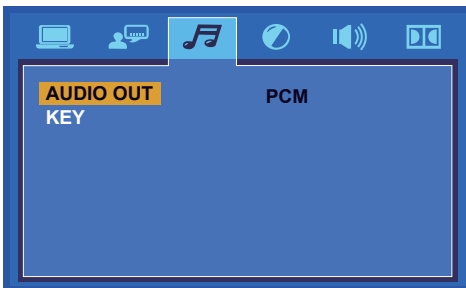


### BRIGHTNESS

 Use UP/Down arrows to adjust the brightness.

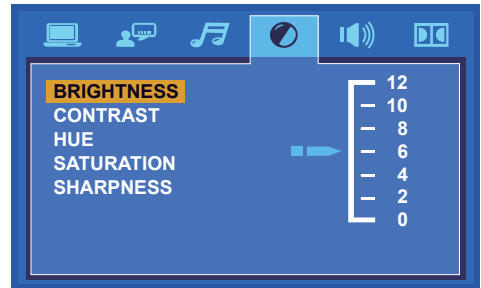

### DOWNMIX

 
If two channels are required, select the stereo option.

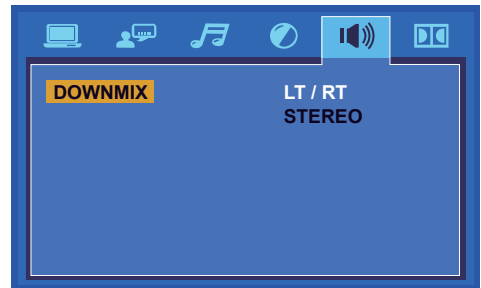

### OP MODE

For night time playing, select LINE OUT to set volume at lower level.

 For daytime playing, select RF REMOD to set volume at a higher level.

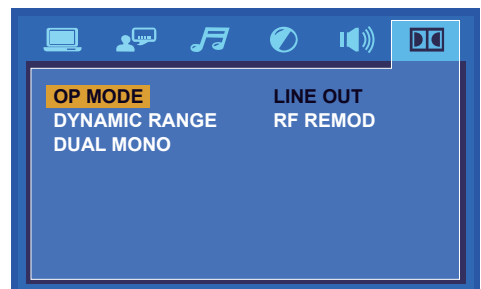

## TROUBLESHOOTING

Before repairing, please take a look at the following problems and possible solutions first.

NO.	PROBLEM	SOLUTION
1.	"No Disc" displayed on screen.	If you place the disc on the tray and the player displays "NO DISC" once loaded: 1. Check whether the disc is placed correctly (label side up). 2. Check the format of the disc. 3. Check whether the disc is dirty or damaged. 4. Clean the lens - this usually needs to be done after 20 hours of playback.
2.	No sound.	1. Set to current connecting channel. 2. Replace audio connection or connect correctly. 3. Ensure connected unit works properly or turn volume up.

## USB COPY

1. The USB storage capacity range must not exceed 16GB.
2. Only insert a USB where there is no disc in the tray.



3. Press "**MODE**" button on the unit or "**SOURCE**" on the remote control:

DVD and USB will appear on the TV screen. Please use "↑" and "↓" buttons to select USB. Then press "ENTER" for the USB to be read.

**Please note:** If a disc needs to be read after a USB has been read, please press "MODE" on the unit or "SOURCE" on the control and use "↑" and "↓" buttons to select DVD.

### To Copy an MP3 File:

When playing an MP3 disc, press "COPY" button on the remote and enter the copy selection interface; the content that can be copied are the tracks of the current disc being played.



### **Selecting a Program to Copy:**

Move the Direction cursor over the program to be copied. If only some of the program is to be copied, move the cursor over the upper program selection, then press confirm to cancel the selection. Press the Direction buttons on the remote control to select the program to be copied, then press the Confirm button.

### **Copy:**

Move the highlight bar to "START" option; at this time the information about this copy will be shown on the right hand Side (TOTAL TRACKS, TOTAL TIME and TOTAL SIZE). Then press "ENTER" key to start copying and the system will write the CD in MP3 format onto the designated USB. When copying at normal speed, you can listen to the content to be copied at the same time; when selecting 4x speed, it will be muted.

### **Please note:**

When you press the "ENTER" key to switch speeds, there will be a slight sound which continues for a few seconds.

### **Cancel Copy:**

During copy, you can move the highlight bar to "CANCEL" option and press "ENTER" key to confirm.

### **Return from Copying Screen:**

Move the highlight bar to "RETURN" option and press "ENTER" key to confirm return.

### **Please note:**

Before copying, ensure that the available space on the USB is enough for the size of the file(s) to be copied.



## **COMMON OPERATION**

### **Wireless BT Connectivity:**

- Hassle-Free Pairing, Simple Music Streaming
- Compatible with All of Today's Latest Wireless BT Devices (Smartphones, Tablets, Laptops, Computers, etc.)
- Wireless BT Version: 5.0V
- Wireless BT Network Name: 'PyleUSA'
- Wireless BT Range: Up to 30.0' ft.

### **To connect an external device to this unit via BT:**

1. Press "SOURCE Switch" on the remote control or on the panel to select the BT function. The corresponding screen will then display "BT" indicating that the BT function is on.
2. Ensure the BT function is on on the external device and search for PyleUSA. Once found, click on it and pair. Some devices may need a pin code to connect; try 0000 or 1234. Once connected, you will hear a signal indicating that the connection is successful.

### **Aux In Function Operation**

Switch on the unit. Press the MODE button to switch to AUX IN mode. Connect the external music player using the cable. The unit will start playing the selected music on the external player. Using the remote control, play, pause or stop the music being played. Please note that in Line Input mode, some functions may not be available.

### **FM Radio Function Operation**

Switch on the unit. Press the MODE key to switch to FM mode, then press the SCAN key to automatically search and store radio channels.

When the search is complete, the unit will play the first stored channel.

Press NEXT or PREV button to select the next or previous radio station. If the signal is not good, you can adjust the signal by pressing the REV or FWD button. For better sound quality, make sure that the antenna is fully extended.



## **Features:**

- Compact & Portable Media Entertainment Unit
- Built-in BT for Wireless Audio Streaming
- Sound System: 8" Subwoofer - 5.25" medium speaker -3" Tweeter
- LED Digital Display Screen
- DVD/CD function
- HD function
- Coaxial function
- FM Radio
- USB Flash Drive
- Aux (3.5mm) Output
- 1/4" Two Microphone Inputs
- EQ (Flat/Rock/Jazz/Pop/Classic)
- Connect & Stream Audio from External Devices
- Dual Amplifier for Better Sound Performance
- Audio-in for Portable Music Playback
- High-Quality Sound, Powerful Bass
- Sleek and Compact Design
- Treble and Bass Adjustment
- Lights on Knob and Speakers (Blue)
- Blue Colored Speaker Lights
- DVD/USB/FM radio/Line IN/Karaoke
- Digital Amplifier IC for Strong Sound

## **What's in the Box:**

- Wireless BT Streaming DVD Stereo System
- Remote Control
- User Manual

## Technical Specs:

- Power Output: 800 Watt MAX
- Impedance: 4 Ohm+8 Ohm
- Frequency Response: 120Hz-15KHz
- Sensitivity (1w/1m): 650mV
- Signal to Noise Ratio: 52dB
- T.H.D.: <10%
- Low Frequency: 120Hz-4KHz
- High Frequency: 4KHz-15KHz
- Remote Control Battery Operated, requires (2) x 'AAA' Batteries (not Included)
- Digital File Support: MP3, MPEG4, WMA, WAV, AVI, MPG, 3GP, FLV, FLAC.
- Maximum USB Flash Support: 32GB
- Power Supply: 110/240V
- Dimensions (L x W x H): 12" x 15.6" x 36" –inches



### California Prop 65 Warning

**⚠️ WARNING:**

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)



# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE

***Questions? Issues?***

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)

