 


# ICE MAKER USER MANUAL



**PICEM15**

## **Description**

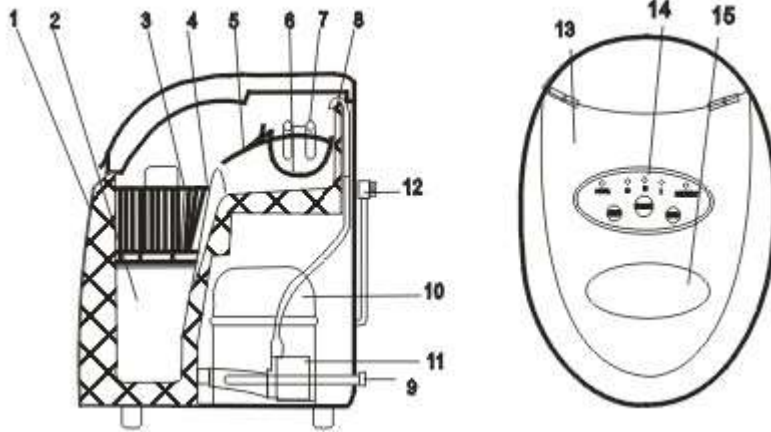

- |                        |                     |
|------------------------|---------------------|
| 1. Inner Liner         | 9. Water Drain Plug |
| 2. Water Reservoir     | 10. Compressor      |
| 3. Ice collecting Tray | 11. Water Pump      |
| 4. Ice Bin Full Sensor | 12. Power Cord      |
| 5. Ice Shovel          | 13. Lid             |
| 6. Water Tray          | 14. Control Board   |
| 7. Evaporator          | 15. Window          |
| 8. Water Inlet Tube    |                     |

 
## **Function**


Instant making ice  
3 different ice sizes  
Ice full alarming, deficient water alarming  
Crystalline ice bullet warhead  
12pcs of ice cube per cycle


## **Before/First Use of Your Ice Maker**


1. During transportation, the incline angle of the cabinet should not be over 45°. Do not turn the Ice maker upside down. As this may damage the compressor and sealed system.
2. Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
3. The Ice maker should be placed horizontally on a level surface. To ensure proper ventilation for your Ice maker allow 150mm of space at the top, the back and on each side. Do not install the Ice maker near an oven, radiator, or any other heat source.
4. Before using the Ice maker for the first time, please wait 2 hours after positioning it, and keep the front lid open for at least 2 hours.
5. Ensure that the voltage indicated on the ice maker corresponds with the voltage in your home.
6. Pure water is not allowed to be used on this unit, spring water is recommended.


## Control Panel Operation

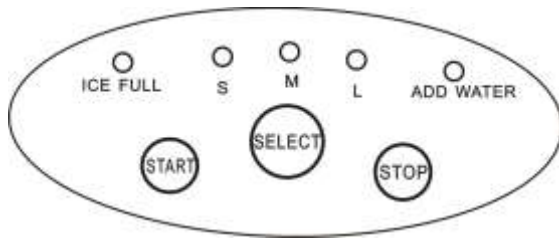




: Press it to turn unit on.

: Press it to turn unit off.

: Ice size selection (S) small, (M) medium or (L) large. (The selected mode will stay as selected unless changed or there is a power failure) The default setting is medium.

: This light will come on with a long noise 'DI' noise. You will need to add water and press the 'STOP' then the 'START' button to restart the Ice maker.

: This light will come on with a beeping noise when the ice has reached the maximum capacity of the storage cabinet. Press  button then press  button to restart the Ice maker after some of the ice has been taken away.

## Operating Instructions

Step 1.


Open the lid and fill the water reservoir with water.

**Note: Make sure the water level in the water reservoir is not over the Ice collecting tray.**

Step 2.


Connect to the power.

Step 3.

Select desired ice cube size by pressing 


**Note: Please select the (S) when ambient temperature is below 15°C. When the ambient temperature is higher than 30°C, Large ice cube sizes are recommended.**

Step 4

Press  button to turn unit on. The ice maker begins to work.

**Note: For the first three cycles, the ice may be small and irregular in size.**


Step 5

If indicator  is red with 'DI' noise, then take out the basket, then add water as per step 1, then press

, at last press  to restart the ice maker


**Note: If no water is pumped up to the water tray over two cycles but the water in water tank is enough, then please open the drain cap, and let several drops water runs out.**

#### Step 6

If indicator  **ICE FULL** is in red with beeping noise, please take out the ice with the scoop.

**Note: When the ice collecting tray is full please remove the ice immediately, Do not allow the ice collecting tray to overfill.**

#### Step 7

Press  button to stop the machine.

#### Caring

1. Clean the inner liner, ice collecting tray, water box, ice shovel and evaporator frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the Ice maker. Do not spray Ice maker with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before starting.
2. Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. If the icemaker is reused after a long time, the water pump may not pump sufficient water due to an air block, the deficient water indicator turns on in this case . To correct this press the START button again, then the icemaker will work normally.
4. To ensure the cleanliness of the ice cubes, water in the water reservoir should be replaced every 24 hours.
5. If the compressor stops for any reason such as water shortage, too much ice, power off, etc... Do not start the system right away, wait 3 minutes, and then re-start the Ice maker.
6. Always use fresh water before starting ice production either at initial installation or after a long shut-off period.

## **Troubleshooting**

1. Please note, if a power failure occurs due to disconnection of the power cord, or the off power button has been pushed off during an ice making cycle, small ice chips may formed and lodge in the automatic shovel causing it to jam. If this occurs, the ice chips maybe removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, then restarting.
2. Please restart the ice maker by pressing Stop and then Start. If the Ice shovel does not push the Ice into the Ice collector after the formed Ice drops from the evaporator finger while at the same time the M light is on, check to see if the water tray is horizontal or balanced. If not then adjust by pressing the Ice shovel lightly with your finger. Then re-start the Ice maker.

Problem	Possible Cause	Suggested Solutions
The compressor works abnormally with a Buzzer noise	The voltage is lower than recommended	Stop the Ice maker and do not restart until the voltage is normal.
Water shortage indicator light is on	1. There is no water 2. The pump is full of air	1. Press the stop button, fill with water, wait 3 minutes and press the start button to restart. When the water has reached the fill line the ice maker will restart automatically. 2. Open the drain cap, and let several drops water runs out.
Indicator lights on display are not on	Blown fuse/ No power	Replace fuse / Turn power on
The Ice made is too large and with pieces sticking together.	1. Wrong ice size is selected 2. Ice of previous cycles left in the water tray 3. The evaporator is too low	1. Stop the unit right away, restart the unit till the ice in water tray melt down 2. Select the M or S ice size 3. Shift the evaporator a little.
Conditions for Ice making Cycle are right but no ice is made.	A. There is no refrigerant in the compressor B. Compressor is broken down Fan motor is broken	call for service
The lights of ice full and deficient come at in the same time.	Water tray is blocked by ice cube	Clear the ice cube under the ice shovel pull out the plug and insert It again then press the "START" button, two minutes later the machine will restart automatically
Machine keeps running, but the water is warmer than the normal water	The magnetic valve is broken	Replace the magnetic valve

## **WARNING**

If the power cord is damaged; it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

Fill with potable water only.

It is normal for the compressor and condenser surface to reach temperatures between 70°C and 90°C during operation and surrounding areas may be very hot.

Due to fast freezing, ice cubes may appear “Cloudy”. This is air trapped in the water and will not affect quality or taste of ice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Do not immerse in water.