



USER'S MANUAL

www.pyleaudio.com



PICL36B

**Play & Charge Docking System for iPhone/ iPod w/
Aux Input Clock Radio/ FM receiver & Dual Alarm Clock**

Warning

Signal Word Definitions

DANGER – Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. This symbol appears only in the most extreme situations.

WARNING - Indicates a potentially hazardous situation which could result in death or serious injury.

CAUTION - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/ moderate injury or product/ property damage. It also alerts against unsafe practices.



This symbol is a warning sign alerting you of "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This is a warning sign alerting you of important instructions accompanying this product.

READ ALL INSTRUCTIONS BEFORE USE

Always follow basic safety precautions when using electrical products, especially when children are present.

Congratulations on your purchase of this alarm clock with iPod/iPhone dock. To get the most from your device, please take a few minutes to read these instructions.



WARNING - To reduce the risk of fire, electric shock or serious personal injury. Do not open the unit. This product is intended for indoor, non-industrial, non-commercial use; do not use the product outdoors. Do not mount this product on a wall or ceiling.

1. Always follow basic safety precautions when using electrical products. Children should be supervised to ensure that they do not play with appliances.
2. Do not allow children to operate the unit without adult supervision.
3. Read this instruction manual carefully before you attempt to use the unit.
4. Consult your dealer or service personnel if you have further questions about the operation or safety of the unit.
5. Do not expose the product to temperatures above 35°C. Keep it in moderate climates.
6. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed near the product. **Dry location use only.**
7. No naked flame sources, such as candles, should be placed on the product.
8. Keep the power cord and product away from heated surfaces.
9. Keep at least 5 cm of space around the unit for sufficient ventilation.
10. The ventilation holes should not be blocked up by things such as newspapers, dusters, curtains, etc. Place the product where there is good air circulation.
11. Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet; do not pull on the power cord.

13. Dispose of used batteries in an environmental friendly way.
14. Do not place the unit near TV, speakers, and other objects that generate strong magnetic fields.
15. Do not clean the unit with strong chemical agents.
16. This product has no user-serviceable parts. Do not attempt to dismantle or repair this unit yourself. This unit should be repaired by qualified service technician only.
17. Do not operate the unit if it is not working normally or has been damaged in any way. Turn the unit off. Unplug it from the power source. And consult service personnel.
18. Do not remove any fixed cover. This will increase the chance of electrical shock.
19. Press the player's buttons gently. Pressing them or the screen too hard can damage the player.
20. Do not push any objects into holes, slots, or openings on the unit. This could result in fatal electric shock.
21. Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product and loss of data.
22. Care is required for the use of this apparatus in tropical and/ or moderate climates.
23. Do not use the player in an extremely dry environment, as this can lead to static discharge, which can damage the player.
24. Only use attachments/ accessories specified by the manufacturer.
25. Unplug this apparatus during lightning storms or when it is unused for long periods of time.

Compliance with FCC Regulations

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Content

Warning	1
Preparation for Use	4
Location of Controls and Indicators (Main Unit)	5
Location of Controls and Indicators (Remote)	6
Installing the Battery	7
Setting the Clock	8
Setting the Sleep Timer	8
Setting the Alarm Set	8
Snooze/Repeat Alarm	8
Stopping the Alarm	8
Dimmer	9
Light	9
Listening to the FM Radio	9
Presetting FM Channels	9
Recall Preset Station	9
Docking an iPhone/iPod	9
Listening to iPhone/iPod	10
Charging your iPhone/iPod	10
Auxiliary Input	10
Trouble Shooting Guide	11
Technical Specification	11

Preparation for Use

1. Standard accessories

Unpack the unit carefully. Carefully remove all the accessories from the display carton. We recommend that you save the box and packing materials, in case you wish to store the unit. Don't remove any labels or sticker on the rear of the unit and adaptor. Before setting up the unit, verify that the following accessories are present :

- Instruction manual
- 1 x AC/DC power adaptor
- Remote control

2. Power source

This unit is supplied with an AC adaptor, take the following steps to connect the adaptor.

- a. Unwind the power cord of the AC/DC adaptor to its full length.
- b. Connect the DC plug of the AC/DC adaptor to the DC socket on the rear of the unit.
- c. Plug the AC adaptor to the AC outlet (100-240V ~50/60Hz). Connecting this system to any other power source may cause damage to the system. For sufficient ventilation, Keep other objects at least 10cm away from the unit.


3. AC Adaptor Operation

- a. Insert one end of the AC adaptor into the DC jack on the back of unit.
- b. Connect the AC plug of AC adaptor to an AC power source.

Note: Unplug the AC adaptor and disconnect the DC jack when the unit is not in use for a long period of time.

Location of Controls and Indicators


A. Main Unit

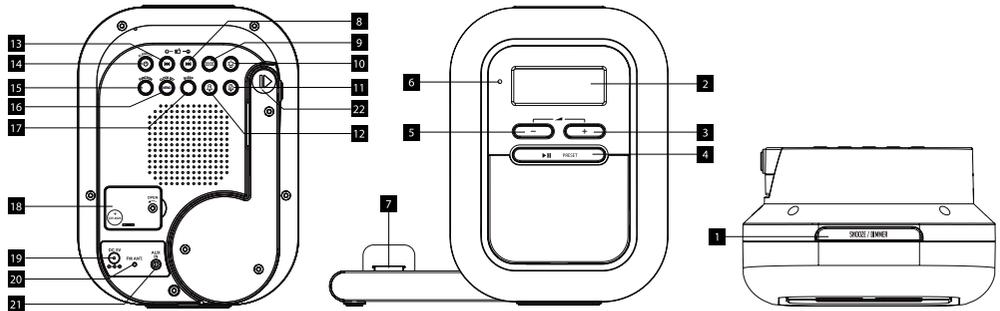

1	SNOOZE/ DIMMER	In alarm mode, pauses alarm for 9 minutes./ Reduces screen brightness.
2		LCD Screen
3	◀ +	Volume Up.
4	▶▶ /PRESET	In iPod/iPhone mode, plays or pauses./ In radio mode, goes to next preset station.
5	▶ -	Volume Down.
6		Infrared Sensor
7		DOCK for iPhone/iPod: to recharge iPhone/iPod.
8	▶▶▶	In iPod/iPhone mode, goes to next audio track./ In radio mode, searches for radio station.
9	00:00	In radio mode, displays FM station.
10	💡	Brightness Adjustment.
11	AL.2 / 📌	Sets Alarm2.
12	AL.1 / 📌	Sets Alarm 1.
13	◀◀	In iPod/iPhone mode, goes to previous audio track./ In radio mode radio, searches for radio station.
14	AI ARM OFF/ 🔌	On/Off/Turns alarm off.
15	FUNCTION	Source Selection (iPhone/iPod, radio or auxiliary).
16	CLOCK SET/ MEMO	In standby mode, sets clock./In radio mode, stores stations.
17	SLEEP	Sleep Function.
18		Battery Compartment
19	DC outlet	Mains Adapter Plug.
20		Wire Antenna
21	AUX IN	Auxiliary Peripheral Socket.
22	▾	Open/Close iPod/iPhone docking station holder.

Location of Controls and Indicators

B. Remote Control

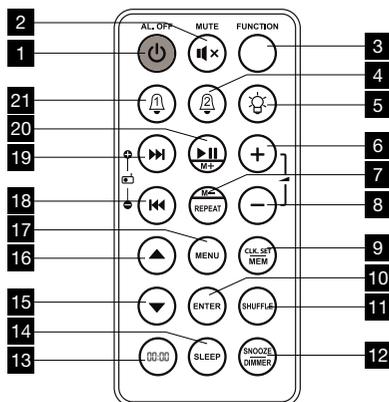


1	AL.OFF /	On/Off/Turns alarm off.
2	MUTE /	Sound On/Off.
3	FUNCTION	Source Selection (iPhone/iPod, radio or auxiliary).
4	AL.2 /	Sets Alarm 2.
5		Brightness Adjustment.
6		Volume Up.
7	REPEAT/M-	In iPod/iPhone mode, plays one or all of the tracks repeatedly./In radio mode, goes to the last preset station.
8		Volume Down.
9	CLK SET/MEM	In standby mode, adjusts clock./ In radio mode, stores stations.
10	ENTER	In iPod/iPhone mode, confirms selection.
11	SHUFFLE	In iPod/iPhone mode, random playback.
12	SNOOZE/DIMMER	In alarm mode, pauses alarm for 9 minutes./ Reduces screen brightness.
13		In radio mode, displays the current radio station.
14	SLEEP	Sleep Function.
15		Browse down iPhone/iPod Menu.
16		Browse up iPhone/iPod Menu.
17	MENU	In iPod/iPhone mode, iPod/iPhone menu display.
18		In iPod/iPhone mode, goes to previous audio track./ In radio mode, radio station search.
19		In iPod/iPhone mode, skips to next audio track./ In radio mode, radio station search.
20		In iPod/iPhone mode, plays track./In radio mode, goes to next preset station.
21		Sets Alarm 1.

Installing the battery

a. Main unit :

- Remove a screw of battery door on the rear of the main unit.
- Insert a 3V lithium battery (CR2025), following the polarity(+)
- as shown on the diagram of the battery cover.
- Replace the battery door with fit a screw.

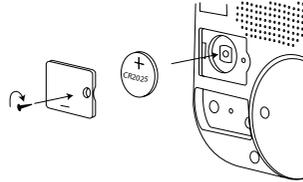

b. Remote control :

- Remove the battery compartment cover on the bottom of the remote control, by pushing the tab to the right while removing the cover.
- Insert a 3V lithium battery (CR2025 or equivalent) following the polarity(+) as shown on the diagram on the rear of remote control.
- Replace the battery compartment cover.



Setting the Clock

The clock display will show "00:00" when first plugged in.

1. Press and hold the **CLK SET** button more than 1 S, "24H" on display will begin blinking.
2. Press the **▶▶ / ◀◀ (SKIP)** buttons to select 12 hour or 24 hour format.
3. Press the **CLK SET** button again to save the hour format setting. The hour digit will blink.
4. Press the **▶▶ / ◀◀ (SKIP)** buttons to adjust the current hour.

Note: For 12 hour format, make sure the hour is correctly set, so that AM or PM is correctly displayed.

5. Press the **CLK SET** button again to save the hour setting, the minute digit will blink.
6. Press the **▶▶ / ◀◀ (SKIP)** buttons to adjust the minute.
7. Press the **CLK SET** button again to finish setting the time.

Setting the Sleep Timer

1. While playing the Radio, iPod / iPhone or Aux, press the SLEEP button once will turn sleep timer on, SLEEP icon and the sleep time 120 minutes will light up on the LCD.
2. Press SLEEP button successively to change the sleep time to 90, 60, 30, 15, OFF minute.
3. When the desired sleep time is shown, leave it for 5 seconds and the sleep time will be set.
4. After the set sleep time has expired the music system will power off.

Note: In AUX mode, if the playing time of the external device is shorter than your selected sleep time, the music will stop when the external device shuts off.

Setting the Alarm set

This unit provides two different wake up time: ALARM 1 and ALARM 2. You can choose to use them independently or simultaneously:ALARM 1, ALARM 2 or both ALARM 1 and ALARM 2.To set alarm should be done in power off only, follow below steps.

1. Press the **AL1 (AL2)** button, the AL1 (AL2) and sound source icons will start blinking.
2. Press the **▶▶ / ◀◀ (SKIP)** buttons repeatedly to change the sound source mode to BUZZ,  (Radio),  (iPod / iPhone), when desired sound source is selected, press AL1 (AL2) button to confirm and hour digit will blink on LCD.
3. Press the **▶▶ / ◀◀ (SKIP)** buttons to adjust the desired hour.
4. Press the AL1 (AL2) button again to save the hour then minite digit will blink.
5. Press the **▶▶ / ◀◀ (SKIP)** buttons to adjust minutes.
6. Press the **AL1 (AL2)** button to finish setting the wake up time.

Note: For the 12 hour format, make sure the hour is set so that AM or PM is correctly displayed.

Snooze/Repeat Alarm

After the alarm turns on, you can press the **SNOOZE** button for a few extra minutes sleep (SNOOZE icon will appear on LCD screen). The alarm will stop for approximately 9 minutes and then repeat. Snooze operation can be repeated several times if desired, but after one hour the alarm will not turn "On" again.

Stopping the Alarm

During the alarming period, press AL.OFF button to shut off the alarm, and the unit will turn on the alarm again at the same time on the follow day.

If press and hold AL1/2 button, AL1/2 icon will turn off and alarm do not repeat next day.

Dimmer

If you find the display to be too bright for sleeping, press the **DIMMER** button to the medium or low bright.

Light

1. Press the **LIGHT** button to turn on the LED lamp to bright, repeatedly to change the light in 4 brightness. (OFF, L1, L2, L3, L4).
2. The light will also light automatically one minute before the alarm time is reached and increase to the full brightness level when the alarm time is reached.

Listening to the FM radio

Make sure the FM antenna has been fully extended as this will affect your radio reception.

1. Press the  button to turn on the unit.
2. Press the **FUNCTION** button to enter FM mode.
3. Press and hold the **TUN+** or **TUN-** buttons to auto scan up or scan down frequency. If a FM station is detected, auto scan stops and broadcast starts.

Note: During auto scan, unit speaker mutes.

<u>To</u>	<u>Press</u>
scan radio station manually	◀◀ or ▶▶ repeated
scan radio station automatically	◀◀ or ▶▶ and hold for 2 seconds
stop auto-tuning	◀◀ or ▶▶ once

Presetting FM Channels

1. Follow the instructions for tuning the FM radio.
2. Once the desired station is reached, press the **MEM** button, "MEM" icon and preset channel number will appear on the LCD screen.
3. Press the **M+** button repeatedly to select the memory station to be stored (1-20).
4. Press the **MEM** button again to finish store.
5. Tune to another station and repeat steps 2 to 4 to store station in other preset locations.

Recall Preset Station

1. Press the **M+** or **M-** button once, preset station number will appear on the LCD screen.
2. Press the **M+** or **M-** button repeatedly to select the desired preset station.

Docking an iPhone/iPod

1. Insert iPhone or iPod onto the docking connector.
2. You will now be able to control your iPhone/iPod from the unit control panel or Remote control. Using the **▶▶** (**PLAY/PAUSE**), **▶▶** / **◀◀** (**SKIP**), **▲** (**UP**), **▼** (**DOWN**), **ENTER**, **MENU**, **REPEAT**, **SHUFFLE** buttons.

Note: Please be careful when seating your iPhone or iPod onto the dock to avoid damaging the 30-pin connector in the iPhone/iPod or docking system.

Listening to iPhone/iPod

1. When the iPhone/iPod is docked and in standby mode, press the  (STANDBY) button to turn on the unit.
2. Press the **FUNCTION** button to select iPod mode and iPod icon shown on LCD display.
3. Press the  (PLAY/PAUSE) button to play/pause the iPhone/iPod during playing.
4. Press the  /  (SKIP) buttons to skip next / previous song.
5. Press and hold the  /  (SKIP) buttons to fast-forward or fast-rewind playback.
6. Press the **MENU** button to enter menu of the iPhone/iPod, use the  (UP) /  (DOWN) buttons (in the Remote) to move through an iPhone/iPod menu system. Press the **ENTER** button to select song.
7. During iPhone/iPod playback, press once/twice the **REPEAT** button to play repeatedly (repeat 1 or repeat all). Press 3 times **REPEAT** button to cancel the repeat function.
8. During iPhone/iPod playback, press **SHUFFLE** button (in the Remote) to random playback. Press **SHUFFLE** button again to cancel this function.

Charging your iPhone/iPod

When you docked your iPhone/iPod and it will automatic recharges (until fully charged).

Note: *iPod shuffles will NOT charge.*

Auxiliary Input

This unit includes an **AUX** input jack to allow you to connect external devices, such as an iPod shuffle or MP3 player or other digital audio player, and listen to the music on your external device through the speakers of this unit. Press **FUNCTION** button to select "AUX" mode and "AU" appears in the display, then connect the headphone or lineout jack of your external device to the AUX input jack located on the rear panel of this unit. the connection cable is not included.

Trouble Shooting Guide

Should the system exhibit a problem, please check the seeking service.

Symptom	Possible cause	Solution
Radio Noise or distorted No sound	The broadcast station signal is weak. Unit is not in radio mode. Volume is at minimum.	FM antenna has been fully extended as will affect your radio reception. Recalled radio mode by the FUNCTION button. Increase  + (Volume)
iPod No play	Unit is not in iPod mode. iPod is not inserted properly.	Recalled iPod mode by the FUNCTION button. Remove your iPod from the dock and check for obstruction on the connectors in the dock and on the iPod. Then insert it back into the docking connector base.
Alarm No alarm	Alarm is not activate. Incorrect alarm time.	Follow directions " setting the Alarm set " on page 8.
Abnormal or no function	Internal micro controller to be reset.	Remove the backup battery and DC plug from the unit to be reset the micro controller.

Technical Specification

Power requirement	Power adaptor, input AC 100-240V~50/60Hz, Output DC 5V 1.5A
Output power	CR2025 x 1 for memory back-up 1W @ 10% THD
Speaker	8 ohms.
FM Frequency	87.5 -- 108MHz
Dimensions	140 (W) x 188 (H) x 87.5 (D) mm.
Weight	0.6 Kg.
AUX input sensitivity	500 mV

IMPORTANT: Pack carefully in original package if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt a sproof of date of purchase

www.pyleaudio.com



Brooklyn NY 11204

1-800-444-5671

Monday Through Thursday. 9AM to 5PM

Friday 9AM to 1PM Eastern.