

Therapy Sound Machine Clock Radio Night-Light with Bluetooth



PILCR34BT

PYLE
 PyleUSA.com

PYLE[®]
 PyleUSA.com

● IMPORTANT NOTES

 
To select from the (10) built-in therapeutic nature sound effects, you must firstly enter "Nature Sound Mode". Press the "MODE" button until you enter the Nature Sound Mode, then shuffle through the pre-loaded sound effects by pressing the "UP / DOWN" buttons.

When listening to FM Radio, the blue LCD display light is NOT brightness adjustable. *Only when listening to Bluetooth / Nature Sounds, the blue LCD display is brightness adjustable by the rotary dial.

● MAIN FUNCTIONS


1. Wake-up light (sunrise): The light will gradually get brighter in the time period that you set, before the alarm clock rings.
2. Go-to-sleep light (sunset): The go-to-sleep light turns itself down during the set time period.
3. Brightness: You can change the brightness in 10 levels.
4. Time function: It shows year, month, date, week and time.
5. Alarm function / sound: Radio: 10 kinds of nature sound, and 6 kinds of music.
6. Radio PLL radio: you can preset 10 stations and listen to your favorite radio station.
7. Snooze Mode: programmable for every 5 minutes.
8. Keeps your programming when there are power outages using a single battery.
9. LED light technology, no heat and low consumption.

● DIRECTIONS OF BUTTONS

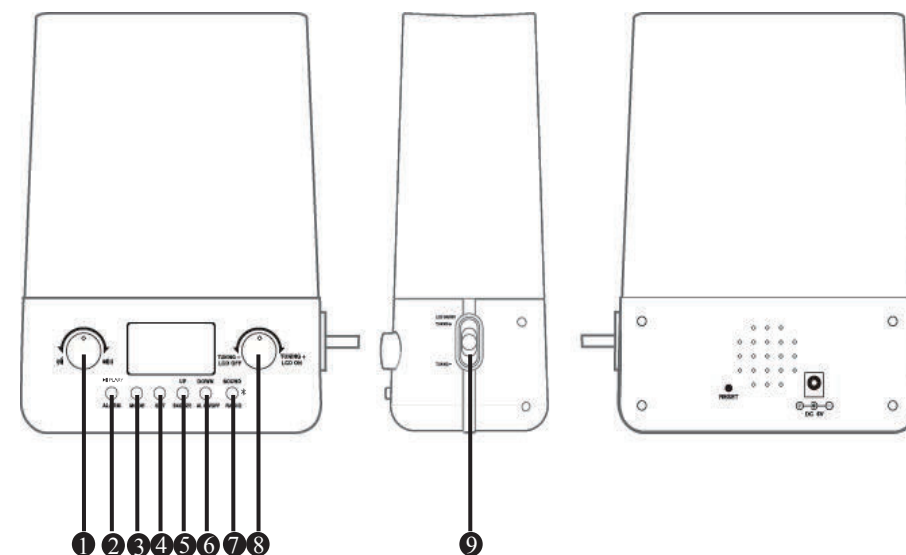

- ① Volume adjust
- ② ALARM: Set the alarm
- ③ MODE: Mode selector
- ④ SET: Settings
- ⑤ UP/SNOOZE:
 - “UP” used to set the correct alarm and hour .
 - “SNOOZE” used for the snooze mode.
- ⑥ DOWN/AL ON/OFF:
 - “DOWN” used to set the correct alarm and hour.
 - AL ON/OFF: Turn on/off the alarm.
- ⑦ BLUETOOTH / SOUND / RADIO: Select the Bluetooth, Radio, Nature sounds or the standard buzzer
- ⑧ Light adjust.
- ⑨ TUNING -: Turn tuner down.
 TUNING +: Turn tuner up.
 LCD ON/OFF: Turn on/off the LCD backlight.

 
● LCD DISPLAY

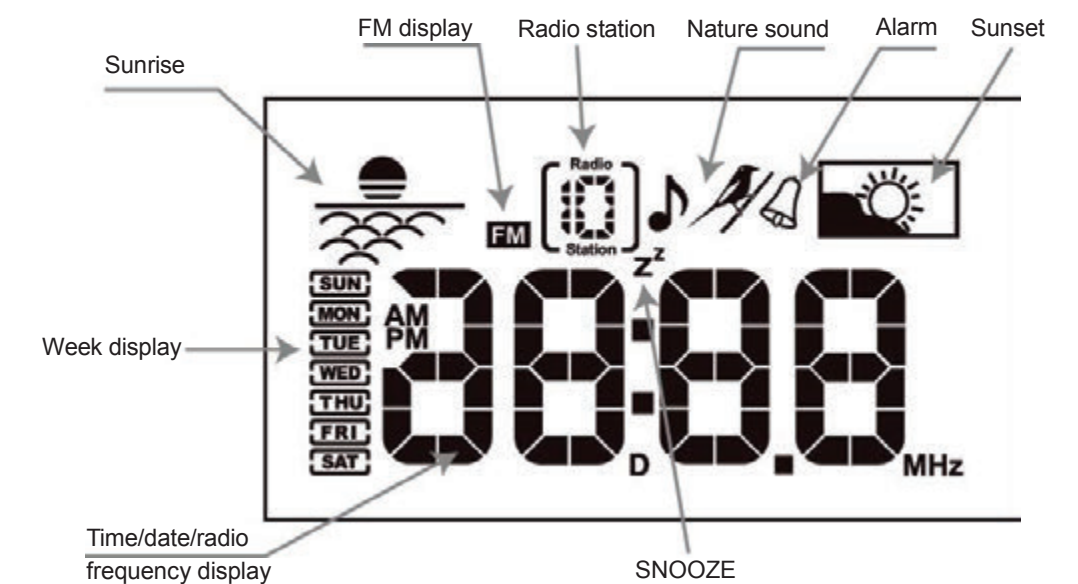

● GETTING STARTED

1. AC/DC Adaptor (Included)

 The 6V adaptor powers the unit. Plug adaptor into socket, making sure the adaptor is not obstructed and is easily accessible to the unit.
CAUTION! To take off the wall power connector you have to remove always from the adaptor and never from the cable. The main unit and adaptor should not be exposed to wet conditions. No objects filled with liquid, such as vases, should be placed on the main unit or adaptor.

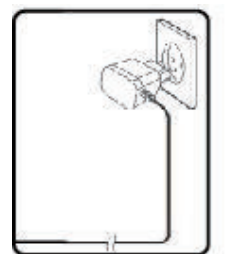

2. Battery installation (Not included)

The CR2032, 3V battery can act as a backup power supply for the main unit.

1. Remove the battery compartment at the bottom of the unit.
2. Insert the batteries, matching the polarities.
3. Press RESET after each battery change

CAUTION! Don't let the battery from the reach of children.

Don't try to activate the battery by heat, recharge or any other way.

Don't drop the battery to the fire, disassemble or try to do a short circuit.

● QUICK USER GUIDE

1. Time & Date

When you power on the Clock Radio, it begins with:

YEAR: 2009 / DATE: 1 / MONTH: 1 / WEEK: Thursday. And the time on 12:00AM

(00:00). To adjust the time and date is necessary:

- Press the SET button; you can see the year place blinks, in that moment you can use the UP / SNOOZE and DOWN buttons to select the correct year.
- Press the SET button again; you can see the month place blinks, in that moment you can use the UP / SNOOZE and DOWN buttons to select the correct month.
- Press the SET button again; you can see the day place blinks, in that moment you can use the UP / SNOOZE and DOWN buttons to select the correct day.
- Press the SET button again; you can see the hour place blinks, in that moment you can use the UP / SNOOZE and DOWN buttons to select the correct hour.
- Press the SET button again; you can see the minutes place blinks, in that moment you can use the UP / SNOOZE and DOWN buttons to select the correct minute.
- Finally press the SET button to confirm and finish the setting.







2. Alarm



2.1 Set the alarm time

To set the alarm you need to:


- Press the ALARM button; initially the time is 12:00 AM. To set the alarm time you have to press the SET button and use the UP / SNOOZE and DOWN buttons to adjust to hour that you wish. Press the SET button again to adjust the minutes.
- When you finish the alarm setting, you can select the best way to waking up. Your options are: natural sounds, the classical buzzer or the selected radio station. Use the RADIO / SOUND button to make the selection.
- The alarm rings each 24h all the week. If you want to cancel the alarm you have to deactivate it.

2.2 Turn on/off the alarm


- When you have finished setting the alarm time setting, the alarm is activated and the icon  is displayed.
- In the time display mode, If you want to turn off the alarm function, press ALARM to enter alarm mode and the  will flash, then press AL ON/OFF, the icon  will not flash. Press ALARM again to exit the alarm mode. If the alarm is off, then the icon  will be not shown.
- When the alarm is off, the icon  is not shown in the time display mode. If you want to turn on the alarm function, press ALARM to enter alarm mode and the  will displayed. Press AL ON/OFF, the

icon  will flash, press ALARM again to exit the alarm mode, the alarm is on and the icon  will displayed

3. Preset light on (Sunrise)

- The "SUNRISE" MODE is when the light of the unit start with a gradual increase in intensity. It turns itself up before the alarm clock rings and gradually brightens up during the period time you set.
- To activate the "SUNRISE" mode we have to press the MODE button and then the SET button. Using SNOOZE and DOWN you can set the timing that you want, having 00, 15, 30, 45, 60 and 90 minutes as option. The "SUNRISE" mode will begin whenever the time inter val you have selected before your alarm goes off. For example, if you select "30", the light will gradually increase in intensity 30 minutes before you have set your alarm to go off.
- When you choose the 00 option, means that the "SUNRISE" mode is off. In the display you can see  that means that the "SUNRISE" mode is activate.

4. "SUNSET" time setting

- The "SUNSET" mode is when the light and/or radio turns itself down until it is off.
- To activate the "SUNSET" mode you have to press the MODE button two times and then the SET button to program it. Using the SNOOZE and DOWN buttons you can adjust the timing, using the options 00, 15, 30, 45, 60 and 90 minutes.
- When the option is 00, means that the "SUNSET" mode is not activated. In the display you can see the  icon, which means that the "SUNSET" mode is activated.

Note: when setting the sunset function, the light must be turned on.

5. SNOOZE

- When the alarm is turning on, if you press the SNOOZE the sound turns off automatically come on again after about 5 minutes.
- It will be off after the ringing for 1 minute, and repeat in 1 minute later. It will repeat 5 times.
- If we use the radio as alarm sound, the alarms keeps ringing until you press the RADIO / SOUND button and if you use the natural sound, the alarm will be off after 20 minutes.
- To turn off the alarm you have to press the AL ON/OFF button.


6. BLUETOOTH / RADIO / NATURE SOUND MODE

• Bluetooth Mode

Press the "Bluetooth / Radio / sound button 1 times to enter into Bluetooth mode. You will be heard sound which they are ready to pair. Turn on the bluetooth function on the device you wish to pair and look for the Bluetooth Network Name: "Pyle Audio" in the list, click to pair it. There is no password required. Bluetooth 2.0

One time is for Bluetooth, Second time is for Radio, Third time is for nature sounds.

• RADIO & NATURE SOUND

- Press RADIO / SOUND 2 times to enter the radio mode; then press Tuning + or Tuning - to select the FM radio frequency. Hold the button in order to quickly run though the frequency.
- In the radio mode, if you'd like to preset the radio frequency, press SET and the  will flash. Press UP or DOWN to preset the radio station (10 stations in total), and then press SET to confirm.

- In the radio mode, if you'd like to choose the presented radio, press UP or DOWN to choose the presented radio station to listen
- Press RADIO / SOUND 3 times to enter the Nature sound mode, you can press UP or DOWN to select you liked music and then press RADIO / SOUND to return the normal display situation, the natural sound will be play 20 minutes and then stop.

7. LIGHT BRIGHTNESS ADJUST

To adjust the light brightness you have to use the LIGHT adjustment control. You count with 10 intensity levels. (LIGHT +) will turn the light up; (LIGHT -) will turn the light down

8. Adjusting sound

Volume control: Controls the volume.

● SPECIFICAATIONS

Item	Specifications
Display	Backlight LCD
Tuner	Digital
Sound system	Mono
Volume control	Rotatory
Output power	DC 6V 800mA
Input power	AC 100/240V 50/60Hz 0.3
Frequency range	87.5MHz - 108MHz
Unit size	5.9" x 3.1" x 7.5"

● SAFETY CONSIDERATIONS

- Do not disassemble the device. Any repair work must be performed by qualified technical personnel.
- Do not subject the unit to excessive force, shock, dust, temperature or humidity
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit's internal components. This will void the warranty.
- Avoid any drop or hit on the unit.
- Switch off during thunderstorms.
- In case of long inactivity periods we recommend to Switch off the unit.
- Only use fresh batteries. Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- The technical specifications for this product and the contents of the user manual are subject to change without notice.

