

PYLE
PyleUSA.com



PKBRD37WT

Digital Musical Karaoke Keyboard

Portable Electronic Piano Keyboard
with Built-in Rechargeable Battery
and Wired Microphone, White (37 Keys)

USER GUIDE

Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

IMPORTANT SAFETY PRECAUTIONS

1. Please only use the power adaptor included in the product.

This unit may use a mobile phone adaptor with specification:

INPUT: 100-240V- 50/60Hz


OUTPUT: DC 5V, electricity should be 1000mA or above. The adaptor to be used with this product should be regularly examined for potential hazard, such as damage to the cable or cord, plug, enclosure of other parts.

Do not use the damaged products to avoid accidents.

2. The **RED** light beside the DC port is also the charging indicator. It will light up in red color when the piano is charging. After the Li-ion battery is fully charged, the red light will turn off. It takes about 4 hours to fully charge the battery.
3. Please charge the piano every two months when it is not in use, in order to keep the performance and service life of the built-in Li-ion battery.
4. This product must be charged by adults.
5. The Li-ion battery is fixed inside the toy, it is strictly forbidden to be removed or put into the fire or near the high-temperature environment as it will cause explosion danger!
6. This product includes a USB cable. If you will use different USB cables, please carefully check if there's any damage to it. The mobile phone original adaptor is recommended to use with this product. An inferior USB cable and adaptor will bring noise and another potential hazard when you play this keyboard.
7. This product is not suitable for children under 3 years old.
8. Do not play the music aloud for a long time. Loud music may damage hearing.
9. **Do not place this product in below locations; otherwise it may cause fire or electric shock.**
 - Humid or dusty place
 - Kitchen or place that have lamp black
 - Near air conditioner, electric blanket, exposed under the sunlight or any other place would warm this keyboard up.
10. Do not put this product near TV, Radio or beside other electronic product which may cause audio or video receiving interference.
11. Unplug the adaptor before cleaning this product or when you are not using it for a long time.

Illustration


1. Power on/off/ Volume Knob
2. DC 5V jack
3. Charging Indicator
4. Phones --Earphone port
5. MIC --Microphone port
6. AUX-IN --Audio input port
7. Start /Stop
8. Demo
9. Teach: OKON/Guide/Follow
10. Beat
11. Transpose
12. Tempo
13. Choice -/+
14. Tone switch
15. Rhythm switch
16. T000-T003
17. R000-R003
18. Record
19. Play
20. Sustain/Vibration/Echo
21. Drum
22. Sustain handle

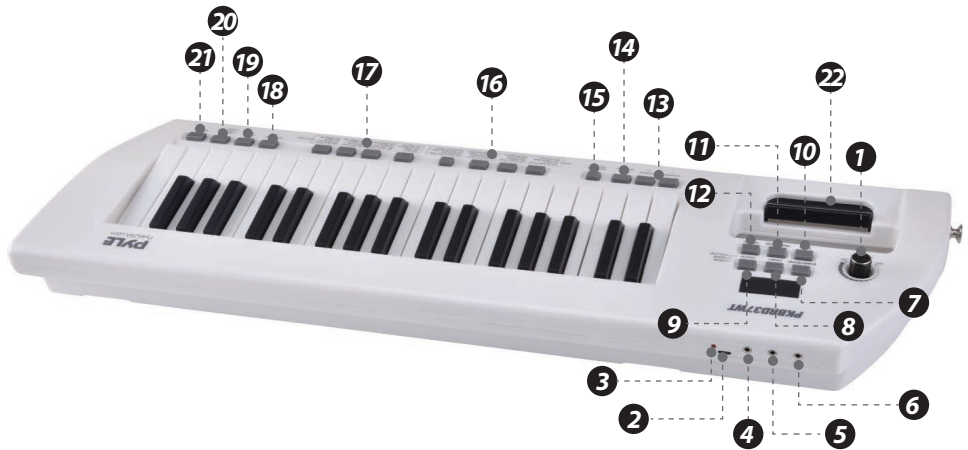

POWER SUPPLY

DC Adaptor: Use DC adaptor with USB connector with voltage output DC 5V, electricity should be 1000mA or above. It may cause malfunction if you use another voltage adaptor.

Li-ion Battery: The battery inside the piano can be used for playing 6-8hours after it is fully charged.

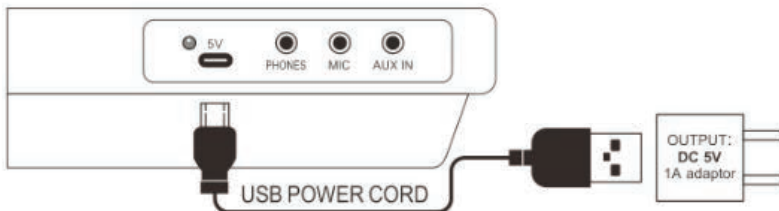

TURN ON FOR PLAYING


Choose one of the above power supplies and connect the USB cable with the keyboard. Turn **ON** the volume knob and play any white or black keys, if there's a piano rings up, the keyboard works.

Sleep Function

1. When the keyboard is not playing more than 3 minutes, it will automatically enter the sleep function.
2. To wake it up, press any white or black keys.

HOW TO PLAY

1. **Demos:** Press **DEMO**, it will play 50 demos from D00 to D49 one by one.
If you want to select the demo, please press **CHOICE -** or **+** to select the demos.
If you want to stop the playing demo, please press **START/STOP** button.
2. **Volume Control Knob:** Turn on the volume knob to adjust the volume in clockwise direction.
3. **Tempo Control:** Press **TEMPO** first and then press **CHOICE -** or **+** button to adjust the tempo.
4. **Tone:** The factory setting tone is piano T000. There are 200 tones, press T000 to T006 to choose. Please check the list of tones in next two pages.
5. **Tone switch:** Press **TONE SWITCH** one time, it will switch the T000-T003 to T007-T010; Press it twice; it will switch the T000-T003 to T014-T017. It can be switched for 4 times as below and from the fifth time, it will return to T000. Or please use **CHOICE +** or **-** button to select the tone.
 - **Press Tone Switch 1 time:** it will switch the T000-T003 to T007-T010
 - **Press Tone Switch 2 times:** it will switch the T000-T003 to T014-T017
 - **Press Tone Switch 3 times:** it will switch the T000-T003 to T021-T024
 - **Press Tone Switch 4 time:** it will switch the T000-T003 to T028-T031
6. **Rhythm:** There are 200 rhythms, press R000 to R003 to choose. Please check the list of rhythms in next two pages.
7. **Rhythm switch:**
Press **RHYTHM SWITCH** one time, it will switch the R000-R003 to R007-R010. It can be switched for four times as below form and from the fifth time, it will return to R000. Or please use **CHOICE +** or **-** button to select the tone.
 - **Press Rhythm Switch 1 time:** it will switch the R000-R003 to R007-R010
 - **Press Rhythm Switch 2 times:** it will switch the R000-R003 to R014-R017
 - **Press Rhythm Switch 3 times:** it will switch the R000-R003 to R021-R024
 - **Press Rhythm Switch 4 times:** it will switch the R000-R003 to R028-R031



8. **Transpose:** Press **TRANSPOSE** first and then press **CHOICE -** or **+** button to adjust the Major from -6 to +6.

9. **Sustain/Vibration/Echo**

A. Press this button 1 time, it is in **SUSTAIN** mode, it will extend the sound of the key.

B. Press this button 2 times, it is in **VIBRATION** mode, it will have a vibrating sound.

C. Press this button 3 times, it is in **ECHO** mode, it will have the echo sound.

10. **Drum:** There are 37 different percussions with 37 different keys.

Please check the drum list in the last page for more details.

11. **Teaching Function**

A. Press 1 time in the mode of OKON (One key for one note)

Press this button and choose the **DEMO** number with the **CHOICE +** or **-** buttons, it will start to play background music from the demos, and you can play any black or white keys which will be automatically correct as the demos. In this mode, you can play any songs without learning piano. This function is to play for fun and bring users more confidence and interest in playing.

B. Press 2 times in the mode of Guide

Press "**TEACH**" 2 times to enter this mode and choose the **DEMO** number with the **CHOICE +** or **-** buttons, it will start to play background music from the demo. User can play the song with their own memory to follow the background music. When you forget the next note, just stop for 3 seconds, the correct note will play to guide you for continuous playing. If you want to stop, then press "**START/STOP**" button. In this step, you can adjust the tempo according to your own speed, so that you can practice playing slowly. The purpose of this mode is to practice with your memories. With the steps of listening—playing—practicing, you will learn to play a song by yourself.

C. Follow

Press "**TEACH**" 3 times to enter this mode and choose the **DEMO** number with the **CHOICE +** or **-** buttons, it will start to play background music from the demo. The correct key note will show in the LCD screen and wait for you to play. If you do not press the correct key, the background music will stop there waiting until you press the correct key. This exercise will help users to remember the correct note.

12. **Record:** Press RECORD button and you can record the music you play.
13. **Play:** Press PLAY button to play the music you just recorded.
14. **Beat:** Press this button; beats start from 1/4 and repeat with the tempo of 120 beats per minute. There are 4 different beats for your choice: 1/4, 2/4, 3/4 or 4/4 beat. Press this button first time, it will be 1/4 beat. Press this button twice; it will be 2/4 beat, and so on.
15. **Stop:** Under the mode of RHYTHM, PLAY, DEMO, BEAT press STOP to exit.
16. **Sustain handle:** Press this handle, it is in SUSTAIN mode, it will extend the sound of the key.
17. **AUDIO INPUT:** AUX-IN jack can be connected with mobile phone/IPAD/MP3 via audio cable for playing more songs. After connected, the volume should be controlled by the mobile phone/IPAD/MP3.
18. **PHONES:** This port can be connected with your earphone when playing. And the sound will only input to the earphone. The earphone is not included.
19. **MIC:** This is the microphone port. Connect the microphone to the piano by this port

Operation notice:

1. This product should not be placed near the electric appliance, such as radio, television, tuner to avoid interference when receiving audio or video signals.
2. Use the nearest power socket in order to unplug the adaptor immediately when malfunctioning.
3. Unplug the adaptor when it is not in use.
4. The unit contains voltage carrying parts. Therefore DO NOT open the housing.

What's in the Box:

- Portable Piano Keyboard
- Wired Microphone (stored in the polyfoam inside the gift box)
- USB Charger Power Cable
- Audio Cable
- Belt
- UL Adapter

California Prop 65 Warning



WARNING:

This product contains Butyl benzyl phthalate (BBP) which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



Features:

- 2-in-1 Karaoke Keyboard: Play & Sing-Along!
- Includes Wired Handheld Microphone
- Compact & Portable Musical Piano
- Simple Electronic Plug-in Operation
- Portable Piano, Built-in Rechargeable Battery
- Built-in Full Range Stereo Speakers
- Connect & Stream Audio from External Devices
- Multiple Preset Selectable Keyboard Sound, Tone & Rhythm Styles
- Teach Mode: Easy to Play the Preset Demo Song by Any Key
- LED Indicator
- Record & Playback Mode
- Different Percussion under Drum Mode
- Sound Effect: Sustain/Vibration/Echo
- Adjustable Volume Control
- Headphone Jack
- Key Texture: Wood Texture Feel
- Light and Compact to Hang on the Shoulder Like a Guitar
- Perfect for Home Theater Living Room Performances
- Fun for Kids of All Ages: Children & Adults

Technical Specs:

- (37) Keyboard Keys
- (200) Preset Selectable Tones
- (200) Preset Selectable Audio Rhythms
- (50) Preset Selectable Demos
- Belt: Black PP Webbing
- Audio Interface: Aux (3.5mm) Input Jack / Mic Input
- Max Sound Level: Up to 92 dB
- USB/Power Cable Length: 3.28' ft.
- Construction Material: Engineered ABS
- Built-in Rechargeable Battery: 3.7V Li-ion
- Power Supply: 110/240V (DC 5V)
- Power Adapter: DC-5V/1000mA
- Piano Dimensions (L x W x H): 27.79" x 8.85" x 2.75" -inches



PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

