

nutrichef  
by **PYLE**




*PKBRFM32*

Ultrasonic Drink Frother  
with Frothing Glass

## HOW TO OPERATE:

### Step 1:

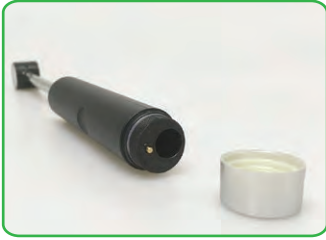

- Open the cover on top to load the batteries in.



- Load two pieces AAA batteries



**Orange Light:**  
Ultrasonic vibration is on

### Step 2:



- Pour beer into a glass and put the ultrasonic part into the beer. Slightly touch the switch, when the LED light is on, you could see the magic happening.

## EASY MAINTENCE

1. Rinse the part immersed in beer with clean water, and wipe it dry with a clean cloth.
2. Do not put the whole unit into the water. If water gets into the battery compartment, it may cause damage to its electronics.

## FEATURES:

- Whip it Up & Make it Frothy!
- Universal Drink Frother
- Experience More Flavorful Drinks
- Includes Base Stand & Frothing Glass
- Ultrasonic Vibration Technology
- Simple & Hassle-Free Operation
- Compact & Portable Design
- Ergonomic Handle Grip
- Battery Operated Wireless Frothing
- Food-Grade Stainless Steel Stem  
Used for Foaming Beer, Milk, Coffee, Cappuccinos, Lattes & More!

## TECHNICAL SPECS:

- Frothing Glass Capacity: 4.93 oz
- Construction Material: Stainless Steel, Engineered ABS
- Battery Operated. Requires (2) x 'AAA' Batteries, **Not Included**
- Handheld Frother Size: (L x W x H): 0.94" x 0.94" x 9.36" -inches
- Sold as: 1

## GENERAL INSTRUCTIONS

Please take the time to read these instructions carefully before you begin using your machine. Keep these instructions for future reference.

Misuse of this appliance can damage the unit or injure the user. Assure the appliance is used for which it is designed; we refuse any responsibility for damages caused by incorrect use or bad manipulation.

1. This appliance is designed for domestic use only!  
Industrial or commercial use will void the warranty.
2. Do not use appliance for other than intended use.
3. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
4. Do not use the device if it fails and if there are visible signs of damage
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. Do not immerse the appliance in water or put it into dish washer
7. Use damp cloth to clean the appliance
8. Always place your appliance on a horizontal, stable and dry surface
9. Do not place your appliance on a hot surface and do not expose it to moisture, or splashing water
10. After use, store your appliance in a cool, dry place and out of reach of children
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children shall not play with the appliance
13. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

## PRODUCT IMAGE



# nutrichef

by **PYLE**



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

**PYLE**