

nutrichef
by **PYLE**



PKBRFMSR22

Automatic Beer Dispenser
Portable Beer Pump Server


GENERAL INSTRUCTIONS

Please take the time to read these instructions carefully before you begin using your machine. Keep these instructions for future reference.

Misuse of this appliance can damage the unit or injure the user. Assure the appliance is used for which it is designed; we refuse any responsibility for damages caused by incorrect use or bad manipulation.

1. This appliance is designed for domestic use only!
Industrial or commercial use will void the warranty.
2. Do not use appliance for other than intended use.
3. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
4. Do not use the device if it fails and if there are visible signs of damage
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. Do not immerse the appliance in water or put it into dish washer
7. Use damp cloth to clean the appliance
8. Always place your appliance on a horizontal, stable and dry surface
9. Do not place your appliance on a hot surface and do not expose it to moisture, or splashing water
10. After use, store your appliance in a cool, dry place and out of reach of children
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children shall not play with the appliance
13. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

BREAKDOWN

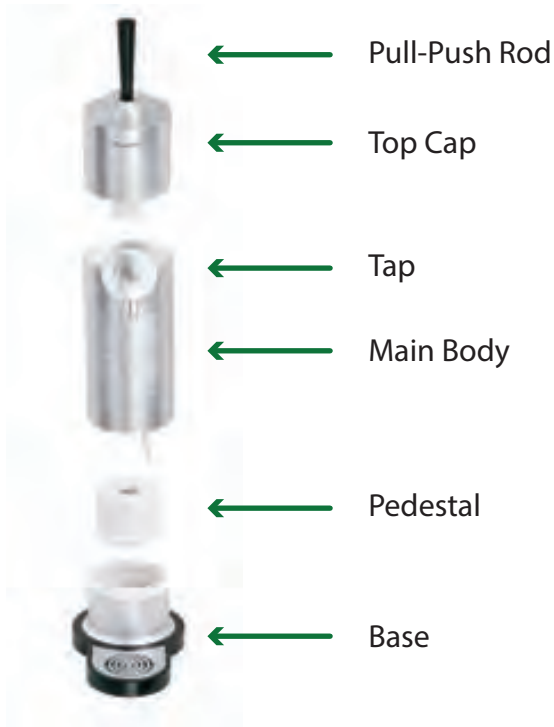

HOW TO OPERATE:

1. Detach the top cap from main body by turning it counterclockwise.



2. Open the battery cover and put two pieces AA battery then close the cover using a screw.



3. Attach the top cap with batteries back to the main body by turning the top cap clockwise. It is fixed if the line marks on the top cap and main body are alligned.



4. Detach the main body from pedestal by turning counterclockwise.



5. 33cl & 35cl marks on the holder of the pedestal uses:

- When the canned beer height is 33cl, make sure the triangle arrow on the holder (33cl) points to the one on pedestal.



- When the canned beer height is 35cl, make sure the triangle arrow on the holder (35cl) points to the one on pedestal.




- When the canned beer height is 50cl, take off the holder from pedestal directly.



6. Open the canned beer and put it into the pedestal. Make sure the canned beer opening has the same direction as the pedestal triangle.



7. Lastly, put the main body back to the pedestal by turning it clockwise. It is fixed if the line marks on the main body and main pedestal are aligned.

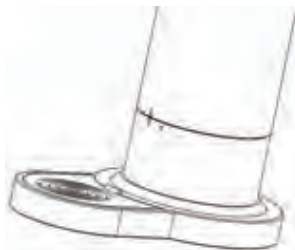

8. Put a glass or a mug on the base platform and enjoy the beer bubble by below function instructions:
 - Pull the pull-push rod, normal beer will come out. Push the rod, and bubble comes out. Cooling the beer brings better taste and result
 - Take off the insulation from the main body if beer heat preservation is not needed.

CLEANING AND MAINTENANCE

1. Take off the silicone tube from the main body for water cleaning if needed.
2. Take the base for water cleaning if needed.
3. Take off the battery when not in use.
4. This appliance contains electronic component, please do not immerse the full unit into water especially the top cap.
5. Do not disassemble the appliance by yourself. Contact with an expert when needed.

BATTERY ADVICE AND RECYCLING

- Keep the battery out of each of children.
- Do not mix old and new batteries, with different compositions or of different brands in order to prevent possible leakage, explosion etc.
- Do not heat or deform the batteries or expose to fire.
- Do not dispose waste batteries together with household waste
- Please check with your local authority for battery recycling advice.



Never dispose of used batteries or rechargeable batteries in household waste. As consumers, users are legally required to take used batteries to appropriate collection sites, the retail store where the batteries were purchased, or wherever batteries are sold.

Disposal: Do not dispose of this instrument in household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment.



FEATURES:

- Easy Beer Flow: Pull the Lever & Pump That Brew!
- Hassle-Free Beer Dispenser
- Automatic Electric Pump Operation
- Micro-Foam Enhancement Technology
- Experience More Flavorful & Aromatic Beers
- Instant Micro-Brew Dispensing Ability
- Beer-Tap Styled Lever
- Compact & Portable Design
- Works with All of Your Favorite Beers!
Ales, Pilsners, Stouts, IPAs, Porter, Lagers, etc.
- Battery-Operated Wireless Design for Portability
- Safe for Any Countertop or Table Placement

TECHNICAL SPECS:

- Works with Beer Cans up to 16.9 oz
- Construction Material: Engineered ABS
- Battery Operated: Requires (2) x 'AA' Batteries, Not Included
- Assembled Height (L x W x H): 7.32" x 4.72" x 15.87" - inches
- Sold as: 1

nutrichef

by **PYLE**



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE