

nutrichef



PKEC40

Electric Food Steamer
Egg Cooker

USER MANUAL

General

This appliance is for private use only and must not be used commercially. Please read the instruction manual carefully and keep it in a safe place for future reference. When the appliance is given to another person the instruction manual should be passed to that person, too. Only use the appliance as described in the instruction manual and pay attention to the safety information. No liability for damages or accidents will be accepted, which are caused by not paying attention to the instruction manual.

Safety Information



Connect and operate the appliance only in accordance with the specifications on the rating plate. Do not use if the cord or appliance is damaged. Always check before using the appliance!

- This appliance is not intended for use by children or others that may apply; an able adult should be responsible for their safety and observing if they use it.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- After using the appliance or if the appliance malfunctions, always pull out the plug.
- Never pull at the cord set. Do not chafe it over edges or squeeze it.
- Keep the power supply cord away from hot parts.
- Never leave the appliance unattended when operating.
- Do not put anything on the appliance.
- Never immerse the appliance in water.
- Do not operate the appliance if it is damaged (for example if it felt down)
The manufacturer is not liable for damage occurred by using the appliance in another way than described or if a mistake in operating has been made.
- The appliance becomes very hot. Do not move the appliance until it has cooled down!
- To prevent injury, repairs such as: replacing a damaged cord, etc. should only be carried out by customer service.

Danger of Injury:



Attention! Housing and glass get hot. Danger of burns!

Do not place the appliance on a sensitive surface (e.g. painted furniture) and keep a distance of at least 3' to burnable materials.

Using the Steamer:

Before the first use, clean the heating plate with a wet cloth.


Unwind the cable from the bottom of the appliance until desired length

Place the appliance in horizontal position and connect it to a security plug

Fill the measuring cup with warm water up to the brim and pour it into the heating plate, and then put the egg tray on the appliance.

Before placing the eggs, pierce them at the truncated side with the piercing at the bottom of the measuring cup so as to prevent them from cracking

Then put the cover on the appliance.

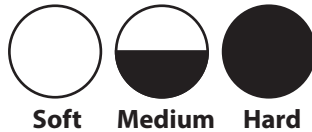

Settings Preference:

There is a rotary knob for adjusting the boiling degree. The boiling degree is adjusted to personal judgment. Personal experience with the appliance will lead very soon to the results desired by your personal taste.

Please note: The regulator must always be restarted from the OFF position.


Adjustment: When the regulator is turned from OFF to ON the blue lamp flashes, after which you have 5 seconds to select an icon ○◐● . After approx. 5 seconds a beep is heard and the selected program commences. Do not adjust the regulator again after this point. The eggs are done when the blue lamp goes off and the device beeps 10 times. The device switches itself to standby mode automatically after the program has completed.




Attention: hot steam will escape, when the lid is taken off.

Put the eggs under cold water by grasping the handle of the tray.

Poached Eggs

Pour a measuring jug full of hot water into the dish, and fit the egg carrier to the poacher. Break 1-3 eggs into the poaching dishes and put the dishes onto the carrier. Put on the cover. Select medium  setting. The poaching result depends on the size and temperature of the eggs and your own seasoning.

Cleaning Instructions

Unplug the appliance from the electrical outlet before cleaning. When the plug is removed from the electrical outlet, let the egg boiler cool down before cleaning. **Clean the heating element with a wet cloth.** In case of calcium deposits use diluted vinegar of approx. 10 minutes rinse the cooking plate carefully . Do not scratch with hard objects in the heating plate and do not use aggressive cleaning products. Only clean the appliance from the outside with a wet cloth. Cover, egg tray & egg cups are dishwasher proof.

Important: Never immerse the appliance in water or any other liquid.

Disposal:

Packaging Disposal:

Do not throw away the package materials. Please put it in the recycling bin.



Gift box: Paper, should be put to the old paper collection point. Plastic packaging material and foils should be collected in the special collection containers.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Service and Repair:

If the appliance must be repaired, please get in touch with www.NutrichefKitchen.com

PKEC40

Electric Food Steamer Egg Cooker

Features:

- Begins Heating Within Seconds
- Quick, Convenient & Reliable Food Prep
- See the Steam: Heat Resistant Transparent Lid
- Adjustable Settings for Soft, Medium, Hard Eggs
- Stainless Steel & Stain-Resistant Construction
- LED Power Indicator Light
- Dishwasher Safe Parts
- Simple & Hassle-Free Operation
- Lightweight & Compact Countertop Design
- Automatic Power Off Safety Function
- Great for Seafood, Vegetables, Eggs & More
- Includes Measuring Cup

Technical Specs:

- High-Powered Cooking / Heating Element, 400 Watt
- Maximum Time Setting: 14 Minutes
- Maximum Temperature Reached: 212 °F
- Power: 120V, AC
- Total Unit Dimensions (L x W x H): 6.7" x 6.7" x 5.9"
- Sold as: 1



nutrichef

