

Technical Data

Model.....PKELKN8
Power supply.....220V~50HZ
Power consumption:
Pmin.....150W
Pmax.....180W
Protection class:..... II

This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations.

Subject to technical changes without prior notice!



ELECTRIC CARVING KNIFE
USER MANUAL



PKELKN8



General Safety

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- The appliance is designed exclusively for private use and for the purpose that was intended.
- This appliance is not fit for commercial use. Do not use it outdoors.
- Keep it away from sources of heat, direct sunlight, humidity(never dip it into an liquid)and sharp edges.
- Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable). If the appliance is not being used, remove the attached accessories.
- Do not operate the machine without supervision. If you should leave the workplace, always switch the machine off or remove the plug from the socket (pull the plug itself, not the cord).
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- Keep away and out of the reach from children. This includes all packaging items (plastic bag, boxes, Polystyrene, etc.) out of their reach.


Warning / Caution Symbols

WARNING:
This warns you of dangers to your health and indicates possible injury risks.

CAUTION: Refers to possible hazards to the machine or other objects

Note: This highlights tips and information.

WARNING:
Attention: the cutting blades are extremely sharp. Handle with extreme care when using the appliance and when cleaning the blades!
Warning: The blades are very sharp; before inserting or removing the blades, always remove the main plug.

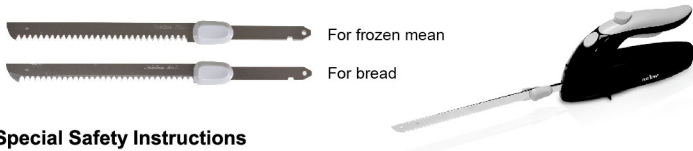

Special Safety Instructions

- Do not leave the knife unattended when it is ready to operate.
- Never immerse the basic device in water.
- Always remove the mains plug before cleaning the devices.
- Do not cut any bones with the electric knife.
- Do not operate the knife for more than 5 minutes without a break.

Operating the Device

- Remove the motor device and the accessories from the box. Also remove any packaging material that may be present.
- Wipe all the parts with a moist to remove all the dust that may have deposited on and in the device during transport. Then mount the device again by proceeding in the opposite order.

WARNING:
Please be particularly careful when handling the knives; there is danger of injury. Only hold the blades as near to the ends as possible or by the plastic handling surfaces.

- Assemble the blades.
- Insert the ends of the knife into the retainer on the motor devices.
- Press the blades in the direction of the motor device until the ends are felt to lock in place. Check that they are firmly attached.
- Insert the plug in a duty installed 220v/50Hz socket.

Switching On the Device

- Please note that for safety reasons the knife can only be switched on if switches 2 and 3 are pressed.
- Do not exert too much pressure when cutting; allow the knife to do the cutting.
- After use, please remove the plug from the socket and take out the blades by pressing button 1.

Cleaning and Maintenance

- Remove the mains plug from the socket.
- Please take care with the sharp knives!
- Clean the individual parts in the usual way in soapy water.
- The housing of the motor device can be wiped off with a slightly moistened cloth.
- Do not immerse the motor device in water.