

ELECTRIC GRATER & SHREDDER USER MANUAL



Instruction Manual PKELS70



IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Carefully read this manual before using this appliance.

Ensure that you know how the appliance functions and how to operate it.

Maintain the appliance in accordance with the instructions to ensure that it functions properly.

Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Do not use this appliance if it has been dropped or damaged in any way, or if the supply cord is damaged.

PACKAGE CONTENTS

- 1 x Appliance Base (Motor Unit)
- 1 x Food Pusher
- 1 x Feed Chute
- 1 x Fine Grating Cone
- 1 x Medium Grating Cone
- 1 x Coarse Grating Cone
- 1 x Thin Slicing Cone
- 1 x Thick Slicing Cone
- 1 x Instruction Manual

TECHNICAL SPECIFICATION

Model PKELS70
220-240V ~ 50Hz
150 Watts
Max Continuous Use: 2 Minutes



GENERAL AND ELECTRICAL SAFETY

When using electrical appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate.

Supply Cord and Plug

Always unplug from mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Supervision

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



Water

Do not immerse appliance in water. Do not immerse any part of the motor unit or supply cord in water. Do not use with wet hands or use in damp situations.

Use and Environment

Do not use outdoors. Place the Base on a flat, level, stable surface. Do not let the cord hang over the edge of any table or bench top. Do not leave in direct sunlight as this may damage the plastic. Do not continuously operate the appliance for more than 2 minutes. After 2 minutes of continuous use, switch off and allow the appliance to cool for a minute. This appliance is intended for household domestic use only. Do not use this appliance for anything other than its intended use.

Injury Precaution

WARNING: Potential injury from misuse! Avoid contact with all moving parts. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. Care shall be taken when handling the sharp grating & cutting blades, and during cleaning. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.



Double Insulation Safety

This appliance is double insulated for your protection. Do not attempt to repair a double insulated appliance.



GENERAL AND ELECTRICAL SAFETY *continued*

Damaged or Dropped

Always inspect your appliance before use. Check parts are correctly attached. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

Store in a Safe Place

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.

DIAGRAM

A. Food Pusher

B. Feed Chute

C. Fine Grating Cone

D. Thin Slicing Cone

E. Medium Grating Cone

F. Coarse Grating Cone

G. Thick Slicing Cone

H. Appliance Base (Motor Unit)

I. Handle

J. ON/OFF Switch





OPERATION

Before First Use

Carefully unpack your appliance and remove all accessories. Wash them in warm, soapy water then rinse and dry with a dry towel. Carefully wipe the exterior of the base if necessary. **WARNING:** Do not immerse the appliance base in water or any other liquids.

Using the Electric Slicer & Grater

- Attach the Feed Chute to the Appliance Base. This is done by holding the Feed Chute at a 45 degree angle to the right, inserting it in to the socket on the Appliance Base, then rotating it 45 degrees back to the left so that it is locked in to place in the upright position.
- Select a cone suitable for the slicing or grating task you require and fit it onto the star shaped drive mechanism at the back of the Feed Chute. Rotate it slightly clockwise to hold it in place.
- Cut the ingredients into pieces that will fit into the Feed Chute and place a suitable container under the outlet.
- Connect the appliance to a suitable 220 -240V ~ 50Hz power outlet socket
- Press the ON/OFF button once or twice to ensure that the Cone has locked into place and turns freely.
- Make sure that the Pusher has been removed from the Feed Chute, and then insert the pre-cut food through the top of the Feed Chute.
- Press and hold down the ON/OFF button to activate the motor then slowly push the food down with the pusher. Do not exert too much pressure on the pusher, as this could affect the quality of the end result and could even cause damage to the appliance.
- Turn off by releasing the ON/OFF button.
- To remove the cone unlock the Feed Chute by rotating it 45 degrees to the right then lock it back into place by rotating 45 degrees back to the left. The Cone can now be easily removed.
- Remember to unplug the unit from the power outlet when it is not in use, changing parts or is left unattended.
- Always clean the product immediately after each use. Disassembly is reversal of assembly instructions.

Important: This appliance is designed for short term operation only. Do not run continuously for more than 2 minutes. After 2 minutes stop and rest for 1 minute to allow the appliance to cool.

Note: The first time this appliance is used there may be a small amount of smoke and odour. This is normal and is due to the protective coating placed on the motor at manufacture to protect it during shipping.

Tip: For best results use firm ingredients. If the ingredients are too soft they will clump together and accumulate in and around the cone. If the ingredients are too hard the appliance and cones may become damaged.



Cone Selection

The **Fine Grating Cone** can be used for grating parmesan cheese, nuts and spices
The **Medium Grating Cone** can be used for grating cheese, carrots, breadcrumbs
The **Coarse Grating Cone** can be used for grating cheese, carrots, courgettes, onion
The **Thin Slicing Cone** can be used for slicing beetroot, apples, celery
The **Thick Slicing Cone** can be used for slicing cucumbers, carrots, potatoes

MAINTENANCE

Regular maintenance of your appliance will keep it safe and in proper operational order.

Service

Do not attempt to service this appliance. If it is faulty in any way, please follow the instructions on the enclosed warranty card.

Before cleaning

When not in use or before cleaning, always disconnect the appliance from the mains supply. The accessories should be separated from the base of the appliance before cleaning.
DO NOT IMMERSE THE BASE OF THE APPLIANCE OR ITS SUPPLY CORD IN WATER.

Cleaning

CAUTION: Care is needed when handling the sharp cutting blades, especially during cleaning. Always clean the product immediately after each use. Rinse off food any scraps then thoroughly wash parts in warm, soapy water (a soft nylon brush may be helpful) then rinse and dry with a dry towel. Do not use any abrasive cleaners or harsh solvents. The Feed Chute and Cones can be washed in a dishwasher on the top rack. Clean the base by wiping it with a damp cloth.