

nutrichef
by PYLE



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE




PKGRIL43 Electric Grill User Manual

THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS:

- Staff kitchen areas in shops, offices and others working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments.



IMPORTANT SAFEGUARDS

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
2. Children should be supervised to ensure they do not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4.  : **CAUTION**, hot surface

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. Do not touch the hot surface. Use handles or knobs.
3. To avoid electrical shock do not immerse cord, plugs or appliance in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter, or touch the hot surface
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

11. To disconnect, remove plug from wall outlet.
12. Do not use this appliance other than intended use.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

The appliance is only to be operated in the closed position. When upper plate is open 105 degree heating, close the switch for upper plate power.


SAVE THESE INSTRUCTIONS.

This product is for household use only.
Do not immerse this product into water.

MAIN FUNCTIONS:

1. Nonstick grill plates ensure effortless food release and quick cleanup.
2. Working heating element indicators.
3. Open the upper plate to 105 degrees.
4. Red light Button Marked "I/II", "I" means one plate/down plate working only, "II" mean two plates/ upper and down plates working
-Red light Button Marked "O/-", "O" mean one plate/down plate working only, "-" mean two plates/ upper and down plates working

COMPONENTS:

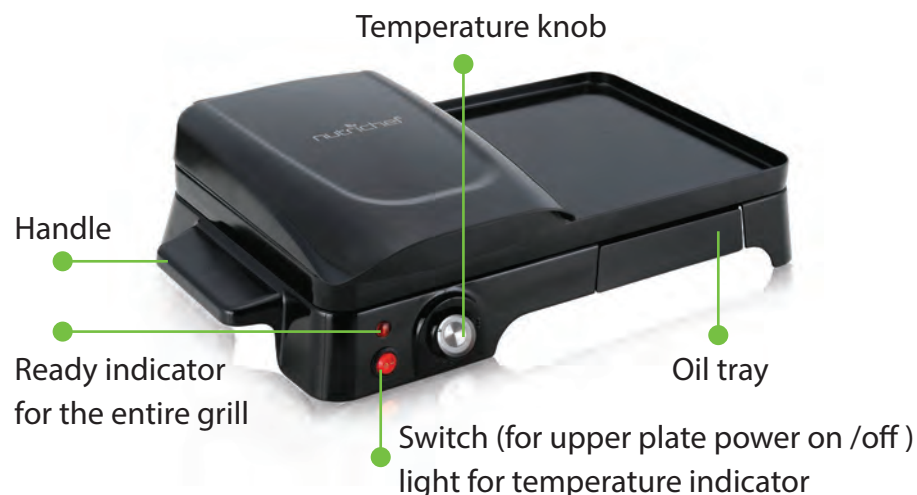

HOW TO USE

This product is for household use only.

Getting Started

1. Remove all packing material and any stickers.
2. Wipe plates with a damp cloth or sponge to remove any dust.
Wipe it dry with a soft cloth or paper towels.
3. Select a location where the unit is to be used, leaving enough space between the back of the unit and wall to allow heat to flow without damaging the cabinets or walls.
4. Plug cord into a standard electrical outlet, turn clockwise the temperature knob to on position as required (the power of up and down plates is on), and switch to on (top plate power on), the red indicator and switch light will be on, the temperature of the pan reaches the setting temperature when the red light and the switch light is off. The switch light and red light will auto on /off cycle for setting the temperature by thermostat, if temperature knob is on off position, the top and down plate will not heat any more. Using for the first time it is better to apply some oil or grease to the plate.
5. **Important:** Steam may be released between the cooking plates. Caution should be taken to prevent hands from coming into contact with the steam.
6. After use, unplug unit from the electrical outlet and allow it to cool to room temperature before cleaning.

CARE AND CLEANING

Cleaning

Important: Unplug and allow it to cool before cleaning.

Never immerse the machine in water or any other liquid.

1. Wipe the lid, base, and cooking plates with a damp cloth and a non-abrasive soap or dishwashing detergent. Wipe it with a clean, soft, damp cloth and towel to dry.

2. **Storage:** Store cleaned machine in a clean dry place.

3. **Important:** Never store while it is still hot or still plugged in.

4. **Important:** Never wrap cord tightly around the appliance.

Do not put any stress on cord where it enters unit, as this could cause it to fray and break.

SPECIFICATION

Voltage: 120V

Frequency: 60Hz .

Power:1500W

WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.


The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The Warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

CORRECT DISPOSAL OF THIS PRODUCT

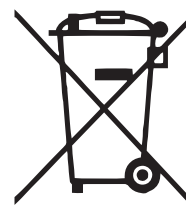

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.