

PYLE®

PyleAudio.com

718.535.1800 718.236.2400(fax)
1600 63rd Street, Brooklyn NY 11204

PYLE®

PKRK210 OPERATING INSTRUCTIONS

**1000 Watt Bluetooth Karaoke Vibe Portable PA Speaker
w/ Dual 10" Woofers, 7" TFT Screen, DVD Player
and VHF Wireless Handheld Microphone**




Karaoke Vibe

User's manual


www.pyleaudio.com

Panel design

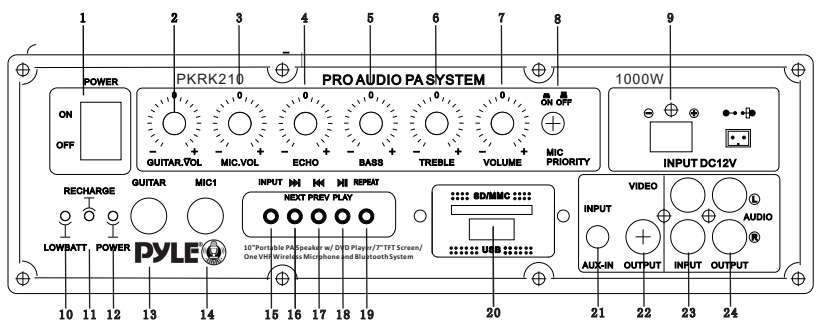

- | | |
|---|---|
| 1. Power ON/OFF switch | 13. Guitar Input slot |
| 2. Guitar Volume controller | 14. MIC input slot |
| 3. Mic volume | 15. Input selectors |
| 4. Echo for microphones | 16. Next song selector |
| 5. Bass controller for main channel | 17. Previous song selector |
| 6. Treble controller for main channel | 18. Play for Mp3 or other audio sources |
| 7. Master volume controller | 19. Repeat function for USB/SD |
| 8. Mic Priority ON/OFF | 20. Mp3 player |
| 9. DC 12V Input | 21. Aux-In |
| 10. Low battery indicator lights | 22. Video output |
| 11. Charging indicator lights | 23. Audio Input |
| 12. Power ON/MP3 Working indicator lights | 24. Audio Output |


DVD Panel design

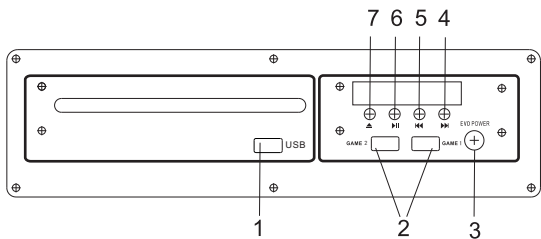

1. USB slot
2. Game Slot
3. Power ON/OFF
4. Next
5. Previous
6. Play/Pause
7. Open/Close

DVD Remote control

1. Open/Close for DVD
2. PAL/NTSC/AUTO switch
3. Mute for speakers
4. Random play
5. Subtitle selector
6. Angle: choose different angles for visual
7. Video Mode selector
8. A-B: Repeat from A to B
9. Set up: set up for many functions
10. 11. 28. 30. Four directions controllers
12. Menu for DVD player
13. Language: Choose to different operation language
14. STOP: stop the disc playing
15. Volume +: increase the Volume
16. VOLUME -: decrease the volume level
17. 1-10. 10+: Numbers for choose discs or songs
18. Time: select the time you want to play
19. Next for song or other playing
20. Previous for song or other playing
21. Forward
22. Backward for discs
23. DVD/USB switch
24. Programme: make programmer for your playing
25. Play/Pause controllers
26. Reset: reset for all playing back to Menu
27. Title: press this will playing from title
29. Confirm: confirm for your operation
31. PBC: open all menu for discs
32. View
33. Repeat: repeat for disc or songs
34. Slow: will slow down your playing
35. Eq, choose different sound effect
36. ZOOM: enlarge what you playing
37. STEP: step playing the present videos or pictures
38. OSD: operation situation display
39. Power: power in or standby your DVD player

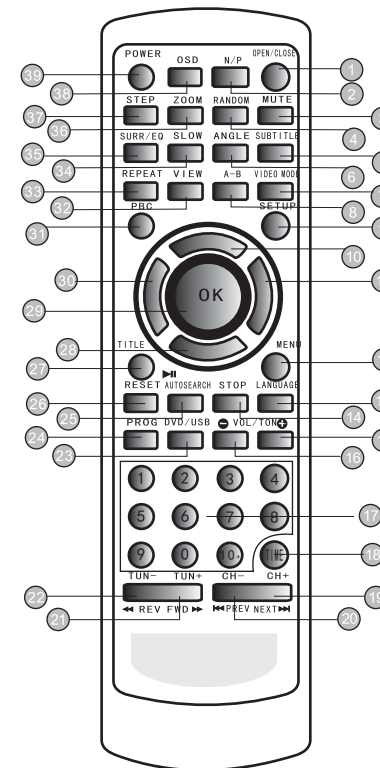

7" display screen



Instructions

Turning ON/OFF

The PA speaker can be powered when connected to main power or using the internal 12V battery.

1. Connect the power cable to the top of the unit.
2. Connect the other end of power cable to main power.
3. Turn on the switch for the main power.
4. The unit will automatically power on when connected to main power.

Notes: If you wish to use the internal battery power of the unit, just simply turn on the Battery switch located on the top of unit to ON.

Charging

Before using the PA speaker for the first time, charge the unit at least 8 hours.

1. Connect the power cable to the top of the panel.
2. Turn off the battery switch on the top of the panel.
3. Recharge indicator light will be on when unit is charging.

Notes: Notes: The internal battery will charge while the unit is being operated and the power switch is on. It is better to charge the unit while the power switch is off.

Instructions

Using the Wireless Microphone

The PA speaker comes with wireless microphones to get you started straight out of the box.

1. Tune on the unit.
2. Unscrew the bottom of the microphone to access the battery enclosure. Insert 2XAA batteries into the microphone. Take note the battery polarity when inserting the batteries.
3. Replace the bottom microphone cover.
4. The wireless microphone will flash once and automatically pair with the PA speaker, it is ready to use. If it does not flash, check that you have inserted the batteries correctly or replace old batteries.
5. Adjust the volume of the microphone by turning the MIC VOL knob located on top control panel

Notes: Please do not operate the microphone directly in front of the PA speaker, please set the MIC VOL/ECHO at a lower level before turning on the wireless microphone. Operating the microphone incorrectly will cause a loud squealing noise. Please turn off the power switch when the wireless microphone is not in use. This will save the battery.

Instructions:

Using the Wired Microphone

You can connect the wired microphone to this unit using the MIC INPUT located on the top of control panel.

1. Turn off the unit.
2. Connect your wired microphone to the MIC INPUT located on top of the control panel.
3. Adjust the microphone volume by tuning the MIC VOL/ECHO knobs located on top control panel.

NOTES: You can use the wired microphone and wireless microphone at the same time.

Connecting a Guitar

You can connect your Guitar to unit using the 1/4" GUITAR INPUT plug.

1. Turn on the unit.
2. Connect your guitar cable to GUITAR INPUT port on top control panel.
3. Adjust the volume by turning the GUITAR VOL on top control panel.

Instructions

USB/SD Card Playback

You can play music from USB stick or SD Card using the USB/SD slot on the PA speaker.

1. Turn on the unit.

2. Insert your USB or SD card into the slot.
 3. Once inserted the USB or SD card unit will automatically play.
 4. You can use the PRE/NEXT/PLAY/PAUSE to control and play music.
- NOTES: The speaker system can play the following audio file formats: MP3,MP4,WMA.The USB/SD Card no more than 32GB. Operation may be slower when searching large memory files. It will need several seconds to respond when your USB/SD Card full of contents.

BLUETOOTH playback

You can connect your Bluetooth phone or other device to the PA speaker.

1. Turn on the unit.
2. Press the INPUT button which is located on top control panel, next to the USB/SD slot.
3. The Bluetooth is on when you hear two “tone” indicator sound.
4. Use your Bluetooth phone or other device to search for the PA speaker. It will displayed as PKRK210.
5. Connect your device by selecting PKRK210, it will require you to enter a four digit code, the code is 0000.
6. Enter the code and connect with unit.
- 7.Play music on your phone or device, sound will come from the speaker through the BLUETOOTH wireless connection.
- 8.You can use the VOLUME/BASS/TREBLE to adjust the sound level for BLUETOOTH, also you can adjust the Bluetooth music sound through your own phone or other device.

NOTES: If there is no sound through the PA speaker during Bluetooth, Check the volume controller both on the unit and on your phone or other device.

Using the Radio

- 1.Turn on the unit.
- 2.Press INPUT once, to select FM Radio.

- 3.Press PRE/NEXT to select your desired radio station. Ensure that you have the extended the antenna located on the rear of the speaker. It will ensure the best possible radio quality and signal strength.
- 4.When you first use the radio, press NEXT button twice, it will auto search and store the radio stations with the strongest signal.

Instructions

Use of the External Battery Option

To use the PA speaker longer than the internal battery life, you can connect the PA speaker to a external 12V Battery Source.

- 1.Find the INPUT DC 12V on the top control panel.
- 2.Use the correct cable connect the INPUT DC 12V.

NOTES: The PA speaker will consume the internal battery first, when it is low, the LOW BATTERY indicator light located on the control panel will turn on, you can use the external 12V battery to power on the unit. The external 12V battery will also charge the internal battery while in use.

PYLE®

PyleAudio
1600 63rd St
Brooklyn, NY
11204
www.pyleaudio.com