# STAINLESS STEEL WATER BOILER





## **OPEN**

Remove the cover in the opposite direction.

# **FILLING**

- Open the cover and fill water into the jug.
- Do not fill it under the MIN level.
- Do not fill it over the MAX level.
- Do not forget to close the lid firmly after filling with water.

#### ON

- Connect the power connection to a wall outlet, then the "**Heating**" light will turn on.

Warning: Do not open the lid while the water is boiling. There's a potential danger of burns.

## **KEEP WARM**

- When the water boils, the "**Heating**" light turns off, and the "**Keep Warm**" light turn on, the water temperature keeps warm at 185° fahrenheit.
- The kettle can be turned off manually by removing the kettle from the base at any time.

#### **POUR WATER**

- Press the **Serving Spout** button to pour water, the water stops when the button is released.

