# MULTI-FUNCTIONAL ELECTRIC KETTLE



# Model: PKWK38





#### MAIN COMPONENTS:

1. PP cover	2. "Reset" button	3. Spoons lid compartment
4. Pilot lid	5.Connector base	6. On switch
7. Spoons	8. Connector	

# **ATTENTION:**

1. Carefully read these instructions before using the appliance for the first time and keep it for future questions.

2. This appliance can be used by children at the age of 8 or more, and people with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given an appropriate supervision or instruction concerning the safety use of the appliances and understand the dangers involved.

3. Keep all plastic bags and packaging components out of the reach of children. They are potentially dangerous.

4. Do not connect the appliance to an outlet without checking that the voltage on the rating plate is the same as the one you have at home.

5. Ensure the plug has an adequate earth base.

6. The kettle works with electricity only. Never use the jug on an electric or gas cooker, nor in a microwave. Do not use it when it has a fissure.

7. Never connect without the water or milk being over the minimum level, and not going over the maximum indicated level (0.8L).

8. If the kettle is too full, the water may splash when it boils.

9. **VERY IMPORTANT**: Never immerse the appliance, the connector with the cable in water or other liquids.

10. Don't open the lid when the water is boiling.

11. Don't allow children play with the appliance. Keep the appliance out of the reach of children.

12. Keep the appliance and the cable cord out of the reach of children less than 8 years old.

13. The exterior of the jug will get hot. Use the handle to manipulate.

14. The kettle must only be used with the supplied cable cord.

15. Always use with the lid on.

16. Before using the kettle for the first time, use it with water a couple of times to clean out completely.

17. This appliance has being designed for domestic use only.

18. It is suggested that the cleaning and maintenance done by users, should not be done by children under 8 without any supervision.

19. If the cable deteriorates it should only be changed by an authorized service center.

#### **INSTRUCTIONS OF USE:**

1. To take out the spoons, open the lid by sliding it upwards.

# **BOIL WATER:**

1. Open the lid and pour water into the jug.

2. Bear in mind that the water level must be between the minimum (**MIN**) level and the maximum (0.8L) level shown inside.

3. Insert the connector into the base.

4. Plug the appliance to an outlet, rotate the dial to "**MAX**", and the kettle will start to boil water to 212  $^{\circ}$ F

5. The time it takes to heat the water will vary according to the amount of water.

6. Once the water is hot, the indicator light will turn off.

7. After a period of time if you want to boil the water again, you can use the "**Reset**" button.

8. If you are not going to use the "**Reset**" button, set the switch to the "**Min**" position and unplug the appliance.

9. After water reaches boiling, if you don't want to maintain heat, you can rotate the switch to "**Min**" to turn off.

#### MAINTENANCE AND CLEANING:

1. Before any cleaning is done, please ensure the appliance is unplugged from the outlet.

2. Clean the outside with a slightly dampened cloth.

3. The inside can be cleaned with water and dishwasher soap suit. Never immerse or rinse the outside of the appliance.

4. If using hard water, you may get alkaline residue in the jug with normal use. To clean, use an aluminum-friendly alkaline remover. You will find it in your local store.

5. Do not use chemical or abrasive products, such as metallic scourers. These may deteriorate the surfaces of the appliance.

# **ENVIRONMENT PROTECTION:**

1. Dispose of the appliance according to the local garbage regulations.

2. Never throw it away in the garbage in order to help with improvement of the environment.