

DIGITAL YOGURT MAKER USER MANUAL



PKYM26

BEFORE OPERATING THIS UNIT, PLEASE READ THESE INSTRUCTIONS

SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed, including the followings:

1. Read all instructions.
2. Never immerse the cord, plug or appliance in water or other liquids.
3. Use the appliance only for its intended use.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Close supervision is necessary when an appliance is used by or near children.
6. Unplug from outlet before cleaning or when not in use.
7. Do not use outdoor.
8. The use of accessory attachments not recommended by this appliance manufacturer may cause hazards.
9. For household use only.
10. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
11. The appliances are not intended to be operated by means of an external timer or separate remote-control system
12. Keep the appliance and its cord out of reach of children aged less than 3 years
13. This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. This appliance can be used by children aged from 3 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
15. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
16. Children should be supervised to ensure that they do not play with the appliance
17. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.


BEFORE FIRST-TIME USE

1. Check the voltage rating on the base corresponds to the mains voltage in your home. Remove any labels or stickers from appliance.
2. Before first use or after periods of prolonged storage, thoroughly wash cover, glass bottle and top in warm, soapy water then rinse and dry carefully.
3. Wipe the inside of yogurt maker with a damp cloth.
4. Prepare following utensils: a high sided saucepan, a jug, a sieve and a spoon. Ensure all these utensils and glass bottle and tops are washed before start making yogurt. Allow these utensils air dry.

TO USE

1. Measure 1200 c.c.(6 glass bottles)of market milk or fresh, pasteurized milk(it can be either full cream, skimmed or low-fat milk)then placed in a high sided saucepan.
2. This milk must be heated to almost boiling. Keep the milk at this temperature for about 3 minutes then remove the pan from the heat and allow cooling to body temperature. Do not allow the milk to boil, otherwise, the yogurt will taste or smell bad or will remain too soft.
3. When the milk becomes cooled, use the sieve to pour the milk into the jug.
4. Stir in one glass bottle (200c.c.) full of natural yogurt (this can be either bought from shop or from a previous batch of homemade yogurt. If use homemade yogurt, please repeated only 1 times).
5. Divide the yogurt and milk mix into 7 glass bottles. Fit the tops onto the glass bottles. Place the glass bottles into the yogurt maker and place the cover onto the base of yogurt maker.

PARTS IDENTIFICATION

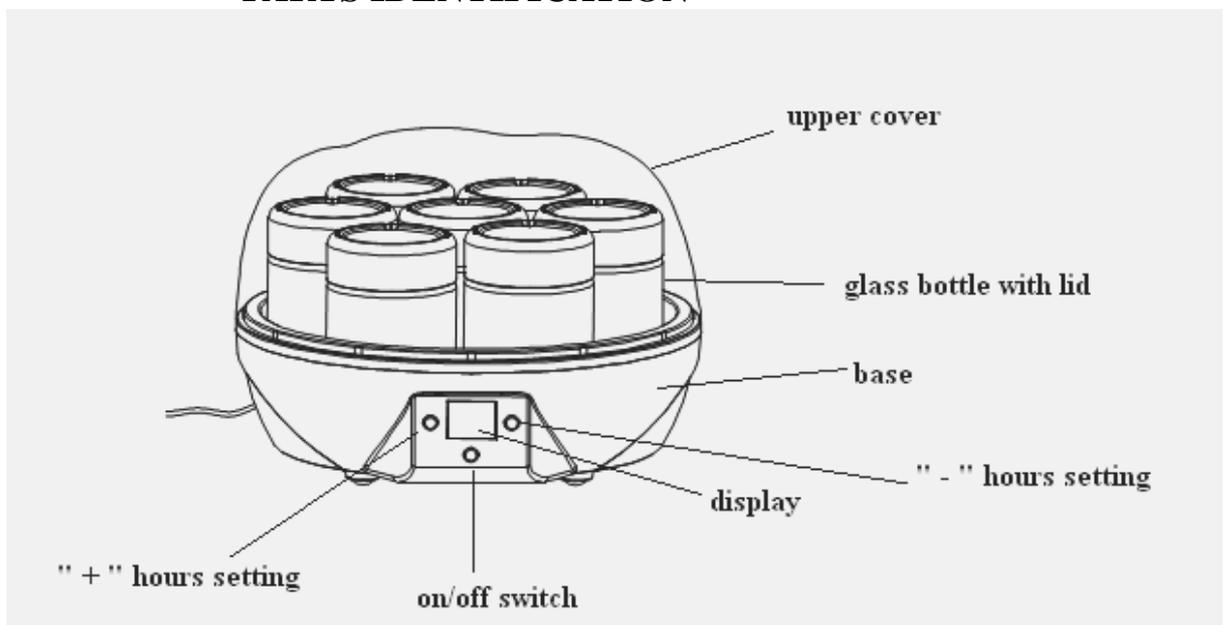

SAVE THESE INSTRUCTIONS

TO OPERATE YOGURT MAKER WITH TIMER FUNCTION

1. Plug the yogurt maker into the wall socket.
2. Turn on the “ on/off “ switch.
3. Set desired hours by pressing “ + “ / “ – “ button. It will take about six hours to make yogurt for full cream milk. For skimmed milk will take about eight hours.
4. After the yoghurt is done the machine will be turned off.
5. If you wish to continue then repeat the same procedure as above mentioned.

THE YOGURT MAKER SHOULD REMAIN PERFECTLY STILL DURING THE MATURING PROCESS. DO NOT MOVE THE APPLIANCE OR REMOVE ANY GLASS BOTTLES AS THIS WILL AFFECT THE FIRMNESS OF THE YOGURT.

TO SERVE

Once the yogurt cools down, it can be served with natural flavor or add honey, sugar to sweeten the yogurt or add fruit toppings. Everyone can add their favorite flavor to suit their individual taste.

TO CARE AND CLEAN

1. Before cleaning the yogurt maker, always unplug it.
2. Wash the cover thoroughly, glass bottles and top in warm, soapy water then rinse and dry carefully.
3. Wipe the inside of yogurt maker with a damp cloth.
4. Do not immerse the cord, plug or appliance in water or other liquids.
5. Do not clean plastic parts with a scouring agent. Use a solution of normal washing up liquid and warm water to avoid scratches.
6. The glass bottles can be washed by dishwasher.