



PYLE[®]

CYCLE SERIES

1600 63RD Street • Brooklyn • NY • 11204

718 535-1800 • 800 444-5671

Fax: 718 236-2400

www.pyleaudio.com

PYLE®

CYCLE SERIES

PLBKA60BK

300 Watts Waterproof Portable Bicycle/Scooter MP3/Ipod Music Player (Black)

PLBKA60CR

300 Watts Waterproof Portable Bicycle/Scooter MP3/Ipod Music Player (Chrome)



USER'S MANUAL

Congratulations on your purchase of this Pyle Cycle Series bike speaker system. Like all Pyle products, this bike speaker system has been thoroughly tested to ensure consistent, reliable performance under some rigorous conditions. Our systems were designed to withstand water, moisture, heat, and direct sun exposure. We pride ourselves in customer satisfaction. If you should have any questions regarding the installation and/or operation of your Pyle Cycle Series bike speaker system, which is not covered in this manual, please contact your Pyle Dealer or Pyle Technical Support.

What is Included?

Upon un-packing your new Pyle Cycle Series audio system, please check to ensure you have all the included parts.

1. One piece portable MP3 player with in 2G memory capacity.
2. One pair custom-tooled bullet shape speaker.
3. One pair easy installation bicycle handlebar brackets.
4. One piece bike carrying bag for MP3
5. One piece USB cable
6. One piece cabel for speaker and MP3 connecting
7. One pair AAA battery (1.5V)

Notes

1. Do not use the player in the particularly hot, cold, dusty and humid environments.
2. Do not let the player hit with a hard object friction, or may result in surface scratched, or other hardware or battery damage.
3. Try to avoid operating under dry conditions to prevent static electricity.
4. Do not suddenly disconnected the player when it is in format progress, uploading and downloading , otherwise it may cause program error.

The Player features

1. Supported audio formats: MP3;
2. To support off memory function;
3. Support for Win98 (need to install driver) / Win 2000/Win XP operating system.

Product key features

Button	Operation	Play Status	Stop Status
PLAY/STOP	short press	enter the pause state	into play state
	long press	shutdown	shutdown
NEXT	short press	selected and play next song	selected and play next song
	long press	forward	/
PREVIOUS	short press	selected and play last song	last song
	long press	rewind	/
VOL+	short press	volume up	/
	long press	continuous volume up	/
VOL-	short press	volume down	/
	long press	continuous volume down	/

LED display status

LED display		Green LED
turned on	regular turned on	on
	low vottage shutdown	flash 3 times and then shutdown
shutdown	regular turned off	off
	low vottage shutdown	flash 10 seconds and then shutdown
music mode	no files status	on (Short press PLAY, the light will be turned on after 3 flash)
	play	slow flash
	forward / continuous volume up	fast flash
USB mode	data transferring	off
	No data transmission	off

Operation

1 Open/close the player

When you need to open the player, you just long press "PLAY" button, that is able to boot. long press "PLAY" button, the player will be shutdown. Make sure the battery before operate the player.

Note:

1. Shutdown state, long press "PLAY" button to boot the player and into playing condition;
2. When the machine is in stopped or suspended state, and in 1 minute without any operation, the machine will automatically shut down;
3. When operating if the machine is in low voltage state, two LED lights will flash 3 times and automatically shut down the machine.

2 MUSIC (music mode)

Support for music playback, pause, rewind and fast forward music volume control and other function.

2.1 Play Music

1. Short press "PLAY" button will start playing music, press the "PLAY" key again to pause music;
2. In the play state, short press "NEXT", "PREVIOUS" button to choose different songs
3. Long press "VOL +", "VOL-" button to adjust the volume;
4. Loop player, all music files in memory.

3 USB Connection

Player connect PC's USB interface can transfer music files or other data:

1. Check your USB port on the PC
2. Connected the player's USB interface and USB port on the PC (USB extension cable can also be used);
3. In the USB status, all buttons are invalid;
4. Disconnect the USB, the player automatically shuts down;
5. Note: During data transfer, do not disconnect the USB cable.

MP3 Specifications

SAMSUNG memory 2GB (built-in flash)

Battery Type AAA batteries 1.5V * 2

SNR greater than 85dB

MP3 file format support

Installations

Securing the bullet shape speaker into the handlebar bracket.

