

PYLE

PyleUSA.com



PLCD54MP

CD/MP3 Stereo Receiver Power Amplifier
AM/FM/CD/MP3/USB/AUX Stereo Receiver, Single DIN,
30 Preset Memory Stations, LCD Display
with Remote Control (Black)

USER GUIDE

CONTENTS

INTRODUCTION	3
What's in the Box	3
DIMENSIONS	3
OVERVIEW OF THE COMPONENTS	5
GENERAL OPERATION	6
<i>Power On/Off</i>	
<i>Removing The Front Panel</i>	
<i>Volume Up And Down</i>	
<i>Mute On/Off</i>	
<i>Changing The Modes</i>	
<i>Setting The Audio/Menu</i>	
<i>Display</i>	
<i>Auxiliary Input Jack</i>	
<i>Reset</i>	
RADIO OPERATION	7
<i>Switch Between Europe/USA/Asian/Russian Frequency</i>	
<i>Changing Bands</i>	
<i>To Store / Recall Preset Stations</i>	
<i>Manual Tuning</i>	
<i>Seek Tuning</i>	
<i>Automatic Store Preset Station</i>	
CD/USB OPERATION	7
<i>Insert/Eject CD</i>	
<i>USB Connection</i>	
<i>Select Next Track Or Previous Track</i>	
<i>Fast Forward/Reverse</i>	
<i>Play/Pause</i>	
<i>Introduction Scan</i>	
<i>Repeating The Track</i>	
<i>Playing All Tracks In Random</i>	
<i>Folder/Track Navigation</i>	
WIRELESS BT OPERATION	10
<i>Pair And Connect</i>	
<i>Make A Call</i>	
<i>Redial Last Dialed Number</i>	
<i>Answer A Call</i>	
<i>Reject A Call Or End A Call</i>	
<i>Switch Audio Between Car Audio And Mobile Phone</i>	
<i>Adjust Talk Volume Audio Streaming (A2DP)</i>	
APP OPERATION	11
SPECIFICATION	12

 
INTRODUCTION

Do keep your original invoice and purchase receipt in a safe place in case of future service and warranty claims. You may also contact your appointed service agent for any future technical support requirements.

What's in the Box:

- Stereo Receiver
- Remote Control



Dimensions (Unit: mm)

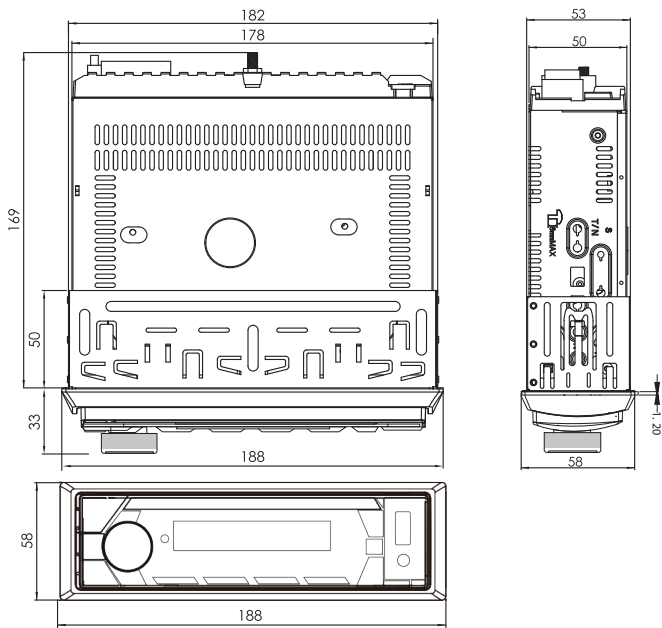

WIRING CONNECTIONS

WIRING DIAGRAM

  PRECAUTION
+12V DC
NEGATIVE
EARTH

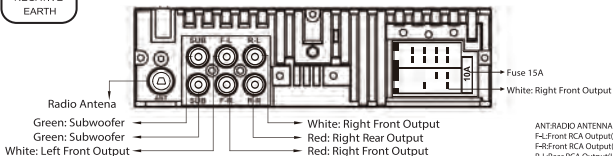


ANT-RADIO ANTENNA JACK
F-L-Front RCA Output(Left)
F-R-Front RCA Output(Right)
R-L-Rear RCA Output(Left)
R-R-Rear RCA Output(Right)

	COLOR	FUNCTION
A	Red	Ignition Line
	Black	Earth wire
	Blue	ANT automatic
	Yellow	Power supply
B	Green Green/Black	Rear left horn (+) Rear left horn (-)
	White White/Black	Front left horn (+) Front left horn (-)
	Gray Gray/Black	Front right horn (+) Front right horn (-)
	Violet Purple/Black	Rear right horn (+) Rear right horn (-)

COMPONENTS

 OVERVIEW OF THE COMPONENTS

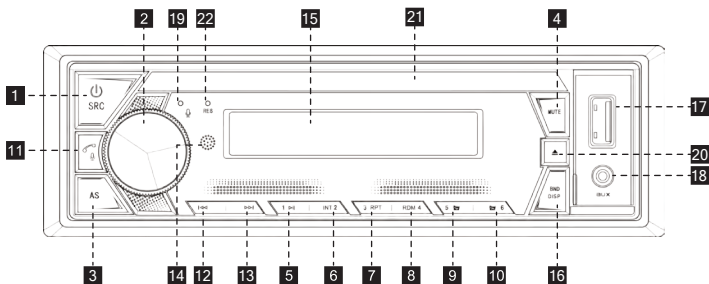

1. Power on/off, Mode (Source)
2. Volume knob, SEL (Push for Audio/Menu Setting)
3. AS (Auto Store Preset Station)
4. Mute
5. Preset #1, Play/Pause
6. Preset #2, Intro Scan
7. Preset #3, Repeat
8. Preset #4, Random
9. Preset #5, Folder Down, Jump 10 Track backward
10. Preset #6, Folder Up, Jump 10 Track forward
11. Answer Call, End Call (press and hold)
12. Tune/Track down, reverse
13. Tune/Track Up, fast forward
14. IR Remote Sensor
15. LCD Display
16. Band, Disp (Display clock time and other info)
17. USB Port
18. Aux Input Socket
19. Hands-free Microphone
20. Eject CD
21. Disc Slot
22. Reset

GENERAL OPERATION

Power On/Off

- Press any button to turn the unit on.
- Press and hold the **U/MODE** button to turn the unit off.

Removing The Front Panel

Press the **RELEASE** button to detach the front panel.

Volume Up And Down

Rotate the Volume knob to adjust the volume level.

Mute On/Off

Briefly press the  button to toggle mute on or off.

Changing The Modes

Press the **U/MODE** to select between Radio, Disc, USB (with USB device inserted), AUX-IN (auxiliary input) and BT (Wireless BT) modes.

Setting The Audio/Menu

- Press Volume (SEL) button momentarily to select between the audio/menu functions: BASS, TREBLE, BALANCE, FADER, EQ USER/FLAT/CLASSIC/ROCK/POP, LOUD OFF/ON, BEEP OFF/ON, CLOCK 24/12, CLOCK SETTING, BT MENU/AUTO, DISTANT/LOCAL, STEREO/MONO, AREA EU/US/AS/RU.
- Rotate the Volume knob to adjust or activate your desired function/audio.

Display

- With the unit on, press and hold DISP to display clock time.
- Press and hold DISP to toggle display between various displayed information.

Auxiliary Input Jack

Using a 3.5mm cable to connect an external device such as MP3 players, CD players etc. to the auxiliary input jack on front panel. Then you can hear the sound of other playback devices such as MP3 players, CD players etc. through your car speakers.

Reset

Push the **RESET** button (behind the front panel) with a thin object with a pointed end to reset the unit back to the factory default settings 6 Second.

RADIO OPERATION

Switch Between Europe /USA/Asian/Russian frequency

In radio mode, press the Volume button momentarily to choose the "AREA EU/US/AS/RU" item, then rotate it to switch between EU(europe), US (USA), AS (Asian), RU(Russian) frequency. The system will change the frequency setting in about 3 seconds.

Change Bands

In radio mode, shortly press the BAND/DISP to select between the FM1, FM2, FM3 and AM1 (MW1), AM2 (MW2) bands.

To Store/Recoil Preset Stations

The radio can be stored 6 preset stations for each band (FM1, FM2, FM3, AM1 and AM2) for a total of 30 preset stations.

- **To memorize a station:**

Press and hold the desired preset buttons (1-6) to save a radio station.

- **To recall a preset station:**

Briefly press the respective station button (1-6) to recall the corresponding preset station.

Manual Tuning

In the radio mode:

Briefly press the >>I or I<< button to search the next or previous frequency step by step.

Seek Tuning

In radio mode:

Press and hold the >>I or I<< button to seek to next or previous strong station.

CD/USB OPERATION

Insert CD

With the label facing up, insert a standard size CD into the CD slot. Playback will begin automatically.

Eject CD

Press ▲ (Eject button) to eject the CD.

USB Connection

If you would like to playback files contained in a USB stick, please insert the stick into the USB port. The MP3/WMA and other music files will be played automatically.

Note: The USB port of this car radio is also designed for charging for iPhone/andriod mobile phone. The charging current consumption is 1 ampere.

Select Next Track Or Previous Track

In the CD/USB mode, briefly press the >>| or |<< button to play the next or previous track.

Fast Forward/Reverse

Press and hold the >>| or |<< button to fast forward or reverse a track.

Play/Pause

Press the ▶/|| button to interrupt the CD/USB playback (pause function). Press this button again to continue the playback.

Introduction Scan

Press **INT** to play the first 10 seconds of each track on CD/USB. Press again to cancel the INT function.

- **INT ON** - Plays the first 10 seconds of each track.
- **INT OFF** - Cancels the INT function.

Repeating The Track

Press **RPT** to toggle between RPT FLD, RPT ALL, and RPT ONE.



 

- **RPT FLD** - Continuously repeats all files in current folder.
- **RPT ALL** - Plays all tracks on CD/USB device.
- **RPT ONE** - Continuously repeats selected track.

Playing All Tracks In Random

Press **RDM** to play songs in random order, press again to cancel the RDM function.




- **RDM ON** - Plays all tracks in random order.
- **RDM OFF** - Cancels the RDM function.

Folder/Track Navigation

- Press the  or  button to select the previous or the next folder. Folder access is only available on devices with more than one folder.
- Press and hold the  or  buttons to jump 10 tracks backward or forward. It is required that over 10 tracks be available on the storage medium.

Remote Control

Name of buttons and location

1.  (Power ON/OFF) Button
2. **VOL +/VOL-** (volume up/down)
3. **Band button**,  (reply call)
4. **◀◀ button**: Tune down, seek down; Track down, fast reverse
5. **SEL** (selection) button
6. **▶▶ button**: Tune up, seek up; Track up, fast forward
7. **Mute/DEL (Delete) button**
8. **CLK** (clock setting)  button, (end call) button
9. **▶|| button**: preset station 1 button, keypad 1
10. **INT** (intro) button, preset station 2 button, keypad 2
11. **RPT** (repeat) button, preset station 3 button, keypad 3
12. **RDM** (random), preset station 4 button, keypad 4
13. **-10** (previous 10 tracks), preset station 5 button, keypad 5
14. **+10** (next 10 tracks), preset station 6 button, keypad 6
15. **ST** (stereo) button, keypad 7
16. **LOUD** (loudness) button, keypad 8
17. **AMS** (automatic music search) button, keypad 9
18. **MODE** button, keypad *
19. **EQ** (Equalizer) button, keypad 0
20. **LOC** (local)/DX button, keypad #



WIRELESS BT OPERATION

Pair And Connect

Before using the Wireless BT device as a handsfree system for a BT enabled mobile phone for the first time, you must pair and connect the two devices as follows:

1. In any mode, prior to pairing and connecting, the BT logo on the LCD indicating that no device is connected. The head unit broadcasts the pairing signal constantly when no devices are connected. Activate the BT on your device before you begin with the pairing process.
2. When your phone finds the car audio system, the "PYLE" name will be displayed on your phone screen.
3. Choose the "PYLE" from your mobile phone list to pair and connect with the car audio system. Upon confirming, the BT logo will stop flashing.
4. When pairing is complete, the mobile phone audio will automatically transfer to the car audio system whenever a call is made or received, or when the mobile phone plays music.

Note:

For more details of Wireless BT pairing, please refer to the owner's manual for your mobile phone.


Make A Call

- To make a call, dial the call directly from the paired mobile phone.

Redial Last Dialed Number

Press and hold the  button to redial the last dialed phone number.
Press the  button to activate SIRI function.


Answer A Call

When the mobile phone is called, the incoming telephone number displays on the LCD display, press the  button to answer the incoming call.

Reject Or End A Call

Press the  button to reject, press and hold the  to end the call.

Switch Audio Between Car Audio And Mobile Phone

During a call, press the  button to switch the audio source from the car audio system back to your mobile phone.

Adjust Call Volume

- During a call, use Volume knob or **VOL+/VOL-** button to adjust the call volume level.
- Use the **MUTE** button to mute sound.

Audio Streaming (A2DP)

The head unit supports A2DP wireless streaming audio from a Wireless BT mobile device directly to your head unit.

The following functions can be used to control the music:

- Press the **>>I** button to skip to the next available audio track.
- Press the **I<<** button to skip to the previous audio track.
- Press the **▶/||** button to toggle between play and pause during music playback.

APP OPERATION

Using the application from PYLE, you can wireless remote control the car audio of **PLCD54MP** head unit with Apple & Android devices.

Scan the QR code to download the PYLE Android/IOS App.



Android App



IOS App

Connect your smartphone to **PLCD54MP** through BT, then tap the APP and turn on it on your smartphone.

Now you can control the audio and the RDS function (Optional) of **PLCD54MP** head unit by your smartphone.

SPECIFICATIONS

Features:

- AM/FM/CD/MP3/USB/AUX Stereo Receiver
 - Single DIN
 - LCD Display with Remote Control
 - CD/MP3 Stereo Receiver System
 - AM/FM Stereo Radio, 30 Station Memory
 - Wireless BT Audio Ability
 - USB Flash Readers
 - Aux (3.5mm) Input Connector Jack
 - Connect & Stream Audio from External Devices
 - MP3 Digital Audio File Playback
 - LCD Display Panel
 - USB Reader
 - Electronic Volume Control (treble, Balance, Fader)
 - Memory/Repeat/Random/Intro Play
 - Mute/Clock Control
 - ID3 Tag Song Readout for Artist Name/Song Title
 - RGB Button Control
- 2 pair RCA Output + 2x Subwoofer
- Equalizer (EQ) Electronic Audio Configuration
 - Automatic Memory Preset Store/Scan Mode
 - Repeat/Shuffle Song Functions
 - Compatible With XBass, Siri Dialing, Android App, IOS App & Demo Mode

Wireless BT Streaming Connectivity:

- Built-in BT for Wireless Music Streaming
- Built-in Microphone for Hands-Free Calling
- Conveniently Reject/Answer Incoming Calls
- Compatible with All of Your Favorite BT Devices (iPhone, Androids, Smartphones, iPad, Tablets, etc.)
- Wireless BT Version: BT VERSION 4.2

Technical Specs:

 
 
 
- Remote Control Battery Operated, Requires (1) Coin-Type Battery
- Battery Type: 3V Lithium Bat. 240mAh Capacity
- Single DIN Universal Size Standard
- Night illumination: RGB
- MAX. Power: 4x75W (300 Watts)
- PLL Electronic Tuning Radio Tuner
- ISO with 4 Pin/8 Pin Wire Connector
- Stereo/Mono Mode Selectable
- Audio Control: Treble/Fader/Balance, No Treble & Bass
- Preset EQ: Flat/Pop/Rock/Class/Off
- Switchable USA/Europe Tuner Frequencies by Software
- Max. USB Support: 64GB
- Power: DC 12V
- Current Consumption: 10A
- Product Dimension: 4.5" x 7.1" x 1.97" - inches

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PRECAUTIONS ON POWER SUPPLY AND SPEAKER CONNECTIONS:

Do not connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged. **BEFORE** connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

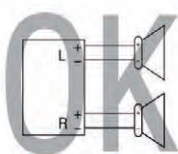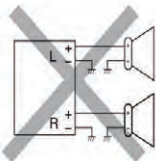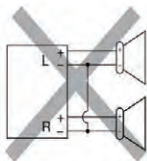

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

California Prop 65 Warning

 **WARNING:**

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov