


BUTTONS/FUNCTION:

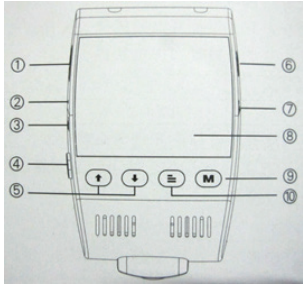

1. SD Card
2. Power indicator light
3. RST
4. Power/Confirm/Record
5. Upper ,Lower/Fast forward, Rewind
6. USB
7. MIC
8. 2.0"HD Screen(Optional no screen)
9. Playback/Photo/Video
10. Menu/Lock video

1. POWER/CONFIRM/RECORD

- In the power off state, short press the power key to turn on the machine and enter to the standby state. In the power on state, if you long press this key, the machine will automatically save video files and then power off.
- In the video mode, short press the key to control the start and stop of the video.
- In the photo mode, short press the key to take pictures.
- In the playback mode, short press the key to play and pause the video file.
- Confirm the setting.

2. RST

- When abnormal conditions occur in the machine, press the key to reset the machine.

3. RAISE/FAST FORWARD

- Press the key to raise.
- In the video and photo mode, Press the key to Zoom in.
- Fast forward the video file when playing.

4. LOWER/REWIND

- Press the key to lower.
- In the video and photo mode, Press the key to reduced focal length.
- Rewind the video file when playing.
- In the video mode, short press the key to open or off sound recording.

5. MENU/LOCK VIDEO

In the standby state, short press the key one time to video menu, short press two times to enter to setting menu. In the setting mode, press the key again to exit to the standby state.

In the photo mode, short press the key one time to enter to photo menu, short press two times to enter to setting menu.

In the playback state, short press the key one time to file operation menu, short press two times to setting menu.

Lock Video

In recording state, short press the key to lock current video file, short press

again can unlock the video file.

6. PLAYBACK/PHOTO/VIDEO

A. Playback

In the standby state, short press the key two times to playback state, press the key again to exit to the standby state

1) In the video mode, short press the mode key two times to playback mode, you can press upper and lower key to browse the image and video data.

2) In the playback mode, if you press the menu key, delete, protect and side show options will appear on the screen. Delete option is selected, you can delete single file or all files. Protect option is selected, you can't delete the file before unlock, so we can protect some important files. Side show option is browse the file in the TF card automatically, we can select the times.

B. Photo

In the standby state, short press the key one time to photo state.

C. Video

Once the machine is on, it will be in the video mode.

USE:

1. TURN ON/ OFF

A. Short press the power key to turn on the machine, long press the power key again to turn off the machine.

B. We must make sure the machine is connected to the car 5V power supply, if we did that, the machine will power on and working after the car started. The machine will save current video file and then power off after the car stalled.

2. SYSTEM SETTING

In video or photo mode state, press menu key two times to "System setting" option. Press the upper and lower key to select the items to be set, press the power key to confirm the setting, press the menu key again to exit to menu.

INSTALLATION:

Tear the 3M glue at the bottom of the recorder and install the recorder on the windshield of the car.

FEATURES:

- Full Color HD 1080p Video Recording
- Camera + Camcorder: Ability to Record Video & Snap Pictures
- Comes with All Necessary Cables & Wiring for Installation
- Micro SD Memory Card Reader
- Easy File Saving & Transfer
- Built-in Microphone for Audio Recording
- PiP (Picture-in-Picture) View Both Cameras On-Screen

SPECIFICATIONS

DASH CAM:

- Compact Size
- Windshield Mountable
- Built-in 2.0" LCD Display Screen
- Simple One Button Video Recording
- Ability to Instantly Playback Recorded Video
- Angle Adjustable Camera Lens
- Size (L x W x H): 3.3" x 2.1" x 1.3"

TECHNICAL SPECS:

Recording Resolution: 1080P HD, 30fps

Imaging Processor: CMD Full Color

Screen Pixels: 480 x 272

Video Format: .MOV, H.265

TV System: NTSC/PAL

Lens Recording: Wide Angle 170 Degree

USB Connector: 2.0

Maximum Micro SD Support Size: 32GB, Not Included

Sold as: 1

Weight: 0 lbs.

CONNECTION:

