

INSTRUCTION MANUAL

1.USE

Screw design,adjusting the height by rotating the screw manually,it is an ideal second lifting tool for tire changing and maintenance on your motorcycle.

2.OPERATION

- 1.Rotate the screw by ratchet wrench to adjust the height of the platform.
- 2.Adjust the platform to the appropriate height and place the lift to the bottom of the motorcycle.Make sure that the center of the load align with the pivot,and keep the load stable and safe.
- 3.When all above done,lift the motorcycle to appropriate height.
- 4.Tighten the motorcycle with other tools to keep it stable.
- 5.After repairing,rotate the ratchet wrench slowly and gently to lower the platform until it departs from pivot,and then take the lift away.

3.WARNING AND MAINTENANCE

- 1.The lift must be used on a solid and level surface,not allowing gradient and uneven surface.
- 2.Keep the load stable and prevent the load from losing balance.
- 3.Before using,lubricate the screw and the nuts with grease to make the lift flexible and antifriction.



Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

