

PYLE

PyleUSA.com



PLML51DB

Stereo Receiver Power Amplifier

AM/FM/MP3/USB/AUX Stereo Receiver, Single DIN,
30 Preset Memory Stations, LCD Display
with Remote Control (Black)

USER GUIDE

INSTALLATION

 
Preparation

The preparation kit is necessary to mount the radio on the dashboard, this kit is available at electronics stores and car audio specialists, check the installation kit before using it to make sure it is the right one for your vehicle.

INSTALL THE DEVICE

1. Lift the left or right top corner of the plastic outer trim ring then pull it out to remove it.
2. Insert the two bracket keys into the left and right side of the chassis to separate the chassis from the housing.
3. Install the mounting knob on the board. Check the opening size of the sliding panel to be mounted. If the measurement is not large enough, carefully cut it until it slips easily on the opening. Do not force the handle in the opening so as not to bend it. Locate the series of dubbing tabs above, below and all sides to be mounted. Completely insert it to the opening of the board, bend the tabs as necessary towards outside to ensure it fits the board.
4. Slide the stereo into the opening in the dash, ensuring that the wires behind are tucked and not pinched.
5. Follow the wiring diagram carefully. Verify you've connected them correctly.
CAUTION! Connect the unit to a 12 Volt power source with adequate ground.
6. Now that your wires are all completed, attach the front panel and turn **ON** the unit (the vehicle must be switched on). If the unit does not work, check the calibration again until the problem is solved. With the new car stereo secured into the bracket, all you need to do is plug the wiring harness back into the stereo and put the assembly back into place.
7. Slide the stereo into the opening in the dash, ensuring that the wires behind are tucked and not pinched. Sometimes this may take a few times when the vehicle has a tight dash opening. Tuck the wires back into an opening behind the unit.
8. Install the plastic outer trim ring
9. Snap all the pieces of trim back into place over the stereo. Double check that all screws and trim pieces are securely in place. Try out the new stereo. Turn the car power on again and play around with the stereo and its settings to be sure everything is in working order.


WIRING CONNECTIONS

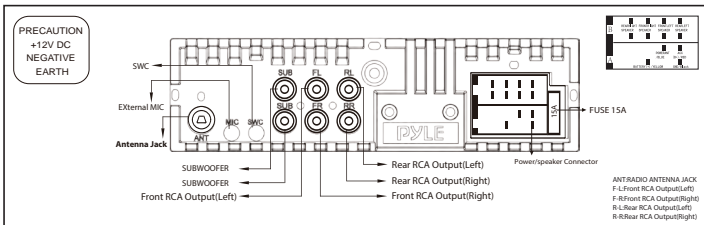

HARDS FREE PUSH-TO-TALK PUSH-TO-TALK

- Allows you to access **SIRI** or **GOOGLE voice** via Wireless BT.
- Your phone must support SIRI or GOOGLE voice. Once connected to BT, your phone will ask for access to your contact list.
- Now you are ready to use **PUSH-TO-TALK**. Press the **PUSH-TO-TALK** icon. You are ready to talk. Call "**(CONTACT NAME)**", the system will call without having to use your phone.

 CONTROL PANEL BUTTONS

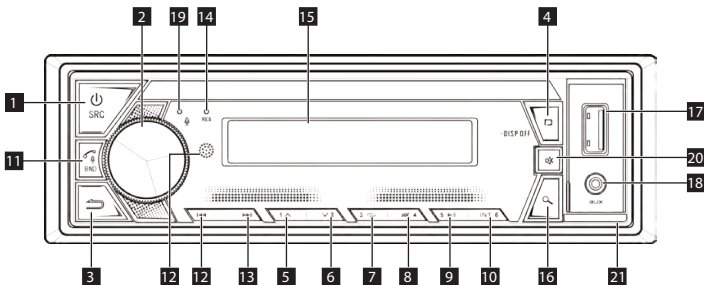

CONTROL PANEL BUTTONS

1. **⏻** (Power)/Mode (source) button
2. **SEL** (select/menu) button and **VOL** (volume) knob
3. **↶** Back to the previous configuration point;
Press **↶**/Bass enhances the pulse function
4. Short press **⏻** button display clock in all mode. In USB mode, Short press to select **All info/Elapsed time/File info/Track info/clock** operation.
Press and hold **⏻** button turn off illumination on panel and touch any button to turn on illumination.
5. **^** Folder up
6. **v** Folder down
7. **RPT** (repeat), button 3 preset
8. **RDM** (random), button 4 preset
9. **▶||** (pause/start), preset station 5 button
10. **INT** (intro), preset button 6 station
11. Press and hold **↶•⏻** BND button to activate SIRI. Short press **↶•⏻** BND button to change band. Short press **↶•⏻** BND button to pick up/cut off phone call.
12. **⏮** (tune back, search back, crawl back, fast reverse)
13. **⏭** (tune forward, search forward, crawl forward, fast forward)
14. **IR** remote control sensor
15. **LCD screen**
16. **AS** (automatic storage/preset station search, automatic search)
17. **USB port**
18. **AUX IN** (auxiliary input)
19. **MIC** input (integrated microphone)
20. **🔊** In power **ON** mode, press the **MUTE** button to toggle mute **ON** or **OFF**.
21. **Release** front panel
21. **RESET**

GENERAL OPERATION

Turn Unit ON/OFF

- Press the power **⏻**/Mode button on the front panel to turn **ON** the unit, and press and hold it again to turn **OFF** the unit.
- Press the power **⏻** button on the remote control to turn the unit ON or OFF.

Adjust Volume (VOL)

Rotate the **VOL** knob on the front panel or press the **VOL+ ▲/VOL- ▼** button on the remote control to increase or decrease the volume level.

FUNCTION

Press the Volume knob and Rotate to select Audio/Display/Tuner/Clock/Beep/Animation/Demo mode function. Press the Volume knob again to select desire function mode.

AUDIO MODE

- Press the Volume knob and Rotate to select SW Level/Manual EQ/Q factor/ Preset EQ/Bass boost/Loudness/Subwoofer set/Fader/Balance/X'Over/DTA Setting/Car type.
- Press and hold Volume knob to select 2 way/3 way X'Over mode.

SW LEVEL

Press the Volume knob and Rotate to select -13 ~ +13 level.

MANUAL EQ

Press the Volume knob and Rotate to select 25 band frequencies level.

Q FACTOR

Press the Volume knob and Rotate to select 1/1.5/2.5/3.5 different Q factor value.

PRESET EQ

Press the Volume knob and Rotate to select user/Natural/Rock/Pop/Easy/Top 40/Jazz/Powerful.

BASS BOOST

Press the Volume knob and Rotate to select Bass boost level.

LOUDNESS

Press the Volume knob and Rotate to select Loudness level.

SUBWOOFER SET

Press the Volume knob and Rotate to switch **ON/OFF**.

FADER

Press the Volume knob and Rotate to select Fader position.

BALANCE

Press the Volume knob and Rotate to select Balance position.

X'OVER

Press the Volume knob and Rotate to select Tweeter/Front HPF/Rear HPF/Subwoofer LPF.

TWEETER

Press the Volume knob and Rotate to select Frequency/Gain left/Gain right.

FRONT HPF

Press the Volume knob and Rotate to select Frequency/Gain.

REAR HPF

Press the Volume knob and Rotate to select Frequency/Gain.

SUBWOOFER LPF

Press the Volume knob and Rotate to select Frequency/Gain/Phase.

DTA SETTING

Press the Volume knob and Rotate to select Position/Distance/Gain/Data Reset/Delay Unit.

CAR TYPE

Press the Volume knob and Rotate to select Small/Medium/Large car type.

DISPLAY

Press the Volume knob and Rotate to select Color Select/Spectrum/ID3 tag/Version/Dimmer.

DIMMER

- Press the Volume knob and Rotate to select ON/OFF/Dimmer Time.
- Press the Dimmer Time to setting ON Time/OFF Time.

LANGUAGE SELECTION

Press Volume button to select language, turn the knob to select English/Russian.

COLOR SELECT

Press the Volume knob and Rotate to select custom R/G/B/ Variable Scan/Red/Pink/Purple/Blue/Cyan/Green/Yellow/Orange.

SPECTRUM

Press the Volume knob and Rotate to switch ON/OFF.

ID3 TAG

Press the Volume knob and Rotate to switch ON/OFF.

VERSION

Press the Volume button to check software version.

TUNER

Press the Volume button to select Local Seek/Mono Set/Regional/RDS Set.

LOCAL SEEK

Press the Volume button to rotate switch ON/OFF.

MONO SET

Press the Volume button to rotate switch ON/OFF.

REGIONAL

Press the Volume button to rotate to select country regions.

RDS SET

Press the Volume button to rotate switch ON/OFF.

CLOCK

Press the Volume knob and Rotate to select Clock Format/Clock adjust/Date Format/Date Set.

BEEP

Press the Volume button to rotate switch ON/OFF.

ANIMATION

Press the Volume knob and Rotate to select ON/OFF and time interval of animation time.

DEMO MODE

Press the Volume button to rotate switch ON/OFF.

Set the clock (CLK)

1. To display the Time press the **CLK** button.
2. To set the time, press and hold the **CLK** button and the time will start flashing.
3. Press the **◀** or **▶** button on the front panel or on the remote control to set the time.
4. Press the **CLK** button and the minutes will start flashing.
5. Press the **◀** or **▶** button on the front panel or on the remote control to set the minutes.
6. Short Press to Increase Bass Level

Change the source mode (SRC)

Press the **SRC** button to switch between the button **RADIO**, **BT** (Wireless BT), **USB** (with a USB device inserted), **AUX-IN** mode (input assistant).

Loudness: LOUD ON/OFF

Press the **LOUD** button on the remote control to change the loud volume to boost the bass output frequency, press again, to turn it off.

DSP SMART ANDROID/IOS APP CONTROL



Subwoofer Control



Time Alignment Control



X'Over Control



25 EQ Control

Preset Equalizer (EQ)

Press the EQ button on the front panel or on the remote control to switch between EQ, OFF, CLASS, ROCK, POP, FLAT.

USB port

The USB port on this stereo device is designed for playing media from USB memory devices.

GENERAL OPERATION

Integrated Microphone

For voice reception when making a call using the hands-free system.

Auxiliary Input Connector

3.5mm auxiliary input stereo is designed for devices with line output 3.5 mm or hearing aids.

Reset System

The **RESET** button is used to reset all factory settings parameters, this function can be used when the LCD screen does not work properly or if the sound is distorted, or when some of the controls are disable. Press the **RELEASE** button to release the front panel and remove it, use a thin object with a small tip to press the **RESET** button over 6 second.

Subwoofer Level Control

Select function to select audio, entry subwoofer, entry sw level, turn the knob to select level 0-8.

Subwoofer Frequency Control

Select function to select audio, entry subwoofer, entry sw frequency, turn the knob to select 80Hz/120Hz/160Hz.

RADIO OPERATION

Change Bands (BAND)

Press the **BAND** button to switch between the AM1, AM2, FM1, FM2, FM3, WB (weather) bands. Each band stores up to six preset stations.

Manual Tuning (◀◀/▶▶)

Press and hold the ◀◀ or ▶▶ button on the front panel or on the remote control to enter manual tuning mode. In manual tuning mode, press the ◀◀ or ▶▶ button to move the radio frequency number up or down one step.

Auto Seek Tuning (◀◀/▶▶)

In standby mode or while not in manual tuning mode, quickly press the ◀◀ or ▶▶ button to move to the next/previous available station automatically.

To Store/Recall Preset Stations

The radio can store 6 pre-set stations for each band (WB, AM1, AM2, FM1, FM2 and FM3) for a total of 36 preset stations.

Memorize a station

- Turn the radio on and select the desired band and station.
- Select a station by ◀◀ or ▶▶ button.
- Press and hold the desired preset button (numbered 1-6 on the face of the radio) for more than 2 seconds to save the station to that preset number.

To recall a preset station

- Select the desired band.
- Briefly press a preset button (numbered 1-6) to recall the corresponding preset station.

Automatic Store station/Preset station scan (AMS)

Press and hold the **AMS** button for more than 2 seconds to select six strong stations and store them in the current band. The radio will automatically scan the current frequency and enter the six strongest stations into the preset memory positions for that band. Briefly press the **AMS** button on the remote control to recall each preset station that saved in the memories in each band.

LOCAL/DX

In urban areas, most stations are strong enough and “**LOCAL ON**” mode should be selected. Switch to **LOCAL OFF** mode to search for stations with weaker signals. Press the **LOC** button on the remote control to choose local or distant reception mode.

 
STEREO/MONO

FM station is received in stereo mode. However, if the signal is weak or reception is not as good as you would like, switching to **MONO** mode usually improves the overall sound quality. Press the **ST** button on the remote control to choose **FM STEREO** or **MONO** audio effect.

USB OPERATION

Insert USB

To play files from a USB device, open the USB port cover and insert the USB device into the port, the songs will begin to play automatically.

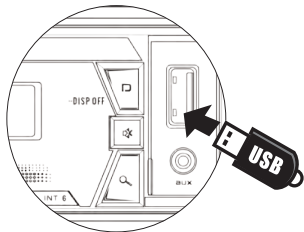

EJECT/USB

To eject a USB device, press **▶||** the button to stop playback, then remove the USB device.

Play/Pause

Press the **▶||** (play/pause) button to pause or resume playback

Next/Previous Track

- To play the next track, press the **▶▶** button.
- To play the previous track, press the **◀◀** button.

Fast Forward/Backward

- To fast forward, press and hold the **▶▶** button.
- To fast backward, press and hold the **◀◀** button.

Introduction Scan

Press the **INT** button to play the first 10 seconds of each track, press again to stop the introduction scan, and play the current track.

Repeating the same track

Press the **RPT** button to repeat the current track, press again to stop repeat playback and resume normal playback.

Playing all tracks in random

Press the **RDM** button to play all tracks in random order, press again to cancel this function.

Track/Folder Navigation

- During a disc, USB mode, press the **5/-10** button to go backward 10 tracks. Press the **6/+10** button to jump forward 10 tracks.
- During a MP3 disc, USB mode, press and hold the 5/-10 button to go back the previous folder. Press and hold the 6/+10 button to go to the next folder. You can repeat this function depending on the number and level of folders.
- These buttons have no this function if the USB device has no folders.

Select the track or file to play in MP3 format

- a. Press and hold the AMS button to direct select a music file. The “TRK0000” will appear on the display.
- b. Turn the volume control to select the “first number”. Then press the **⏮** button to move the “first number” to the left and enter the next number.
- c. When the desired track number appears, confirm your selection by pressing **SEL** button.

AUXILIARY INPUT OPERATION

This receiver is equipped with an external auxiliary input jack (3.5mm) on the front panel which is compatible with audio output from an MP3 music player. Plug such a player into the AUX IN jack with a 3.5mm stereo audio cable and press the **MODE** button to switch to AUX input mode. “**AUX IN**” appears in the display. Listen to music from an external device through the speaker.

Note: Adjust the volume of the external device to a comfortable level with the receiver volume control.

WIRELESS BT STREAMING OPERATION




Pair and Connect

Prior to using the Wireless BT device as a hands-free system for a Wireless BT enabled mobile phone for the first time, you must pair and connect the two devices as follows:


1. In any mode, prior to pairing and connecting, the BT logo in the LCD indicating that no device is connected. To begin pairing, enable BT mode on your mobile phone.
2. When the phone finds this ship/car audio system, the “**PYLE**” name will be displayed.
3. Choose the “**PYLE**” from the device list to pair and connect with this ship/car audio system. Upon confirming, the BT logo will stop flashing.

- When pairing is complete, the mobile phone audio will automatically transfer to the ship/car audio system whenever a call is made or received, or when the mobile phone plays music.


Make a Call

- To make a call, dial the call directly from the paired mobile phone.
- To make a call with this **Wireless BT** hands free system:
 - When linking up the Wireless BT-enabled mobile phone to this BT handsfree system, press the  button to access the dial telephone number mode, then press the "0~9", * and # button on remote control to input the telephone number, and the entered number will be shown on the LCD display.
 - If a number has been incorrectly inputted, press the  button to delete it.
 - Press the  button to make outgoing call.


Redial Last Dialed Number

- Press and hold the  button on the control panel to redial the last dialed phone number.

Answer a Call

- When the mobile phone is called, the incoming telephone number displays on the LCD.
- To receive the call, press the  button on the control panel.

Reject a Call or End a Call

To reject or end the call, press the  button on the control panel.





Switch Audio Between Car Audio and Mobile Phone

During a call, press the **VOL knob** button to switch the audio source from the car audio system back to your mobile phone.

Adjust Talk Volume

During a call, use **VOL knob** or **VOL+▲/VOL-▼** button to adjust the volume level.

Audio Streaming (A2DP)

- Press the  button to enter BT mode and display pause in the LCD display.
- When a mobile device is paired, music played through that device will automatically be heard through the car audio system.
- Press the  or  button to play the next or previous on the mobile phone.
- Press the  button to pause or resume music playback.

REMOTE CONTROL

Name of buttons and location

1. **⏻** (Power ON/OFF) Button switched on
2. **VOL +/VOL-** (volume up/down)
3. **Band button**, **↻** (reply call)
4. **⏮** button: Tune down, seek down; Track down, fast reverse
5. **SEL** (selection) button
6. **⏭** button: Tune up, seek up; Track up, fast forward
7. **Mute/DEL (Delete) button**
8. **CLK** (clock setting) **⌚** button, (end call) button
9. **▶|** button: preset station 1 button, keypad 1
10. **INT** (intro) button, preset station 2 button, keypad 2
11. **RPT** (repeat) button, preset station 3 button, keypad 3
12. **RDM** (random), preset station 4 button, keypad 4
13. **-10** (previous 10 tracks), preset station 5 button, keypad 5
14. **+10** (next 10 tracks), preset station 6 button, keypad 6
15. **ST** (stereo) button, keypad 7
16. **LOUD** (loudness) button, keypad 8
17. **AMS** (automatic music search) button, keypad 9
18. **MODE** button, keypad *****
19. **EQ** (Equalizer) button, keypad **0**
20. **LOC** (local)/DX button, keypad **#**

 


Remove Insulating Sheet


The remote control comes with an insulating sheet attached to the underside of the remote control, as illustrated on the right. The remote control will not work until the insulating sheet is removed.

Replace Lithium Battery Cell

1. When the lithium cell battery becomes weak, replace it as illustrated on the right.

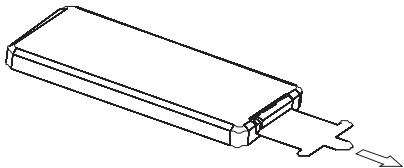


 2. Press and hold the movable block in the direction indicated by arrow 1. At the same time, pull the cell holder out of the remote control in the direction indicated by arrow 2.

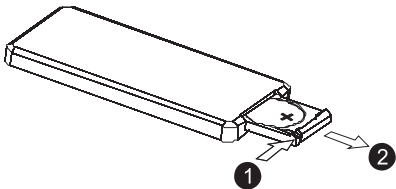

3. Replace the old cell with a new one, making sure the (+) polarity is facing upward.

 4. Re-insert the cell holder into the remote control.

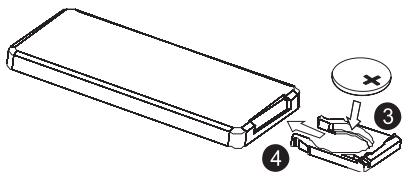

Remote Control Operation

Position the emitting window of the remote control toward the sensor window of the unit.



- The operation angle for front panel remote control reception is about 30 degrees.
- The distance between the emitting window of the remote control and the sensor window of the unit should remain less than 5 meters.
- Cell leakage may cause damage to the remote control.
- Do not throw cells into it as this may cause an explosion.
- Keep battery cells out of reach of children.

TROUBLESHOOTING

If you suspect something is wrong, immediately switch power off. Do not use the unit in abnormal condition, for example without sound, or with smoke or foul smell, can cause fire or electric shock. Immediately stop using it and call the store where you purchased it. Never try to repair the unit by yourself because it is dangerous to do so.

General

1. Vehicle's engine switch is not on.

- Turn your Vehicle's key to ACC or ON.

2. Cable is not correctly connected.

- Check the connection.

3. Fuse is burnt.

- Replace fuse.

4. Volume is in mute or minimum.

- Check volume or mute on/off, adjust volume to a desired level.

5. Sound skips.

- The installation angle is more than 30°. Adjust the installation angle less than 30°.

6. The operation keys do not work.

- The built-in micro-computer is not operating properly due to noise. Press the **RESET** button to restore the program to zero.

Radio

1. Much noise in broadcasts.

- Station or signal is too weak. Select other stations of stronger signal level.

2. The antenna cable is not connected.

- Insert the antenna cable firmly into the antenna socket of this receiver.

3. Preset station is reset.

- Battery cable is not correctly connected.
Connect the battery cable to the terminal that is always live.

Scan the QR code to download the PYLE App.



Android App



iOS App

Technical Specs:

- Remote Control Battery Operated, Requires (1) Coin-Type Battery
- Battery Type: 3V Lithium Bat. 240mAh Capacity
- Single DIN Universal Size Standard
- Night illumination: RGB
- MAX. Power: 4x75W (300 Watts)
- PLL Electronic Tuning Radio Tuner
- ISO with 4 Pin/8 Pin Wire Connector
- Stereo/Mono Mode Selectable
- Audio Control: 25EQ/Fader/Balance, No Treble & Bass
- Preset EQ: Flat/Pop/Rock/Class/Off
- Switchable USA/Europe Tuner Frequencies by Software
- Max. USB Support: 64GB
- Power: DC 12V
- Current Consumption: 10A
- Product Dimension: 4.5" x 7.1" x 1.97" - inches

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

California Prop 65 Warning

 **WARNING:**

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov