

PYLE
view

Visit us @ pyleaudio.com

PLRD94



9.4" Flip Roof Mount Monitor & DVD Player w/ Wireless FM Modulator/ IR Transmitter

Owner's Manual

Contents

characteristics and effects.....	1
appearance and functions.....	2
installation.....	3
remote control panel.....	4
battery installation diagram for remote control	4
operation of DVD system.....	5
system setup.....	5
functional description of USB/SD.....	7
menu function setup.....	7
introduction of door control line.....	10
Removal of simple faults.....	11
Cautions.....	12

characteristics and effects

- DVD
- super-thin design is combined perfectly and the crystal glass style for top panel
- digital technique, sharp image and no interference
- transmit frequency range of audio signal: FM87.7MHz/ FM88.1MHz/FM88.5MHz/ FM88.9MHz/FM106.7MHz/ FM107.1MHz/FM107.5MHz/FM107.9MHz.
- double period of infrared emission
- audio/video input and output
- fully functional remote operation
- USB/SD/games
- built-in speakers

Specifications

Size of screen: 9.4 inch/10.4 inch

Pixel: 9.4 inch: 800×3 (RGB) ×480

10.4 inch: 1024×3 (RGB) ×600

Rated voltage: DC12V(voltage range:10V-14V)


Power: about 13W

Appearance and functions



- | | |
|-------------------------------|--------------------------|
| ①Power switch and mode switch | ⑦analogue- and next song |
| ②play and pause | ⑧light switch |
| ③down and in/out | ⑨standby switch |
| ④up and stop | ⑩open key |
| ⑤analogue+ and last song | ⑪disc-in mouth |
| ⑥menu | |


Installation

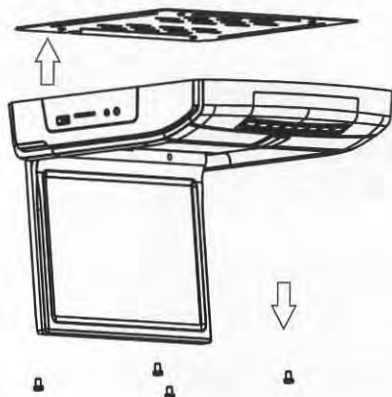

1


1. remove four screws on the bottom and disassemble metallic support, as picture 1

2. screw down the top of metallic support, as picture 2. Make room for wire (please be double careful to not damage the top of the machine)

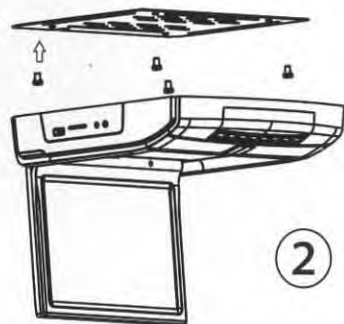


2

3. install metallic support, link all parts and make room for wire (keep the wire orderly lest extrude DVD chips, install special screw to avoid becoming loose)

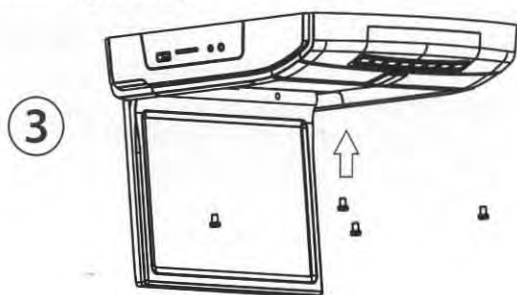

3


Remote control

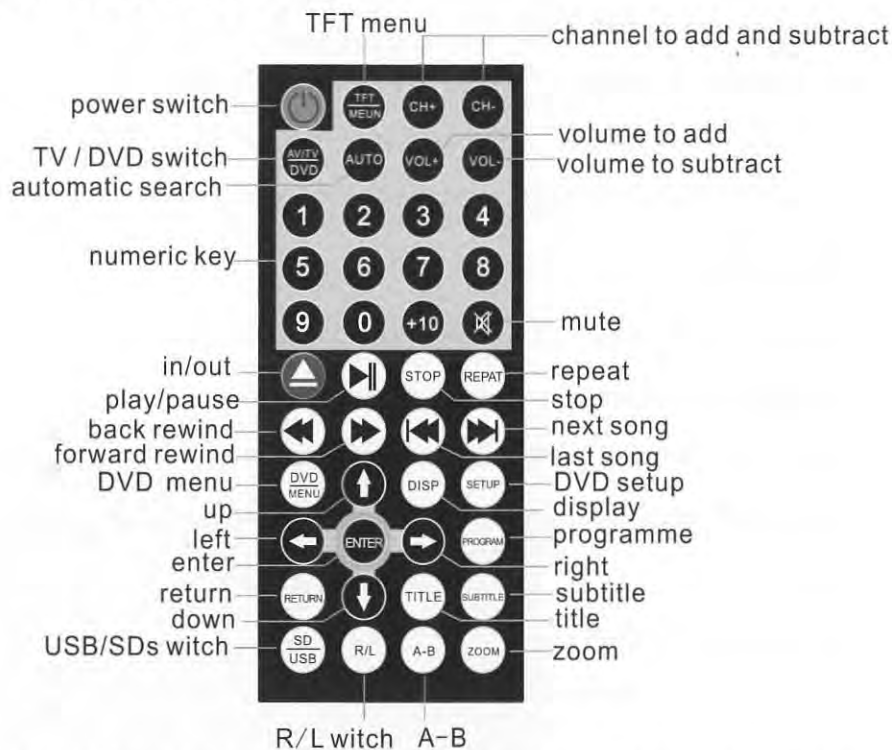

battery installation diagram for remote control

attention:

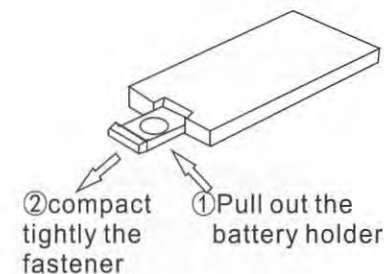

- do not directly touch infrared light
- do not press remote control when disassembling the battery cover of remote control
- take out battery when rarely using
- normally, battery life is about one year. replace battery when the remote control is not sensitive.





Operation of DVD system

Play DVD/DCD/CD

Put the DVD disc into the mouth with the label of disc upwards to



autoplay Press /▲ on panel or  on remote control to stop.


 
Press  on panel or  on remote control to pause.

Play MP3


Insert the file storage media into the machine to autoplay

Press /▲ on panel or  on remote control to stop.

Press  on panel or  on remote control to pause.

Press  on panel or  on remote control when pausing to replay





Replay


1. Press  to repeat one or more songs

2. press numeric key to directly play the specified song

System setup

Press button of setup on remote control to enter system and set menu.

Press     on remote control to choose modification item

and press  to enter, as below picture.



1. Television system: set DVD output image format and three formats of NTSC/PAL/AUTO can be chosen.

2. resume play: switch of resuming play after power off


3. screen protection: switch of screen protection icon

4. screen picture ratio: choose image output ratio as per request

5. password: set new 4 a password and the initial password of system is [0000]

6. level set: set parents lock as per different levels

7. setup of default value: restore factory's initial settings

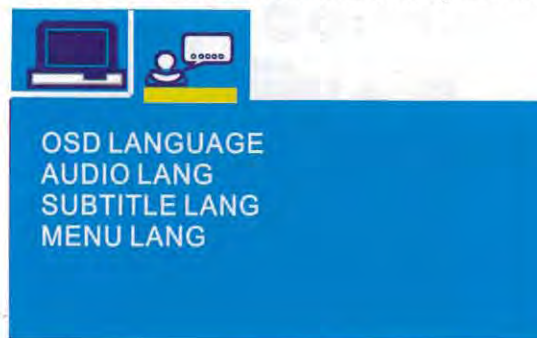

8. language showed on the screen: choose the language showed in the menu as per request


 

9. audio language: set disc output language

10. subtitle language: set disc subtitle language





11. menu language: set menu language of disc

Remark: the disc must support audio language, subtitle language and menu language.

introduction of USB/SD function

- 1.enter: press  under DVD mode and switch to the mode you need in DVD,USB and SD mode.
- 2.quit: press  or  under USB/SD mode and then switch to DVD mode.

Menu function setup

Press  on panel or  on remote control to enter the main menu.
Then press  on panel or  on remote control to setup and adjust

Main menu includes below parts

Image

Volume

Function


System

Preset

Time

Detailed setup as below diagram

1. image setup

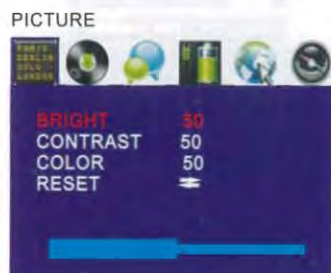

1. brightness
2. contrast
3. color
4. reset: restore factory's initial setting

2. Volume setup



1. volume adjust
2. infrared switch
3. FM switch

3. Functional setup



1. language setup
2. image display setup

4. system setup

Remark: this function applies to the machine type with TV function.



1. color mode adjustment
2. accompanying sound adjustment
3. channel swap
4. copy


5. preset

Remark: this function applies to the machine type with TV function



1. automatic channel searching
2. manual channel searching
3. channel fine-tuning
4. band segment display
5. program No.
6. Channel over the switch

6. time setup

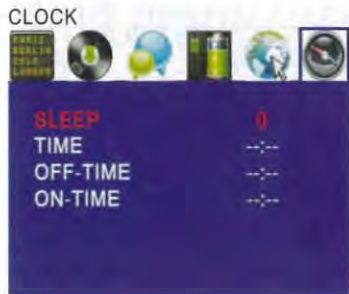

1. sleep timer function
2. clock setup function
3. timing of the shutdown function
4. function of resuming by alarm

2. audio frequency

Press $\blacktriangle/\blacktriangledown$ on panel or \uparrow/\downarrow on remote control and the screen displays menu, then press \leftarrow/\rightarrow on panel or \leftarrow/\rightarrow on remote control to set accordingly.


a: volume

Audio control, (you can choose infrared/speaker/radio/speaker, speaker/radio, infrared/speaker/radio, radio, infrared, infrared/speaker, infrared/radio)

3. Functions

Press $\blacktriangle/\blacktriangledown$ on panel or \uparrow/\downarrow on remote control and the screen displays below menu pictures, then press \leftarrow/\rightarrow on panel or \leftarrow/\rightarrow on remote control to set accordingly

introduction of door control line

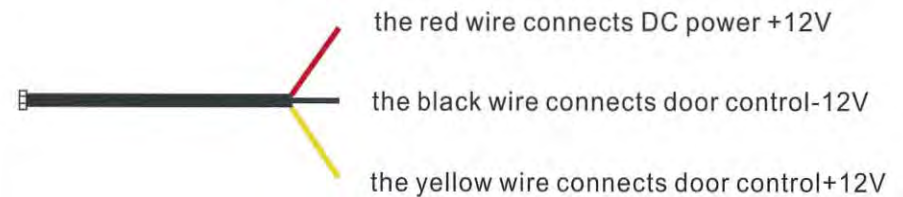

Attention

Customer can choose door control type according to his own vehicle type.

Removal of simple fault

Faults	possible reasons
No sound and image	power is disconnected; the machine is not turned on
No image	standby switch is pressed down; disc is scratched; signal wire is disconnected; TV signal is weak
No sound	volume too low or the volume setup is not workable
Weak signal	adjust the antennae; no appropriate frequency
Black screen	incorrect setup of image luminance and contrast; Undervoltage
Blurring and unstable image	TV signal is weak; disc is scratched
Image dithering	adjust the antennae; TV may not receive the signal; influence of buildings or mountains in this region
Snow pattern on the screen	no signal or weak signal for TV; TV is interfered by other signal; antennae is not installed properly
Color cast	function menu setup is incorrect; weak signal
No power	voltage is not accurate: check interconnect circuit; Fuse is disconnected: change fuse specification
No image after loading the disc	only audio frequency for the disc; disc is scratched; disc format is not supported
Instable sound caused by vibration	DVD is dirty or seriously damaged
Instable sound even with no vibration	disc is dirty or scratched; clean or replace the disc

Attention

1. Do not put the machine in the rain or damp environment lest outbreak of fire or any damage to machine.
2. Do not repair the machine by yourself. Please turn off the machine and inform us if any problem found, the factory or the agent will arrange specialized personnel to disassemble and repair the machine for you.
3. Please keep the machine away from dampness, dust, oil and straight sunlight.
4. Do not use diluents or other chemical cleaner when cleaning the machine. Please clean the machine by soft cloth with special cleaner.
5. Please keep the machine in a good environment. The storage temperature for this machine is from -20°C to 70°C and the operating temperature for this machine is from -10°C to 60°C.
6. Do not play without the support of disc, this machine supports DIVX / MPEG4 / DVD / DVD + R / SVCD / VCD / DVCD / CD / MP3 / WMA / CD - R / RW / HDCD + _R / JPEG or CD - ROM7.
7. Please prevent the machine from the influence of other equipment.
8. For your safety, please do not turn on or operate this machine when driving as it may be illegal in some countries and regions.
9. Safe power supply: DC12V(voltage range:10V-14V).

Attention

There may be some small and bright spots on the screen. This is a common technical matter and does not indicate any quality problem of this machine.

PYLE
view



Visit us @ pyleaudio.com

IMPORTANT: Pack carefully in original package if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt a proof of date of purchase

Brooklyn, NY 11204

1-800-444-5671

Monday Through Thursday, 9AM to 5PM

Friday 9AM to 1PM Eastern.