



NTSC, ATSC

PLTLD19 - PLTLD22 - PLTLD24 ELED RV Digital TV

HD Flat Screen TV with DVD Combo
with Digital Antenna and 12V/24V Car Adapter

USER GUIDE

Note: Keep this document for operation and performance reference.
Please visit us online for further reference and detailed product specifications.

CONTENTS

SAFETY INFORMATION	3
PRODUCT INTRODUCTION	5
CONNECTIONS	6
REMOTE CONTROL	7
SETUP WIZARD	8
SELECT INPUT SOURCE	9
MAIN MENU	9
PICTURE MENU	10
SOUND MENU	11
TIME MENU	13
SETUP MENU	14
CLOSE CAPTION	15
LOCK MENU	16
CHANNEL MENU	18
PC MENU	19
DVD OPERATION	20
SPECIFICATION	24

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS- READ CAREFULLY BEFORE USE.

Take note of the following safety information which appears on the back of the TV.



**CAUTION TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS.
NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



This symbol indicates that there are important operating maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

KEEP THESE INSTRUCTIONS

- Do not use this TV near water.
- Clean only with a slightly damp cloth.
- Do not block any ventilation openings.
- Install in accordance with the supplied Quick Start Guide and this User Guide.
- Protect the power chord from being walked on or pinched, particularly at plugs, and the point where it exits from the TV.
- Do not allow the power chord to overhang the edge of a table.
- Unplug this TV during lightening storms or when unused for long periods of time.

WARNING!

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE TV.

NOTE: *No naked flames such as candles should be placed on the TV.*

SAFETY INFORMATION

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers.

- Although this appliance has been carefully manufactured and rigorously checked prior leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- This set should only be connected to a mains power supply which matches that stated on the label on the rear of the TV- do not attempt to connect it to any other type of supply.
- The socket -outlet must be installed near the equipment and easily accessible.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Apparatus with Class 1 construction shall be connected to a mains socket outlet with a protective earthing connection.
- Keep away from rodents. Rodents enjoy biting into electric flexes.
- Always hold the plug when pulling out the plug from the mains supply socket.
Do not pull on the flex, the flex can become overloaded and cause short circuit.
- Set up the unit so that no one is able to trip over the flex.
- Do not place heavy items on the flex, which may damage it.
- Take note that the flex cannot be reached and pulled by young children to avoid injury.
- Do not set up the unit near to heat sources.
The casing and the flex could be damaged by the impact of heat.
- The screen is made of plastic and can break if damage is done.
Be careful when collecting sharp edged plastic splinters to avoid injury.
- Avoid placing the unit on any surface that may be subject to vibrations or shocks.
- To protect the unit during a thunderstorm unplug the AC power cable and disconnect the aerial.
Caution: Do not touch the aerial (RF) connector.
- When you leave your home for a long period of time, unplug the AC power cable for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators.
Do not place in direct sunshine. When placing on a shelf leave 5cm (2") free space around the whole unit.
- Do not allow water or moisture to enter the TV. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Do not use this unit when moisture condensation may occur.
- Any repairs must be carried out by qualified personnel only.
- Do not open this unit. A non- expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.
- Liquids spilt into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.

- Do NOT remove the safety covers. There are no useable or serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
- Do NOT tap or shake the screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- Never place hot objects or open flame sources on or close to the TV.
- High temperatures can melt plastic and lead to fires.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp cloth with dilute detergent.

HEADPHONE WARNING

Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for lengthy listening periods.

WHERE TO INSTALL

Locate the television away from direct sunlight and strong lights, soft indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.

Place the TV on a sturdy platform of which the surface should be flat and steady.

This will prevent it from falling over. Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and so that small objects cannot be inserted into the ventilation slots or openings in the cabinet.

Product Introduction

Front View

The functions of the TV buttons are described below.

▶|| PLAY/PAUSE:

Play/pause the disc playing.

▲ EJECT: Eject the disc.

SOURCE: Press to select the source.

 
MENU: Press to display the OSD menu, Press again to exit the menu.

CH+/CH- :

Press to scan through channels. Use to move down/up in the OSD menu screen.




VOL+/ VOL- : Press to adjust the volume. Use to move left/right in the OSD menu screen VOL+ button can be used to skip forward to next menu.

POWER: Turn on/off the TV set.

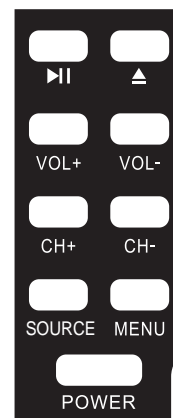

LED Indicator Remote Control Window (keep clear)

   CONNECTIONS

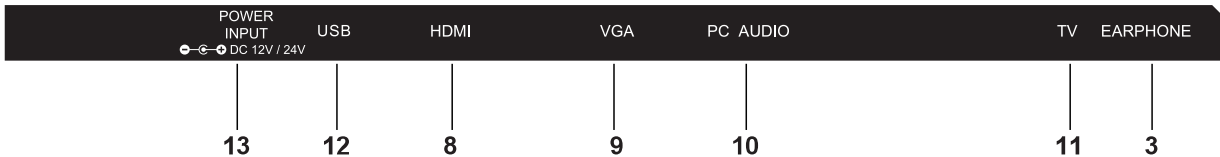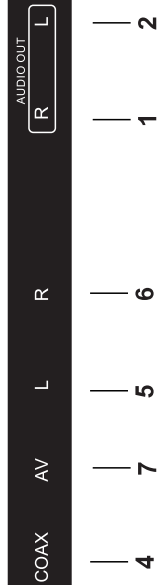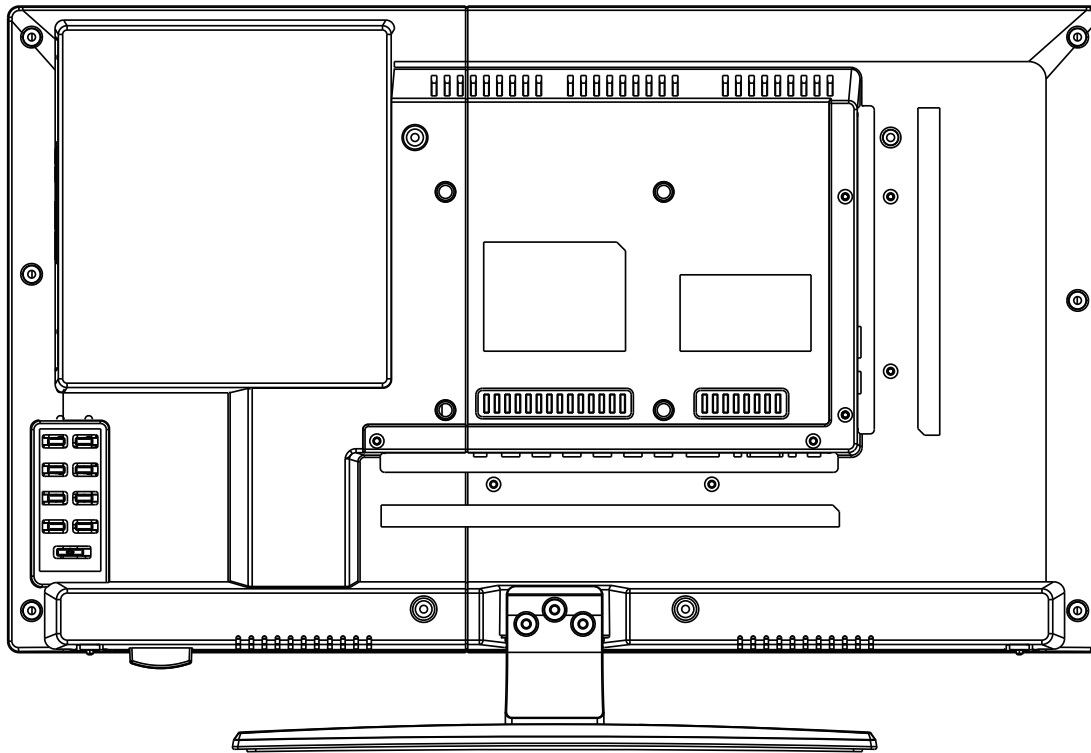

- 1/2.** Audio output to connect power amplifier stereo equipment.
- 3.** Connect a stereo headphone (3.5mm) for private listening.
- 4.** Connect an optional coaxial digital cable through a compatible amp/receiver to enjoy superior audio sound.
- 5/6/7.** Connect to an AV device that features component video and audio output jacks.
- 8.** Connect it to the HDMI of DVD or other equipment.
- 9.** Connect an optional VGA cable from your personal computer.
- 10.** Connect an optional 3.5mm audio cable for sound when using VGA.
- 11.** Connect antenna or cable for television reception.
- 12.** For service technician use only.
- 13.** Connect to the mains adaptor or the car adaptor (Input for the 12V/24V power supply)

REMOTE CONTROL

The remote control is using Infra-Red (IR). Point it towards the front of the LED TV.

The remote control may not work correctly if it is operated out of range or out of angle.



POWER: Turn the TV on/standby.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.

NUMBER BUTTONS

Press 0-9 to select TV channel directly when you are watching TV.

RETURN: Return to the previous channel viewed.

S.MODE: Select the sound mode.

P.MODE: Select the picture mode.

EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.

TV MENU: System setup menu.

SOURCE: Press to display the input source menu.

CURSOR KEYS (▲/▼/◀/▶/ENTER)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

MTS: Press to select an alternate audio language (if applicable).

EXIT: Exit the OSD menu.

AUTO: When you connect the TV with a PC through VGA input, press to adjust the screen resolution automatically.

DISPLAY: Provides information on the currently viewed program.

CCD: Select closed caption subtitles (if available) OFF > ON > CC on Mute

VOL + / - : Adjust the volume.

CH ^/∨: Scan through channels.

◀◀ : Fast Reverse.

▶▶ : Fast Forward

◀◀ : Previous Chapter.

▶▶ : Next Chapter.

▶|| : Play/pause Program.

■ : Stop Program.

▲ : Load/Eject DVD Disc

ZOOM: Select viewable display options:

Normal > Wide > Zoom > Cinema.

SLEEP: Press to activate the Sleep function to turn off the TV automatically
5 Min > 10 Min > 15 Min > 30 Min > 45 Min > 60 Min > 90 Min >
120 Min > 180 Min > 240 Min > OFF.

FAV: Press to display a list of favorite TV channels you have added.

FAV-: Press to scan to a lower channel from your list of favorites.

FAV+: Press to scan to a higher channel from your list of favorites.

REPEAT: Repeat playing the title or chapter

SUB-T: Turn on/off the subtitle display in DTV mode and DVD mode.

A-B: Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.

PROG: The track programming

DVD MENU: DVD to return to menu

 
TITLE: DVD title.

DVD SETUP: DVD Menu Settings

SET UP WIZARD

STEP 1: Choosing your Picture mode

Use the ▲/▼ arrow buttons to select Home Mode standard. Press the **ENTER** button to complete the step.

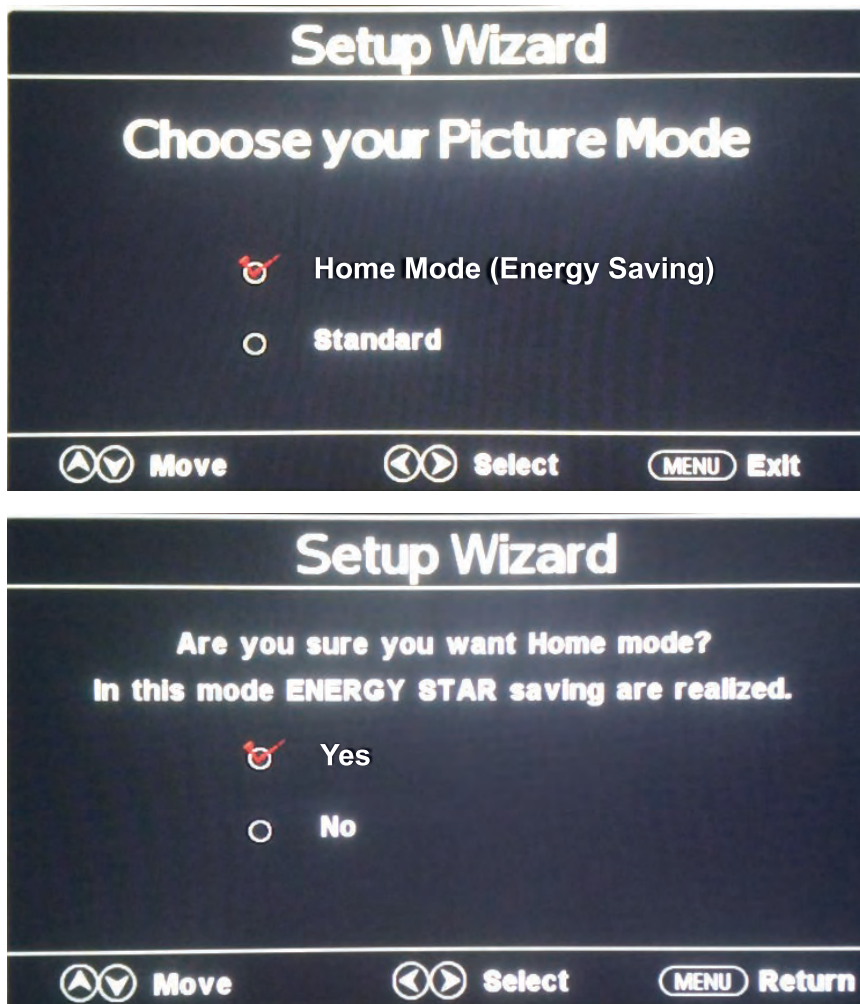

STEP 2:

Use the ▲/▼ arrow buttons to select Menu Language.

Use the ◀/▶ arrow buttons to select English-Francais-Espanol.

 
Use the ▲/▼ arrow buttons to select Air/Cable.

Select Cable, then press the ▲/▼ button to select Cable System. Then press the ◀/▶ button to select Auto-STD-IRC-HRC.




AUTO SCAN

Press **ENTER/▶** button to start auto scan.

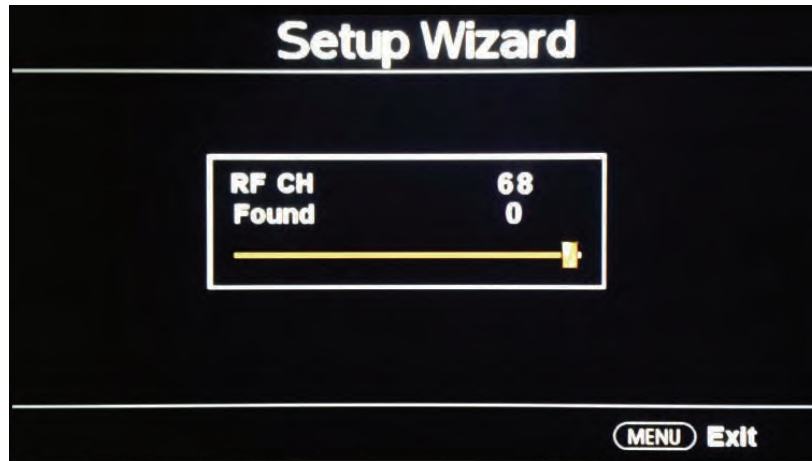

SELECT INPUT SOURCE

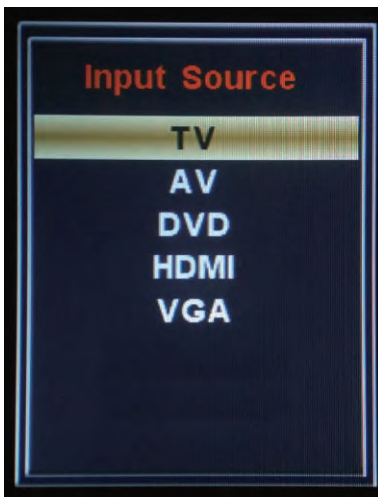 

Press **SOURCE** button to display the input source list;
Press **▲/▼** or **SOURCE** button to select the input source;
Press **ENTER** button to enter the input source;
Press **EXIT** button to quit.

MAIN MENU



Press **MENU** to display the main menu or return to the previous menu or close the main menu.

Press **◀/▶** to highlight the desired menu icon, and press **ENTER** to select.

MAIN MENU OPERATION

Picture Menu

Press **MENU** to enter the main menu. Press ◀/▶ button to select. Press **ENTER** / ▼ to enter.

Press **MENU** again to exit or back to parent menu.



Press ▲/▼ button to select among Picture Mode/Brightness/Contrast/Color/Tint/Sharpness/Color Temperature/Blue Screen.

Press **ENTER** / ▼ to enter.

Press ◀/▶ button to adjust.

Press **MENU** again or back to parent menu.

PICTURE MENU

Adjust picture mode to change picture appearance.

Press ◀/▶ button to select (Standard/Dynamic/Mild/Energy saving/User).

Note: *The brightness, contrast, color, tint and sharpness are only available in User mode, you can adjust as you like.*

Standard: Produces a highly defined image in a normally lit room.

Dynamic: Produces a highly defined image in a brightly lit room.

Mild: Produces a highly defined image in a soft lit room.

User: Select to customize picture settings.

Energysaving: Produces a highly defined image in a Energy saving lit room.

[Brightness]

Adjust the visual perception output of the entire picture, it will effect the luminousness of the picture.

Press ◀/▶ button to adjust.

[Contrast]

Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Press ◀/▶ button to adjust.

[Color]

Adjust the saturation of the color based on your own like. Press ◀/▶ button to adjust.

[Tint]

Adjust the hue (Red, Green, Blue) of the picture. Press ◀/▶ button to adjust.

[Sharpness]

Adjust the peaking in the detail of the picture. Press ◀/▶ button to adjust.

[Color Temperature]

Increase or reduce warm color of the picture personally (red), and the cool color personally (blue) according to your like.

Normal: The most balanced setting

Warm: Increase the red color for the white.

Cool: Increase the blue tone for the white.

Blue Screen

Press ◀/▶ button to select (off/on).

SOUND MENU

Press **MENU** to enter the main menu, Press ◀/▶ button to select.

Press **ENTER** / ▼ to enter.

Press **MENU** again to exit or back to parent menu.



Press ▲/▼ button to select among Soundmode/Bass/Treble/Balance/Surround sound/Auto Volume/SPDIF type/Accessibility/TV Speaker.

Press **ENTER** / ▼ to enter.

Press ◀/▶ button to adjust.

Press **MENU** again or back to parent menu.

SOUND MODE

Select a sound mode to achieve ideal sound.

Press ◀/▶ button to select (Standard/Music/Movie/Sports/User).

Note: The bass and treble are only available in User mode, you can adjust as you like.

Standard: Produces a balanced sound in all environments.

Music: Preserves the original sound. Good for musical programs.

Movie: Enhances treble and bass for a rich sound experience.

Sports: Enhances vocals for TV audio.

User: Select to customize audio settings.

BASS: Adjust the bass effect. Increases or decreases lower-pitched sounds. Press ◀/▶ button to adjust.

TREBLE: Adjust the treble effect. Increases or decreases high-pitched sounds. Press ◀/▶ button to adjust.

BALANCE: Adjust the balance between left and right speakers to adapt to your listening position. Press ◀/▶ button to adjust.

SPDIF Type:

Send digital audio to external audio system. Press ◀ / ▶ button to select.

PCM Select to output audio in 2-channel stereo.

Raw Original image coded data.

Off Set digital audio output off.

MTS

Configures the multi-track sound. It is only available in ATV.

Press ◀ / ▶ button to select (Mono/Stereo/SAP).

Mono Sets the sound to mono.

Stereo Sets the sound to stereo when stereo is not available, the sound is automatically switched to mono.

SAP Sets the sound to the second audio program.

Accessibility: Adjust Accessibility settings press **ENTER** /▶ button to enter.

Voice Guide

Press ◀ / ▶ button to select (off-on)

Volume

Press the ▼ button to Volume. Press ◀ / ▶ button to select (Middle-Strong-weak)

Speed

Press the ▼ button to speed. Press ◀ / ▶ button to select (Middle-Strong-weak).

Pitch

Press the ▼ button to Pitch. Press ◀ / ▶ button to select (Middle-Strong-weak).

TV Speaker:

Press ◀ / ▶ button to select (off/on).

AUDIO LANGUAGE

Select the language supported by the chosen digital channel. It is only available in DTV.

Press ◀ / ▶ button to select (English / French / Spanish).

NOTE:

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

SURROUND SOUND

Set the Surround Sound. Press ◀ / ▶ button to select (On / Off).

AVL

Set the auto volume control. Press ◀ / ▶ button to select (On / Off).

AVL: This item is used for reducing the difference between channel and program's volume automatically. It made the overall water to be even. This function will also reduce the fluctuation of the sound.

TIME MENU

Press **MENU** to enter the main menu, Press ◀/▶ button to select.

Press **ENTER** /▼ to enter.

Press **MENU** again to exit or back to parent menu



Press ▲/▼ button to select among Sleep Timer/Time Zone/Daylight Saving Time/Time Format/Auto Clock/Clock.

Press **ENTER** /▼ to enter.

Press ◀/▶ button to adjust.

Press **MENU** again or back to parent menu.

SLEEP TIMER

Set a timer for the TV to turn off automatically.

Press ◀/▶ button to select (Off / 5min/10min /15min/ 30min / 60min / 90min / 120min/180min/240min).

TIME ZONE

Select your time zone.

Press ◀/▶ button to select (Eastern/Central/Mountain/Pacific/Alaska/Hawaii/Samoa/Newfoundland/Atlantic).

DAYLIGHT SAVING TIME

Set the daylight saving time for your area. Press ◀/▶ button to select (On/Off).

TIME FORMAT

Select your time format.

Press ◀/▶ button to select (12-hour/24-hour).

AUTO CLOCK

Use to synchronize the display automatically. It is only available in DTV.

Press ◀/▶ button to select (On/Off).

SETUP MENU

Press **MENU** to enter the main menu, Press ◀/▶ button to select.

Press **ENTER** /▼ to enter.

Press **MENU** again to exit or back to parent menu.



Press ▲/▼ button to select among Menu Language / Transparent / Zoom Mode/Noise Reduction/Advanced/Source Label/Closed Caption/DLC/Setup Wizard/OverScan/HDMI CEC/Restore Default/OSD Timeout.

Press **ENTER** /▼ to enter.

Press ◀/▶ button to adjust.

Press **MENU** again or back to parent menu.

MENU LANGUAGE

Select an **OSD** menu language can be displayed. Default English is selected as menu language.

Press ◀/▶ button to select language (English / Français / Español).

TRANSPARENT

Adjust the transparency of the OSD (on screen display) menu.

Press ◀/▶ button to select (ON/OFF).

ZOOM MODE

Adjust how the picture fills the screen.

Normal Automatically adjust Aspect Ratio based on TV size and TV program.

Wide Use to watch wide screen (16:9) content.

Zoom Expands image to fill screen. Top and bottom maybe cut off.

Cinema Stretches image at edges but keeps a clear image in the center.

Noise Reduction

Set options to reduce video noise.

Off Select to turn off video noise detection.

Low Detect and reduce low video noise.

Medium Detect and reduce moderate video noise.

High Detect and reduce enhanced video noise.

Advanced Adjust advanced video features to fine tune the picture. Press ▶ button to enter sub-menu.

Source Label: Create labels for the devices connected to your TV. Press **ENTER / ▼** button to enter.

CLOSED CAPTION

Adjust Closed Captioning settings. Only available under TV and AV source.

CC MODE: Turn Closed Captioning on/off. Press button to select (Of/On/CC On Mute).

Basic Selection: Set Closed Captioning for standard (analog) program.

Press button to select (CC1/CC2/CC3/CC4/TEXT1/TEXT2/TEXT3/TEXT4).

Advanced: Set Closed Captioning for digital program.

Press button to select (Of/Service 1/Service 2/Service 3/Service 4/Service 5/Service 6).

OPTION: Adjust the digital Closed Captioning setting. Press button to enter.

MODE: Set the look of digital Closed Captioning. Automatic uses broadcaster's style.

Press button to select (Default/Custom).

FONT STYLE: Select from 8 font styles.

Press button to select (Default/Font 0/Font 1/Font 2/Font 3/Font 4/Font 5/Font 6/Font 7).

FONT SIZE: Adjust the size of the digital Closed Captioning font.

Press button to select (Default/Normal/Large/Small).

FONT EDGE STYLE: Adjust the edge of the digital Closed Captioning box.

Press button to select (Default/None/Raised/Depressed/Uniform/Left Shadow/Right Shadow).

FONT EDGE COLOR: Adjust the color of the digital Closed Captioning box.

Press button to select (Default/Black/White/Red/Green/Blue/Yellow/Magenta/Cyan).

FG COLOR: Adjust the color of the digital Closed Captioning font.

Press button to select (Default/White/Red/Green/Blue/Yellow/Magenta/Cyan).

BG COLOR: Adjust the digital Closed Captioning background color.

Press button to select (Default/Black/Red/Green/Blue/Yellow/Magenta/Cyan).

FG OPACITY: Adjust the transparency of the digital Closed Captioning font.

Press button to select (Default/Solid/Flashing/Translucent/Transparency).

BG OPACITY: Adjust the digital Closed Captioning background transparency.

Press button to select (Default/Solid/Flashing/Translucent/Transparency).

DLC: Automatically adjust picture detail and brightness. Press ◀/▶ button to select (Off/On).

Setup Wizard: Set the first time installation.

Overscan: Press ◀/▶ button to select (On/Off).

It is only available to enter 1080i/720p/1080p in DTV/Component/HDMI. Default is On.

It is fixed set to be On in ATV/AV. It is fixed set to be Off in PC.

HDMI CEC: Press the ▼ button to highlight CEC, then press the **ENTER / ▶** button to enter.

Restore Default: Change power on options or reset TV to factory default. Press **ENTER / ▶** button to enter.

OSD TIME OUT: Adjust the duration of the OSD (on screen display) menu.

Press ◀/▶ button to select (5 Sec., 10 Sec., 30 Sec., 45 Sec., 60 Sec.)

 
Auto sleep: Adjust the time for automatic standby without signal display.

Select the ON mode: When there is no signal input, the TV will automatically enter the standby state after about 15 minutes.

Select Off mode: The TV will not automatically stand by when there is no signal input.

LOCK MENU

Press **MENU** to enter the main menu, Press ◀/▶ button to select. Press **ENTER** / ▼ to enter. Press **MENU** again to exit or back to parent menu.

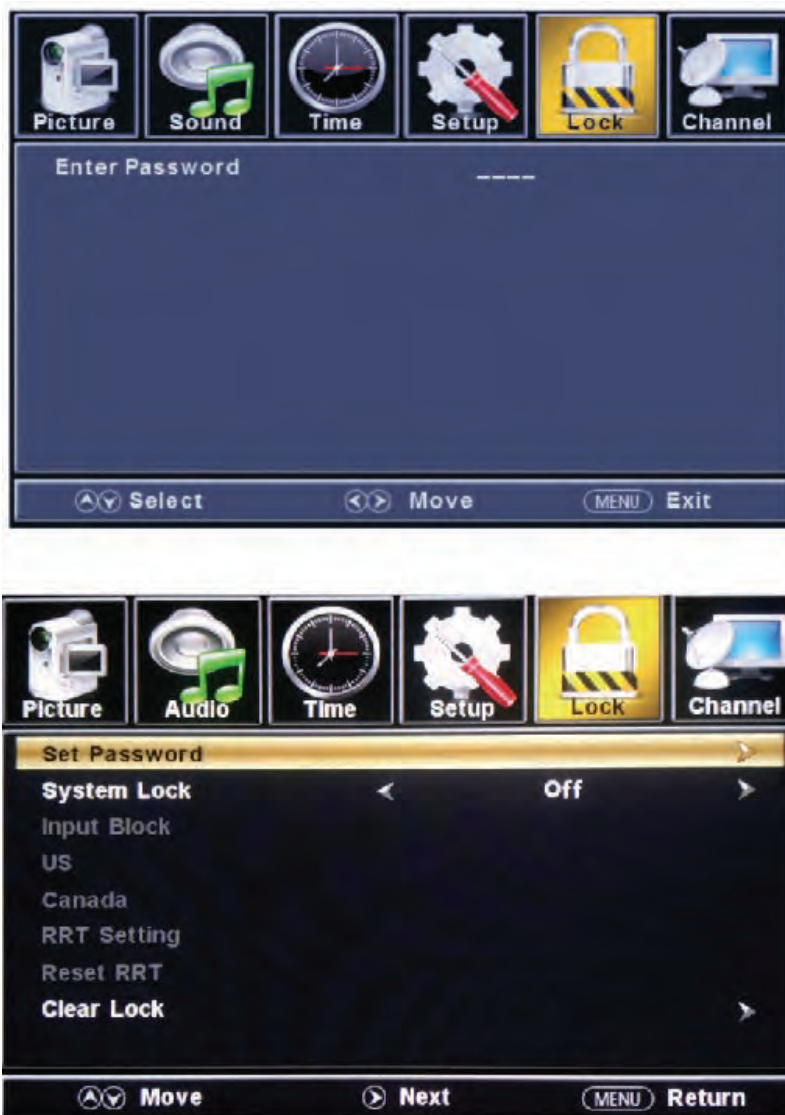

Press ▲ / ▼ button to select among Set Password/System Lock/Input Block/US/Canada/RRT Setting/Reset RRT/Clear LOCK.

Press **ENTER** / ▼ to enter. Press ◀/▶ button to adjust.

Press **MENU** again or back to parent menu.

Enter your 4-digital password. Default password is **0000**, if you forgot your password, please call the service center.

Set Password

Enter a new 4-digital password then re-enter it to confirm. Press ▶ button to enter.

SYSTEM LOCK

Lock or unlock the buttons on the TV. Press ◀/▶ button to select (Off/On).

INPUT BLOCK

Block or unblock the input sources. Press ▶ button to enter. Press ◀/▶ button to select (Unblock/Block).



US RATING: Restrict movie and TV programs by US Ratings. Only available when "System Lock" is "ON". Press ► button to enter.

CANADA RATING: Restrict movie and TV programs by Canadian Ratings. Only available when "System Lock" is "ON". Press ► button to enter.

RRT SETTING: Display an advance V-Chip rating table for digital channels. The item is available only When current stream has downloadable rating data.

RESET RRT: Reset the RRT to default. The item is available only when current stream has downloadable rating data

US RATING: For the United States, the rating setting basically include the following options: TV, MPAA.

TV: The TV rating compose of two aspects: age-based and content-based.



Age	Define
TV-Y	General Audience
TV-Y7	Parental Guidance Suggested
TV-G	Parents Strongly Cautioned
TV-PG	Retricted
TV-14	No one 17 and under admitted
TV-MA	Adult Audience Only

Note: The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (violence) rating may contain moderate violence, while a TV-14 V (violence) rating may contain intense violence. So locking a higher level option will automatically cause locking the options that has more sensitive level.

CHANNEL MENU

Press MENU to enter the main menu, Press ◀ / ▶ button to select. Press ENTER / ▼ to enter. Press MENU again to exit or back to parent menu.



Press ▲ / ▼ button to select among Air/Cable/Auto Scan/Favorite/Channel List/Show/Hide/Channel Number / Channel Label. Press ENTER / ▼ to enter.

Press ◀ / ▶ button to adjust. Press **MENU** again or back to parent menu.

AIR/CABLE

Select signal type. Press ◀ / ▶ button to select (Air/Cable).

AUTO SCAN

Automatically search for channels. Press **ENTER** / ▶ button to enter.

FAVORITES

Add channels to create a favorite list. Press ▶ button to enter.

CHANNEL LIST

Display your program list. Press ▶ button to enter.

SHOW/HIDE

Show or hide the channels in your program list. Press ▶ button to enter.



CHANNEL NUMBER

Show the channel number. Press ◀ / ▶ button to adjust.

CHANNEL LABEL

Create labels for channels, up to 7 characters. Press ◀ / ▶ button to adjust.



PC MENU

Press **SOURCE** to select PC source.

Press **MENU** to enter the main menu, Press ◀ / ▶ button to select Setup menu.

Press ▼ to select Advanced.



Press ▲ / ▼ button to select among H-Pos / V-Pos / Clock / Phase / Auto. Press **ENTER** / ▼ to enter.

Press ◀ / ▶ button to adjust.

Press **MENU** again or back to parent menu.



H-POS

Adjust the horizontal position of the picture. Press ◀ / ▶ button to adjust.

V-POS

Adjust the vertical position of the picture. Press ◀ / ▶ button to adjust.

CLOCK

Adjust the vertical position of the picture. Press ◀ / ▶ button to adjust.

PHASE

Adjust the horizontal interfering lines. Press ◀ / ▶ button to adjust.

AUTO

Adjust to the screen automatically to the optimal position of the picture. Press ▶ button to enter.

*Notes:

1. Color, Tint, Sharpness, Noise Reduction, Dynamic Contrast and **HDMI Mode** in **PICTURE** are invalid.
2. **MTS** and Audio Language in **SOUND** menu are invalid.
3. Auto Clock in **TIME** menu is invalid.
4. Close Caption in **SETUP** menu is invalid.
5. US Rating, Canada Rating, RRT Setting and Reset RRT in **LOCK** menu are invalid.
6. **PC** mode has no **CHANNEL** menu.

DVD OPERATION

BASIC OPERATION

- Press the Power button on the TV or the remote control, then press the **INPUT** button to select DVD mode.
- If there is no disc in the DVD player the screen will show "NO DISC".
- Insert Disc according to picture next to disc slot.
- Do not touch the playing surface.
- Hold the disc around the outside with your fingers and place the disc into the slot.
The player will automatically draw the disc into the player.
- To "Eject" the disc, press the **EJECT** button on the TV or the "**▲**" button on the remote control.

DVD SETUP MODE

- Setup Mode provides the menu for the configuration of General Setup Page, Audio Setup Page, Dolby Digital, Setup, Preference Page.
- Item selection in the Setup Menu is done by using the Navigation Arrows, **SETUP** button and the **OK** button.
- Press the **SETUP** button first, enter into **SETUP** menu, then press the **DIRECTION RIGHT** button, you can enter into the next Sub-menu.
- Press the **SETUP** button again to exit the Setup Menu.

GENERAL SET UP

 
TV DISPLAY

- **4:3 Pan Scan:** This is selected when the DVD player is connected to a normal TV.
Wide-screen images are shown on the screen, but with some parts out automatically.
- **4:3 Letter Box:** This is selected when the player is connected to a normal TV.
Wide-screen images are shown on the screen, with black belt on the top and bottom.
- **Wide:** This is selected when the player is connected to a wide-screen TV.



OSD LANGUAGE


This is used to select the OSD language.

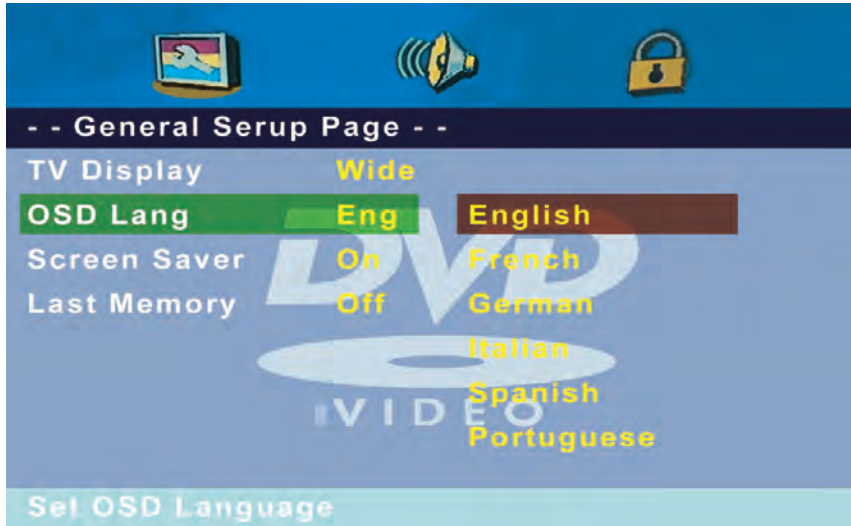

SCREEN SAVER

Start the screen saver, the screen saver image will appear when the player stops or the picture is frozen for a few minutes. This saver can keep the screen from being damaged.

 - **ON** (Start the screen saver)
- **OFF** (Remove the screen saver).

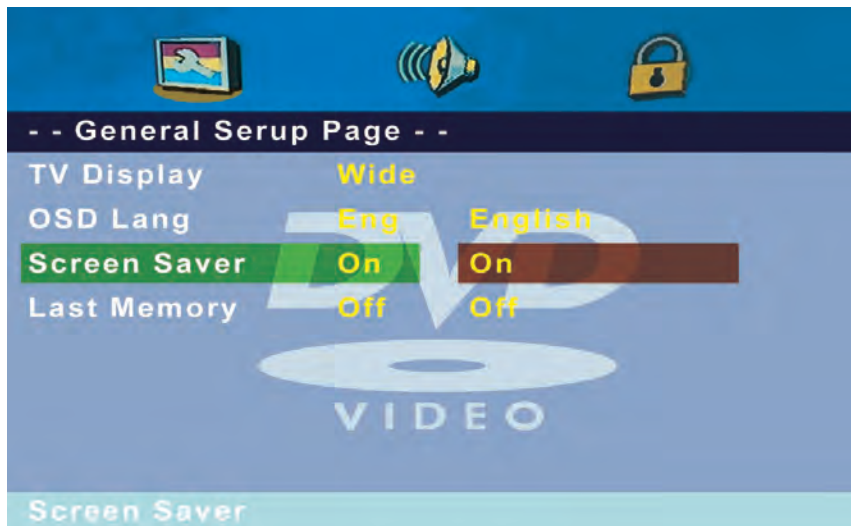


LAST MEMORY

Can set the items on the last memory, "ON" and "OFF" option.

Select "ON" the shutdown will shutdown the machine before the settings for memory, re-boot the machine settings. Set near the same time.

Select "OFF" every time the machine automatically switches back to the default settings

 - **On** (Start the memory)
- **Off** (Remove the memory).

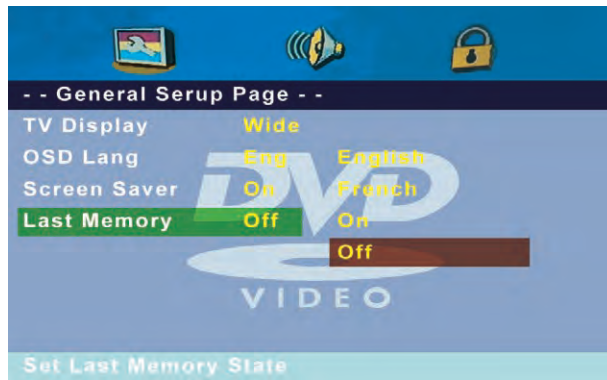


AUDIO SETUP

- **SPEAKER SETUP:** In the "Audio Setup page" press "▼" button to select "Speaker Setup" item, press the "OK ENTER" or "▶" button (play) into the "Speaker Setup Page".



DOWNMIX

 - **LT/RT:** A disc recorded multi channel soundtrack. The output signal will be incorporated to left and right channel
- **STEREO:** A disc recorded multi channel soundtrack. The output signal will be incorporated to stereo.

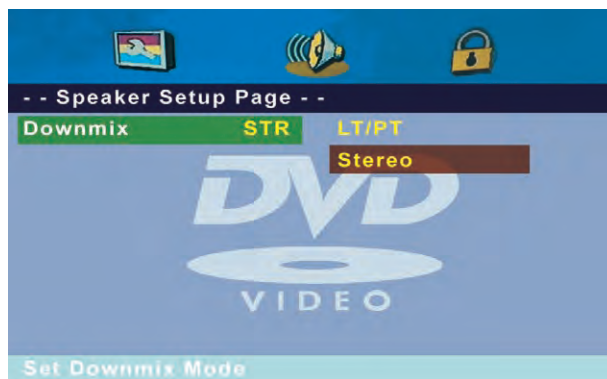


PREFERENCE SETUP




You must press **STOP** twice to enter Preference Page or NO disc

TV TYPE

 
- **PAL:** This is selected when the player is connected to an PAL System TV.
- **MULTI:** The player will set the TV system according to the disc in the tray.
- **NTSC:** This is selected when the player is connected to a NTSC System TV.

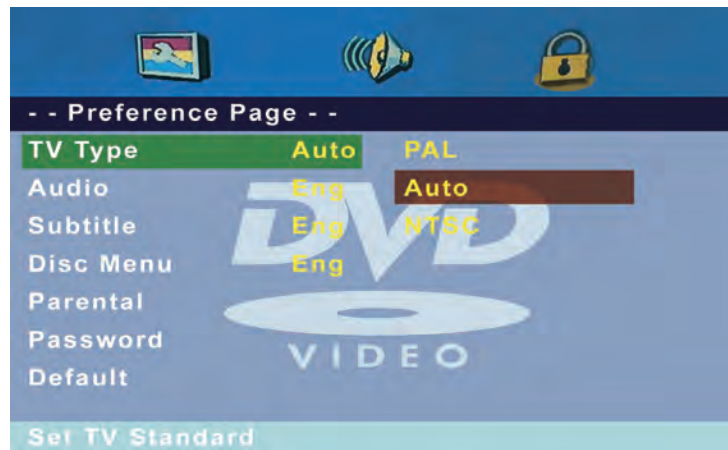

 AUDIO: If a language listed below is recorded on the disc, you can play the sound in such language. If not, the language recorded will be used.

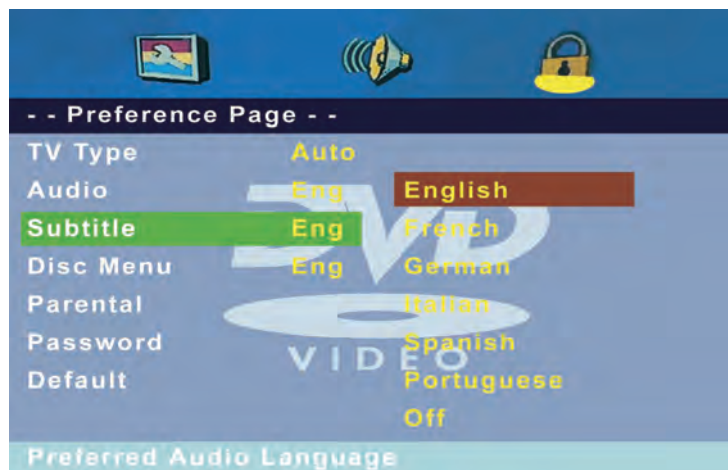

 SUBTITLE: If a language listed below is recorded on the disc, you set the subtitle to be displayed in such language. If not, the language recorded will be used.

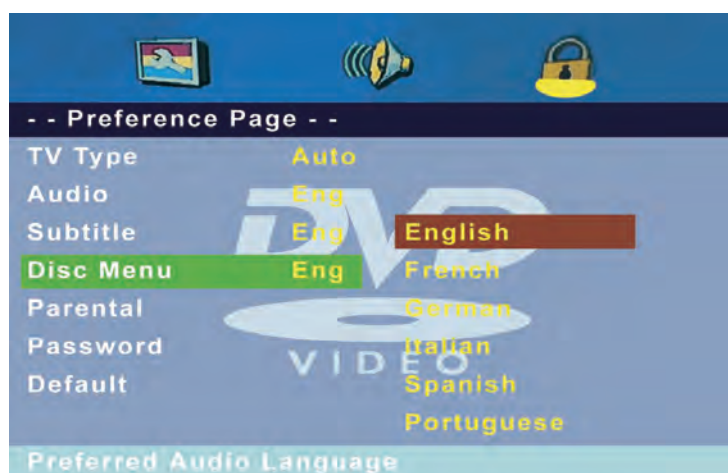

DISC MENU: If a language listed below is recorded on the disc, you can set the Menu to be displayed in such language. If not, the language recorded will be used.

PLTLD19 - PLTLD22 - PLTLD24 SPECIFICATION

Display technology		LED Display (Pixel Class 1)		
Screen size, visible		18.5 inch	21.5 inch	23.6 inch
Screen format		16:9		
Resolution		1366*768	1920*1080	
Contrast ratio		3000:1		
Minimum brightness		200cd/m ²		
Display colors		16.7M colors		
Minimum viewing angle		178°H, 178°V		176°H, 176°V
Response time		14ms		
Picture repetition rate		50/60Hz		
Video Color systems		NTSC		
TV Functions	TV Standard	NTSC/ATSC		
	CATV(optional)	CABLE(CH1~CH135)/AIR(CH2~CH69)		
	CC	608CC		
Connections	DC 12 Volt input	Yes		
	USB	Only for the use of upgrade		
	DVD	1		
	HDMI	1		
	PC AUDIO IN	1		
	VGA	1		
	AV-IN	1		
	COAXIAL OUTPUT	1		
	EARPHONE OUTPUT	1		
	AUDIO OUT	1		
OSD language		English/French/Spanish		
Audio output		2x3 Watt		
Power requirement		AC 100V~240V / DC 12V 3A / 24V 1.5A		
Power consumption maximum		36W		
Peak luminance ratio in %		<75%		
Power consumption in stand-by mode		0.5W		
Mercury content in mg / contains lead		0,00 mg / Yes		
VESA		100 x100 mm		

California Prop 65 Warning

⚠️ WARNING:

This product contains Ethylene Oxide which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

The logo for Pyle, featuring the word "PYLE" in a bold, black, sans-serif font. The letters are thick and blocky, with a slight shadow effect behind them. The background of the entire page is white with abstract geometric shapes in shades of blue and dark blue, creating a modern, tech-oriented aesthetic.

PyleUSA.com

Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com