




PLVSPLT41Video Splitter Controller

Quad View 4-Ch. Video Signal Picture Switcher for Backup Camera Video Monitor Systems (Car, Truck, Bus, Trailer Vehicles)

USER MANUAL

Operation

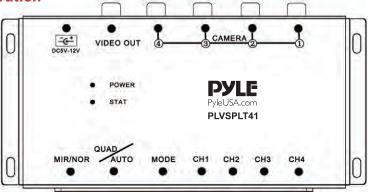



- 1. **Power Led:** While powered **ON**, led is bright, when the voltage is below 4.5V, the led will blink. The normal input voltage for this product is 5-20V.
- 2. The key function is the same with the remote control.
- 3. Key Function:
- **Quad key:** Short press, 4 picture $\begin{bmatrix} \frac{0}{2} & 1 \\ \frac{1}{2} & 3 \end{bmatrix}$, short press again will show $\begin{bmatrix} \frac{1}{2} & \frac{0}{3} \\ \frac{1}{2} & 3 \end{bmatrix}$, short press again to go back to the automatic picture slideshow. Press and hold to automatically change the channel, the changing time is about 3 seconds.
- **CH1 key:** Short press channel 1 to full view picture, short press again to go back to the automatic picture slideshow.
- **CH2 key:** Short press channel 2 to full view picture, short press again to go back to the automatic picture slideshow.
- **CH3 key:** Short press channel 3 to full view picture, short press again to go back to the automatic picture slideshow.
- **CH4 key:** Short press channel 4 to full view picture, short press again to go back to the automatic picture slideshow.
- **Mode key:** Short press to show various picture mode, each picture will be shown one by one, each press will change to another mode.
- 4. Picture mode dial switch: 4 switch, notice the left and right picture mode.
- 5. Automatic picture modes are below:
 - 2 picture and 3 picture auto split mode list

	1			2	2		
3		1	2	4	1	3	4
1		2		3		4	
3	4	3	4	1	2	1	2

Power OFF Memory

- 1. Press and hold "CH4" button, power ON and then release the button, enable power off memory function, and then choose the screen mode, and then power OFF, the device will remember the displayed mode. Device re-boot on the screen to show the display mode, the other features of the device is normal, not changed.
- 2. Press and hold "CH3" button, power ON and then release the button, change the boot automatically 4 screen image as " | mode.
- 3. Press and hold "CH2" button, boot power, to initialize the host (automatic image mode is H mode). Normal does not require initialization.

Features:

- 4-Ch. Video Splitter Controller
- Digital Picture Video Signal Switcher
- Quad View Display, See All 4 Cameras On-Screen
- Selectable Viewing Modes: 1/2/3/4 Cameras
- Mirror Image Function for Backup Camera System Support
- Real-Time Video Display Viewing
- Simple & Hassle-Free Operation
- Button Control Panel
- (4) RCA Type Video Inputs
- Monitor/Display Screen RCA Type Video Output
- Integrated Mounting Bracket Chassis
- Compact Size for Universal Panel Installation
- PAL/NTSC Auto Adapting
- LED Indicator Lights
- Used in Car, Bus, Truck, Trailer, Van & Mobile Vehicle Applications
- For Backup Cameras, Cam Systems, Security Surveillance, CCTV, Panel Monitor Display Screens

Technical Specs:

- Splitter Type: 4-Channel Video Switch
- Connector Type: RCA Video
- Video System: PAL/NTSC
- Video Resolution (PAL/NTSC): 720x576 / 720×480
- Frame Rate (PAL/NTSC): 100FSP / 120 FPS
- Video Frame Refreshing Rate: 30 FPS
- Operation Temperature: Up to 140°F/60°C
- Power Voltage Input: DC 5V-12V
- Remote Control Battery: (1) x CR-2025 Button Cell, Included
- Dimensions (L x W x H): 4.92" x 1.97" x 0.79" inches

What's in the Box:

- 4-Ch Video Splitter
- Remote Control
- DC Power Cable

Ouestions? Issues?

We are here to help! Phone: (1) 718-535-1800 Email: support@pyleusa.com



