



PLWB3040, PLWB6080, PLWB6090

**Illuminated Erasable LED Writing Board**

**W/ Remote Control and Fluorescent Markers**




[www.pyleaudio.com](http://www.pyleaudio.com)  
Instruction manual

Thank you for purchasing our Illuminated Erasable LED Writing Board.

Please read these instructions carefully for correct operation and usage.

## 1. Product Installation

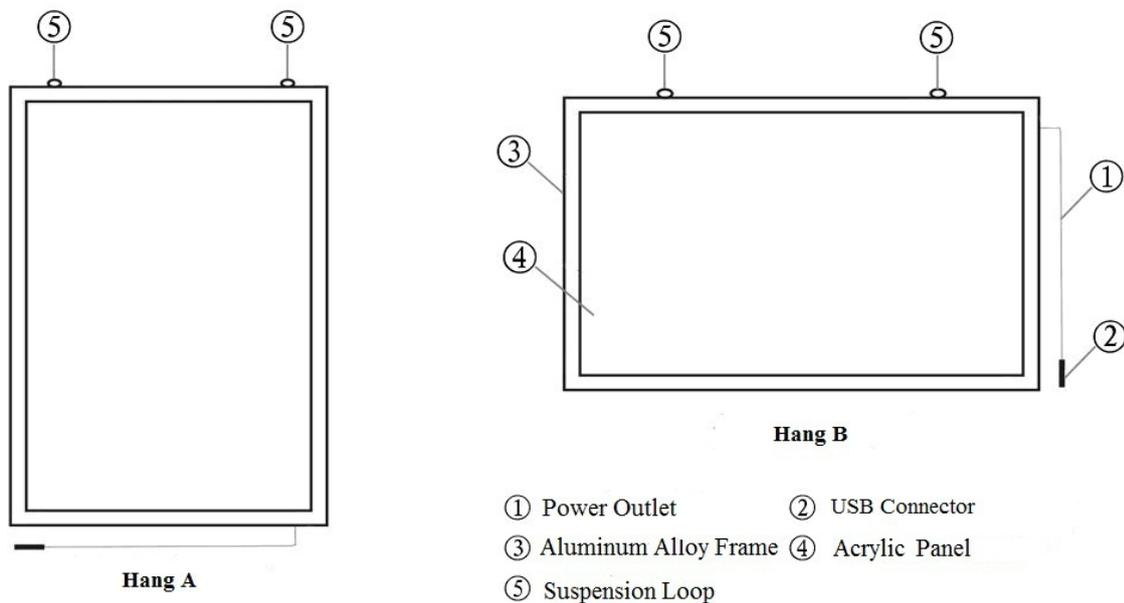

Our boards are designed for vertical and horizontal display, to fit all your presentation needs. The suspension loops (as shown above ⑤) on board edges are used to hang the unit on flat surfaces, such as ceramic tile, shop windows, stainless steel and plated metal surfaces ect..

You can also use a Triangle Easel (not included) for floor display at exhibits, presentations, supermarkets, chain stores, restaurants, shops, hair solons, cafes, clubs, wine bars, offices and family parties.

## 2. Writing Instruction

- 1) You must draw or write on the board with the included special fluorescent marker pen, other pens will damage the surface of the board.
- 2) Do not use oil-ink pen or other ink pen to avoid harming the panel.
- 3) Please shake the pen up and down for about 10 times, open the cap, press downward on the pen nib for about 3-5 seconds till the ink flows to the nib, before you begin to write. The 6mm size marker pen has a removable pen point that can be taken out to change from bullet or chisel.

### A. Wipe Tools

- 1) Tissue
- 2) Wet Cleaning cloth
- 3) Soft dry cloth

### B. Wipe Method

- 1) You can wipe while writing for erasing.
- 2) It is better to wipe when paint is dry.

- 3) Please keep board steady when wiping large area to prevent board from falling and breaking.
- 4) It is easier and faster to wipe down the same direction as your painting and writing.
- 5) Please use a wet cleaning cloth (wring out water) to wipe large area, then follow by polishing with a soft dry cloth.

#### **C. Usage for Control Box**

- 1) After you are finished painting, please connect interface of control box to the USB interface on the board, then connect the other interface of control box to the electric power adapter.
- 2) Press the red button on control box for 3 seconds, your design on the board will light up immediately. Repeat, press for 3 seconds, will turn off board.
- 3) Press the red button on control box to select different colors and flash modes, one press for one change.

#### **D. Usage for Remote Control**

- 1) To first usage of remote control remove the separation blade.
- 2) Aim the remote control at the receiver of control box.
- 3) Press the key to select the color and mode change.

### **3. Attention**

- 1) You must use our appropriate power adapter (220V/12V, 1A), other types of adapter will cause permanent damage to the board.
- 2) The panel is acrylic material, do not strike or let fall.
- 3) Do not submerge in water and please keep away from rain to avoid short circuits.
- 4) Turn off the power when drawing on board to protect your eyes do not look directly into the light for long periods of time.
- 5) Please wring out wet cleaning cloth to prevent water seepage into the edges of the board and other security risks.