

PMP21BL - PMP22GR - PMP23SL - PMP24PK



PYLE
PyleUSA.com

Compact Megaphone Speaker

Compact Megaphone Speaker with Siren Alarm Mode

This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.

SAFETY

This megaphone is intended to be used only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or device damage. Please use the megaphone as described and under supervision if used by children or minors.

- Ensure that plastic bags, packaging, etc.
- Never let children unattended use electrical devices.
- Use proper polarity is observed when inserting batteries. Incorrectly inserted batteries may cause damage and risk of fire.
- Leaking batteries can cause permanent damage to the device.
- Remove batteries if the megaphone will not be used for long periods of time.

OPERATING INSTRUCTIONS

Voice Mode:

- (1) Slide the switch on the rear of the megaphone to voice
- (2) Adjust the desired volume level using the rear of the megaphone

Siren Mode:

- (1) Slide the switch on the rear of the megaphone to siren
- (2) Adjust the desired volume level using the rear slider switch

BATTERY INSERTION

Press the button located near the back, underside of the megaphone. The button will release the lid to reveal the battery compartment. Please see correct battery direction placement on the top side of the opening battery compartment lid. Insert batteries, close the cover and fasten clip until locked.

NOTE: Make sure the batteries are inserted correctly observing correct polarity.

Features:

- Compact Megaphone Speaker
- (2) Audio Projection Modes: Voice Talking & Siren Alert
- Voice Mode: Amplifies Your Voice as Spoken into the Microphone
- Siren Alert Mode: Amplifies an Emergency tone through the Megaphone Speaker
- Battery Operated, Requires (4) x 'C' Batteries, Not Included
- Ergonomic Pistol Grip and Light-Weight Chassis
- Quick Folding Handle for Portability
- Adjustable Volume Control
- Power Saving OFF Switch
- For Indoor/Outdoor Use

Technical Specs:

- Power Output: 20 Watt MAX
- Audio Projection Range: Up to 400+ Yards
- Battery Operated: Requires (4) x 'C' Batteries, Not Included
- Dimensions (D x H): 5.40" x 8.60" -inches
- Weight: 0.96 lbs.



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?

PyleUSA.com/ContactUs

PYLE