

 
PMP63IN

Lightweight and Portable Megaphone Bullhorn

Aux (3.5mm) Input for MP3/Music,
Automatic Siren, 100-Watt, MIC/TALK (Black)

PYLE
PyleUSA.com

USER GUIDE

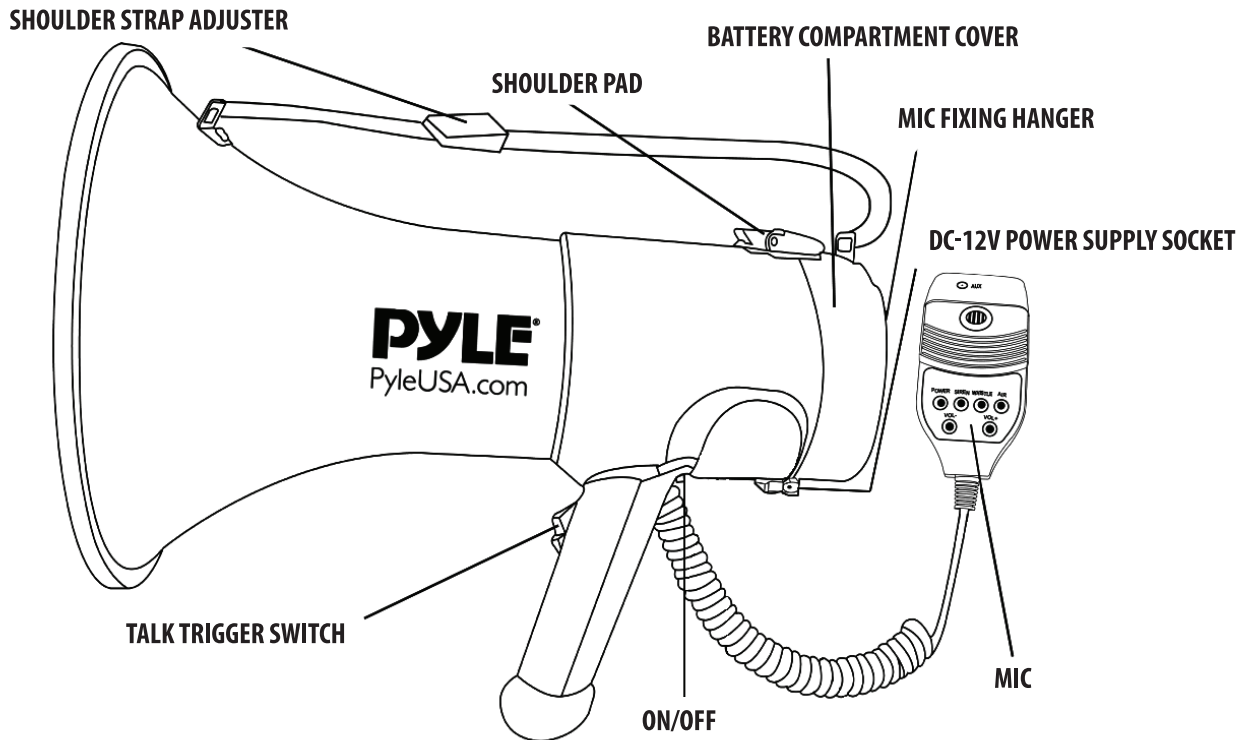

OPERATION

Open the Back Cover. Remove the plastic battery sleeve and insert 8 nos. UM-2 cells with correct polarity, insert the sleeve into the battery compartment according to the instructions in the compartment. Then close the back cover until it locks. Now your megaphone is ready for action. You can also open the back cover, remove the plastic battery sleeve and insert one 12V rechargeable battery then close the back cover until it locks.

TALK OPERATION

Dial the toggle switch to MIC and then press the power key on MIC, the indicator lights up, and then you can now speak into the microphone.


Toggle power switch to ON, press the POWER on the MIC, then the indicator lights up. Now the megaphone is ready for the following function operation:

TALK Operation: Mic is powered on without pressing any key, the microphone can be used as propaganda amplification. Short press SIREN to play alarm sound. Press again to turn off.





Short press on the WHISTLE to activate whistle sound. Press again to turn off.

Short press AIR to broadcast 119 sound. Press again to turn off.

AUX Operation: Connect one end of your phone or MP3 player with 3.5 audio cable, and insert the AUX of mic into the other end to play.

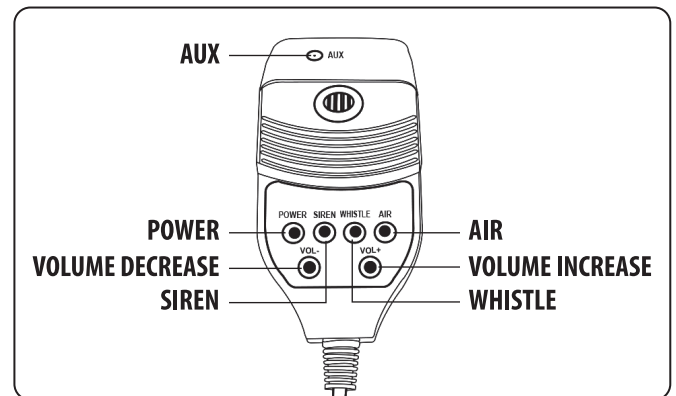

TO REPLACE BATTERIES

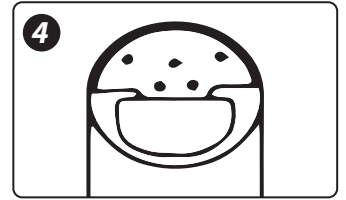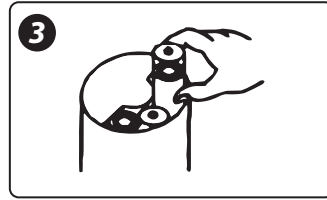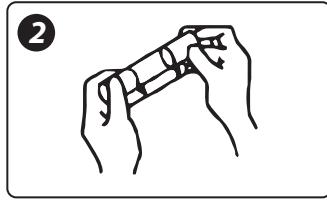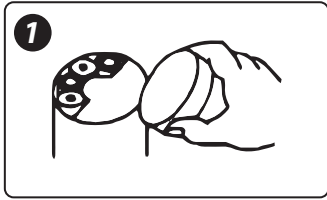

1. Loosen the locking screw of the battery compartment cover on the back of the body.
The battery compartment cover comes off.
2. Insert 8 x type-C (UM-2) batteries in the battery case observing correct polarity.
3. Insert the battery case with batteries into the battery compartment of the megaphone, paying attention to polarity.

TO REPLACE RECHARGEABLE BATTERIES

4. Open the back cover. Remove the plastic battery sleeve and insert the rechargeable battery.
Clock the back cover until it locks.

Notes:

1. Make sure the batteries are inserted correctly, observe correct polarity.
2. Charge the battery for 6-8 hours in 110-220V before first use.
3. When the megaphone is not in use for a long period of time, remove the dry cells and replace.
4. Drained cells or rechargeable battery will not give sufficient sound volume.
5. After the lithium battery is fully charged, the indicator light will turn red into green.
6. Switch the button to **OFF** if you have finished using the megaphone.

Features:

- (3) Modes: Talk, Siren & Music
- Aux (3.5mm) Input Connector Jack
- Stream MP3 & Digital Audio Files
- Ability to Connect External Devices
(iPhone, Android, Smartphone, iPad, Tablet, etc.)
- Includes Plug-in Handheld Microphone
- Button Activated Automatic Siren Alarm
- Adjustable Volume Control
- Ergonomic Pistol Grip and Lightweight Chassis
- For Indoor/Outdoor Use
- Built-in Automatic Siren Function
- Talk, Music, and Siren Switch

What's in The Box:

- Megaphone Speaker
- Microphone
- Strap

Technical Specs:

- Constructional Materials: ABS
- Power Output: 100 Watt MAX
- Bell Width: 8.46" -inches
- Projection Range: Up to 1500 Square Yards
- Battery Powered: Requires 8 x 'C' Batteries, Not Included
- Product Dimensions (D x L): 8.46" x 14.96" -inches



Questions? Comments?
We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com