



PYLE

PyleUSA.com



PNX8WPBK - PNX8BK

Dual 3" Bluetooth Portable Speaker

Portable Audio Speaker, with Built-in Rechargeable Battery,
Waterproof, Clear Sound performance, TWS/MP3/USB
(280 Watt MAX)

USER GUIDE





Illegal operation may cause personal injury, which could be fatal.



Illegal operation may cause damage to property.

Important Safety Instructions:

1. Read these instructions carefully.

2. Read all warnings

3. Follow all instructions.

4. Please do not expose this apparatus to water, corrosive liquid or gas.

Store the apparatus in a dry and clean place.

5. **DO NOT** install the speaker system near windows, or any heat sources such as radiators, heat registers, gas stoves or other apparatus that produce heat.

6. **DO NOT** place any naked flame sources, such as lit candles, on or near the apparatus.

7. Clean only with dry cloth.

8. **DO NOT** place objects filled with any kind of liquid on the speakers

9. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Liquids can cause a failure and/or fire hazard.

10. **DO NOT** insert metal bar/wire or any other object in the speaker hole.

11. Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.

12. To reduce the risk of electric shock, **DO NOT** handle the plug with wet hands.

13. Before moving the speakers, please pull out the power adapter and disconnect from any other equipment.

14. **DO NOT** block any ventilation openings of the device, otherwise it will cause a rise in internal temperature of the apparatus and thus cause damage to the circuit.

15. **DO NOT** press the switches or other keys with force.

16. Unplug the power cable immediately if your device emits smoke or acts abnormally. Seek professional help from your nearest service center.

17. Only use attachments recommended by the manufacturer.

Use of other attachments may be hazardous.

18. **DO NOT** dispose used batteries in your household garbage or recycling bin.

 
Follow instructions from your local council about safe disposal.

Using the Remote Control


Installing the Batteries

Remove the battery cover from the back of the Remote Control as shown and insert 2xAAA size batteries ensuring correct polarity.

1. Mute
2. Mic vocal changing
3. 0-9 keys
4. Repeat
5. TWS

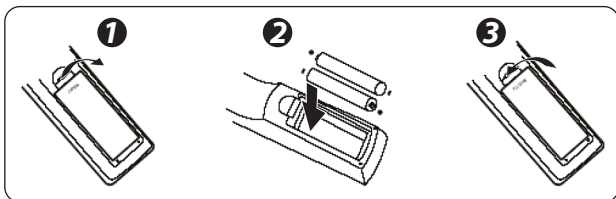

 6. Play/Pause
7. Previous song
8. Volume +
9. Next song
10. Volume -
11. Recording key
12. Mic Priority
13. Recording play
14. Mic vol -
15. Mic vol +
16. Bluetooth
17. Bass +
18. Bass -
19. Aux
20. Echo +
21. Echo -
22. USB
23. Treble +
24. Treble -


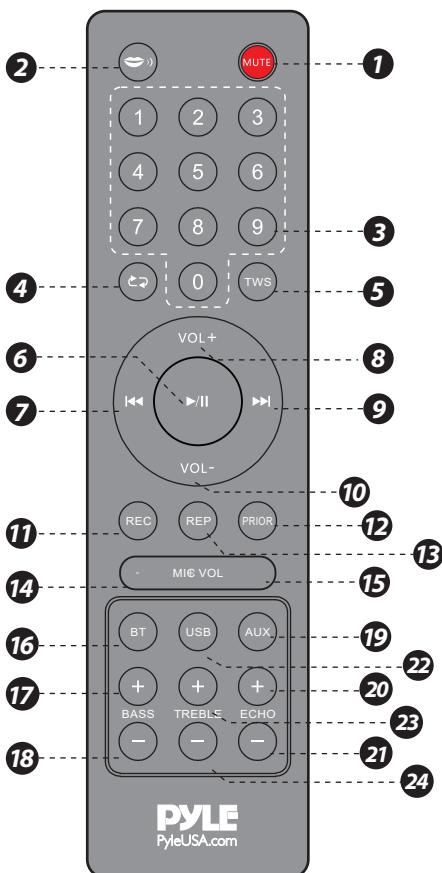


Note for remote:

The remote control should be used within 6m from the device, around 30 degree on the left/right side, pointed directly towards the speaker system.

OVERVIEW:

  1. Press and hold to POWER ON/OFF
2. MODE
3. Short press VOL- to decrease volume, Press and hold for previous song
4. PLAY/PAUSE/TWS (PRESS & HOLD FOR TWS)
5. Short press VOL+ to increase volume, Press and hold for next song

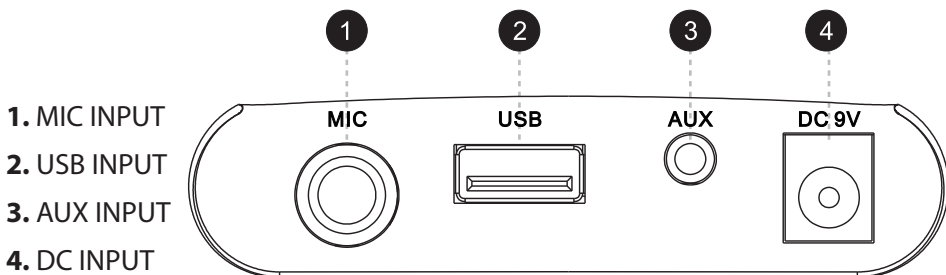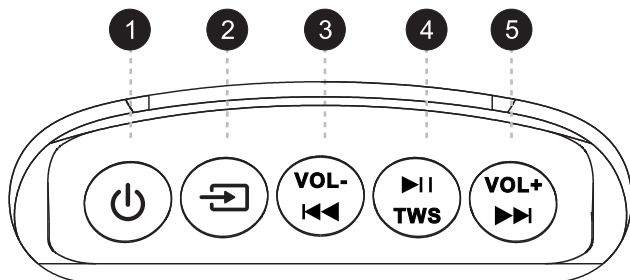

CONNECTING WIRED MICROPHONE

PNX8BK: Wired microphone included.

PNX8WPBK: Wireless microphone included.

Connect the microphone to MIC IN input and switch on.

Note: If you are playing music from any other input, connecting the microphone will not mute the sound output.

Voiceover Function

The voiceover function is available with any input.

Play a track through AUX/USB/Wireless BT;

connect a microphone to MIC IN and sing along for a "karaoke" effect.

Built-in Recording Function:

1. Plug in a microphone to the **MIC IN** input.
2. Insert USB into the corresponding port;
Press Mode button and select USB mode.
3. If the USB is plugged into the speaker for the first time, the system will automatically create a folder named **RECORDM** to save recorded files (FAT32 usb file system is supported).
4. When you are ready to record, press "**REC**" on remote control to start recording, and Press "**REC**" on remote control again to save recording.
5. Press "**REP**" button on remote control to play recorded files. Press "**REP**" button again on remote control to quit recording. While playing recorded files, press "**REC**" button to delete current recording.

USB

Keep the speaker away from high temperatures, high magnetic field and high frequency interference. If the speaker hangs, please switch it off and switch on again, or unplug USB and re-plug. The speaker will work normally again. The maximum size of usb device that can be connected is 64GB.

MUSIC FORMAT SUPPORT MP3, WMA, FLAC

1. **USB** port, plug and play.
2. **Mode key:** Choose input source from these options: AUX/USB/Wireless BT.
3. **Play/pause key:** when playing, press this key to pause, press the key again to play.
4. **Previous/Next key:** when playing, single press of this key will play next/previous song as per your wish.
5. **Repeat key:** when playing, pressing this key can replay the current song or all songs as per your wish. Press once for single repeat;
Press twice for repeat all.

WIRELESS BT STREAMING

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices Smartphones, Tablets, Laptops, Computers, etc.
- BT Version: 5.0
- BT Network Name: 'PYLEUSA'
- Wireless Range: Up to 32' ft.

WIRELESS BT OPERATION

1. Turn **ON** the machine and press the **MODE** on unit or the **BT** on remote control to select the BT mode.
2. In the **BT** mode, the system automatically enters search mode.
3. Activate the **Wireless BT** feature on the external device to be coupled.
4. Initiate a search for devices. The device shows up as "PYLEUSA".
5. Press the **PLAY** button on the unit or the key **▶||** on remote control, to start playing and the buttons **NEXT** and **PREV**, or the keys **▶▶** and **◀◀** for the selection of songs.

TWS FUNCTION

For increase sound effect, our unit provides TWS function as follows:

Step-1: Make sure two same units are in BT mode.

Step-2: Turn **ON** BT mode on your device and connect one of the units.

Step-3: Press and hold the **TWS** button on each unit, and two units will pair automatically.

Remark:

After two units pairing, press and hold TWS button again to quit pairing.

CHARGING INSTRUCTIONS

1. This speaker has a high capacity 7.4V battery. **Connect to AC port with the power adapter to charge.** The speaker has an indicator light that will illuminate in red color when the speaker is on charge.
When the speaker is fully charged, the indicator light will be in green color.
It takes around 6 -8 hours to fully charge the speakers.
Disconnect power adapter as soon as battery is fully charged.

Note: *Over charging will damage the battery.*

2. Please fully charge the speakers if they are not used in a long time.
Charge the speakers every 2 months, otherwise the battery may get damaged.

Note:

When battery is low, the button lights will flash quickly and "Low Battery" voice prompt. Please charge the unit in time.

WHAT'S IN THE BOX:

- Speaker System
- Power Adapter
- **PNX8BK:** A Wired Microphone.
- **PNX8WPBK:** A Wireless Microphone.
- Remote control

TROUBLESHOOTING

Users may try to solve common problems by following these guidelines.
If the problem persists and can't be solved, please contact Customer Service for assistance.

TROUBLESHOOTING

Check the following points before contacting a repair company.

Symptom	May caused by	Solution
No sound when powered ON	<ol style="list-style-type: none">1. No input sound source2. Volume knob is in the lowest position3. Voice switch OFF4. USB not plugged	<ol style="list-style-type: none">1. Input AUX signal2. Adjust volume3. Turn on voice switch4. Plug USB and play MP3
Sound Distortion	<ol style="list-style-type: none">1. Volume is too loud2. Audio file error	<ol style="list-style-type: none">1. Turn the volume down2. Check and change the audio file
No sound comes from the Microphone	<ol style="list-style-type: none">1. Microphone socket may not be plugged properly.2. Microphone switch may not be on3. Microphone volume is on lowest mode.	<ol style="list-style-type: none">1. Ensure the microphone is correctly plugged into the socket.2. Turn on the microphone3. Adjust the microphone volume as per users wish
No sound comes after inserting USB	<ol style="list-style-type: none">1. Incorrect file format2. USB may not be plugged in properly.	<ol style="list-style-type: none">1. File format should be MP32. Plug USB correctly
Charging indication - red light flashing when there is low charge	Charging adapter is not inserted properly.	It will not affect the speaker system. The light is only used for indicating whether the unit is charging.
Unable to charge or the battery works only for short duration	<ol style="list-style-type: none">1. Connect power cord to charge2. Battery not fully charged3. Battery life may have ended	<ol style="list-style-type: none">1. Check if the power cord is connected properly2. Extend charging time; normally it takes 6-8 hour to fully charge3. Replace old batteries with the same specification as the old batteries.
Speaker makes loud noises	<ol style="list-style-type: none">1. Mic switched ON but too close to the speaker2. Microphone switched ON but is not being used.3. Microphone volume is too loud4. Mobile phone is too close to the speaker5. Other wireless equipments may be placed very close to the speaker.	<ol style="list-style-type: none">1. Keep the mic 2 meters away from the speaker2. Turn off mic if not in use.3. Adjust microphone volume to lower mode4. Keep mobile away from the speaker whilst attending a call.5. Keep speaker away from other wireless equipment

FEATURES:

- True Wireless Stereo System
- IPX5 Waterproof
- Portable Speaker System
- High-Powered Loudspeaker Style
- Bluetooth Wireless Music Streaming Ability
- Built-in Rechargeable Battery
- Connect & Stream Audio from External Devices
- Aux (3.5mm) Input Connector Jack
- USB Flash Memory Reader
- 6.5mm Microphone input
- Battery Level LED Indicator Lights
- Recording Function
- Microphone Priority Function
- Microphone Echo Adjust Button
- For Indoor/Outdoor Use

TECHNICAL SPECS:

- Construction Material: ABS + Woven Mesh
- Max Power Output: 280 Watt Max
- Sound System: 3" -inch Subwoofer x 2 + 1.5" Tweeter x 2 + Bass Vibration x 2
- USB Interface Type: 2.0
- Digital Audio File Support: MP3/WMA/FLAC
- Maximum USB Flash Support: 64GB
- Remote Control Battery Operated, 2 pieces AAA Batteries (Not Included)
- Battery Life: Up to 3.5 Hours (Charge Time: Approx. 5 Hours)
- Rechargeable Battery: 7.4V, 4400mAh – 32.56 Wh
- Power Supply: AC110~240V, Auto Switchable (9V/2A Power Adapter)
- Product Dimensions (L x W x H): 10.9" x 5.9"x10" (Inch)

California Prop 65 Warning

WARNING:

This product contains Lead and lead compounds which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



PYLE[®]

PyleUSA.com

Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

