

PYLE
PyleUSA.com



PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com









PPHD210

10" Portable Wireless BT PA Speaker System
Karaoke Speaker with LED Lights, USB/Micro SD/
FM/BT/Aux/Remote Control/Mic & Guitar Inputs,
Built-in Rechargeable Battery, w/ Wheels
and Handle Bar (1200 Watt)

USER MANUAL

**PLEASE READ THE INSTRUCTION MANUAL CAREFULLY
AND KEEP IT FOR FUTURE REFERENCE**


WARNING

-  1. **DO NOT** place objects on top of the device, as objects may scratch the device.
-  2. **DO NOT** expose the device to dirty or dusty environments.
-  3. **DO NOT** insert any foreign objects into the device.
-  4. **DO NOT** expose the device to strong magnetic or electrical field.
-  5. **DO NOT** use the device in the rain
-  6. Please check with your Local Authority or retailer for proper disposal of electronic products.
-  7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.
-  8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.

Illegal operation may cause personal injury, which could be fatal and may cause damage to property.

REMOTE CONTROL Functions

- 1. POWER OFF ONLY
- 2. CHOOSE SIGNAL INPUT
- 3. INCREASE MUSIC VOLUME
- 4. MENU
- 5. PREVIOUS LED MODE
- 6. DECREASE MUSIC VOLUME
- 7. MUTE
- 8. REPEAT
- 9. PLAY/PAUSE KEY
- 10. PREVIOUS SONG/CHANNEL
- 11. NEXT SONG/CHANNEL

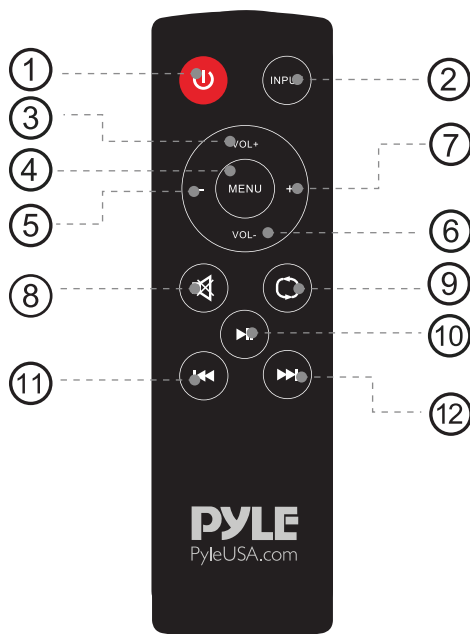


For MENU:

- N 30 N(0--30) Microphone volume adjustment
- E 00 E(0--30) Microphone echo volume adjustment
- d 00 d(0--12) Microphone delay volume adjustment
- 9 00 9(0--30) Guitar volume adjustment
- LEd (LED(0--1) LED OFF/ON

TWS-TRUE WIRELESS STEREO SETUP

- 1. Turn on two same PA speaker that you're attempting to pair together and switch both units to Wireless BT mode.
- 2. Choose one of units to begin to pairing process.
- 3. Press down on the NEXT ►► button for 3 seconds until you hear a chiming sound; This means the unit is ready to pair with another unit.
- 4. Move onto the second unit and repeat step 3.
- 5. Now begin playing your music through Wireless BT enabled mobile device. The speakers will begin to play your music simultaneously.

Control Board Functions

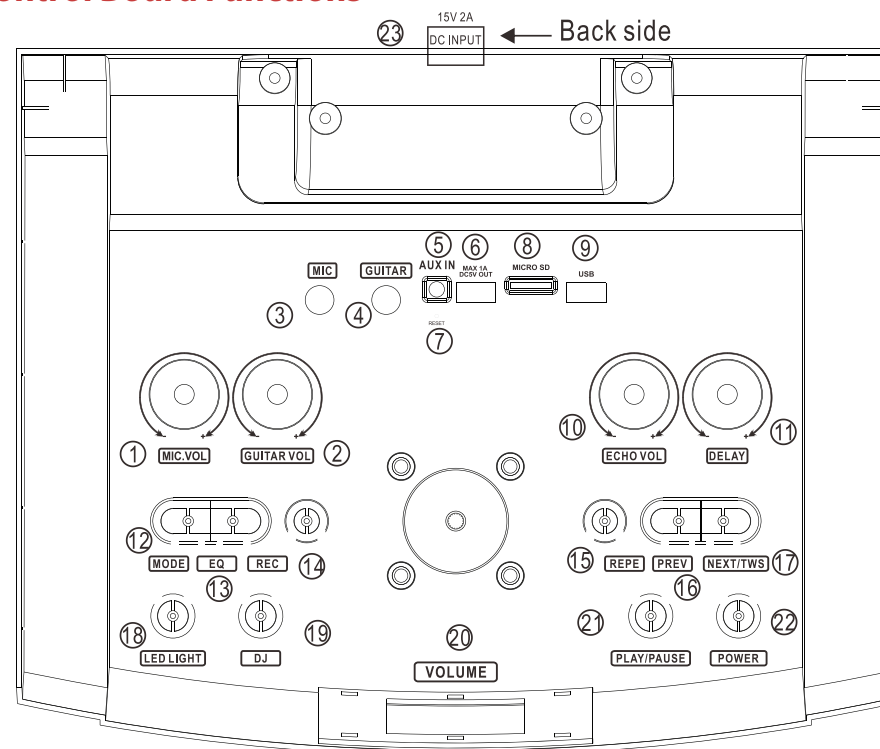

1. Microphone volume knob
2. Guitar volume knob
3. 6.5 MM microphone input jack
4. 6.5MM guitar input jack
5. 3.5MM audio input jack
6. USB jack for DC 5V/1A output
7. Reset button
8. Micro SD jack
9. USB jack for Mp3 play
10. Echo volume knob for microphone
11. Delay volume knob for microphone
12. Input signal choosing
13. 3 kinds of EQ function
14. Record function on USB/Micro SD mode
15. Repeat song function
16. Last song on USB/Wireless BT mode, last channel for FM mode
17. Short press for next song on USB/Wireless BT mode, next channel for FM mode, press and hold for TWS -connection
18. LED light swift
19. Different DJ effect choose
20. Master volume control for music
21. Stop/Play song on USB/Wireless BT mode, automatically scan channel for FM mode
22. Power ON/OFF button
23. 15V/2A DC charge and LED indicator phone volume knob

Troubleshooting and Warning

Fault	Possible Cause	Solution
No sound	1. No input sound source 2. Volume is too low	1. Use a better music signal 2. Adjust volume
Distortion of sound	1. Volume too high 2. Speaker may be damaged	1. Turn down the volume 2. If speaker is damaged, Repair or replace it
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on 3. Microphone volume knob is at the lowest position	1. Plug microphone properly into the socket 2. Turn on microphone switch 3. Adjust microphone volume properly
MP3 does not play	1. The song format in the U disc is incorrect 2. Improper operation has caused a process disorder 3. USB disc is disconnected	1. Transform song format into Mp3 format 2. Reboot the machine 3. Insert USB disc properly

PPHD210

10" Portable Wireless BT PA Speaker System

Karaoke Speaker with LED Lights, USB/Micro SD/FM/BT/Aux/Remote Control/ Mic & Guitar Inputs, Built-in Rechargeable Battery, w/ Wheels & Handle Bar (1200 Watt)

Features:

- True Wireless Stereo Function
- Simple DJ Sound Effect and EQ Adjustable
- USB Charging Power Function
- Portable PA Speaker System
- High-Powered Loudspeaker Design
- Master Volume, Mic Volume, and Mic Echo Adjustable
- (2) 1/4" -inch (6.5mm) Microphone/Guitar Instrument Inputs
- ON/OFF Switch to Control LED Lights
- Wireless BT Music Streaming Ability
- Multi-Color Flashing LED Party Lights



WARNING:

This products can expose you to a chemical or group of chemicals, which may include "Lead and lead compounds" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.