

PYLE
PyleUSA.com



PPHP1033B

3x10" Portable Wireless BT PA Karaoke Speaker System

Karaoke Speaker with LED Lights, USB/Micro SD
/FM/BT/Aux/Remote Control/Mic Inputs, With Wheels
and Handle Bar (1600 Watt)

USER GUIDE



Illegal operation may cause personal injury, which could be fatal.



Illegal operation may cause damage to property.

Important Safety Instructions:

1. Read these instructions carefully.

2. Read all warnings

3. Follow all instructions.

4. Please do not expose this apparatus to water, corrosive liquid or gas.

Store the apparatus in a dry and clean place.

5. **DO NOT** install the speaker system near windows, or any heat sources such as radiators, heat registers, gas stoves or other apparatus that produce heat.

6. **DO NOT** place any naked flame sources, such as lit candles, on or near the apparatus.

7. Clean only with dry cloth.

8. **DO NOT** place objects filled with any kind of liquid on the speakers

9. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Liquids can cause a failure and/or fire hazard.

10. **DO NOT** insert metal bar/wire or any other object in the speaker hole.

11. Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.

12. To reduce the risk of electric shock, **DO NOT** handle the plug with wet hands.

13. Before moving the speakers, please pull out the power adapter and disconnect from any other equipment.

14. **DO NOT** block any ventilation openings of the device, otherwise it will cause a rise in internal temperature of the apparatus and thus cause damage to the circuit.

15. **DO NOT** press the switches or other keys with force.

16. Unplug the power cable immediately if your device emits smoke or acts abnormally. Seek professional help from your nearest service center.

17. Only use attachments recommended by the manufacturer.

Use of other attachments may be hazardous.

18. **DO NOT** throw used batteries in with your household rubbish.



Follow instructions from your local council about safe disposal.

Using the Remote Control

Installing the Batteries

Remove the battery cover from the back of the Remote Control as shown and insert 2xAAA size batteries ensuring correct polarity.

- 1. Mute
- 2. Fm radio
- 3. 0-9 keys
- 4. Repeat
- 5. Tws
- 6. Play/pause
- 7. Previous song
- 8. Volume+
- 9. Next song
- 10. Volume-
- 11. Record key
- 12. Mic Priority
- 13. Record play
- 14. Mic vol-
- 15. Mic vol+
- 16. Wireless BT
- 17. Bass+
- 18. Bass-
- 19. Aux
- 20. Echo+
- 21. Echo-
- 22. Usb
- 23. Treble+
- 24. Treble-

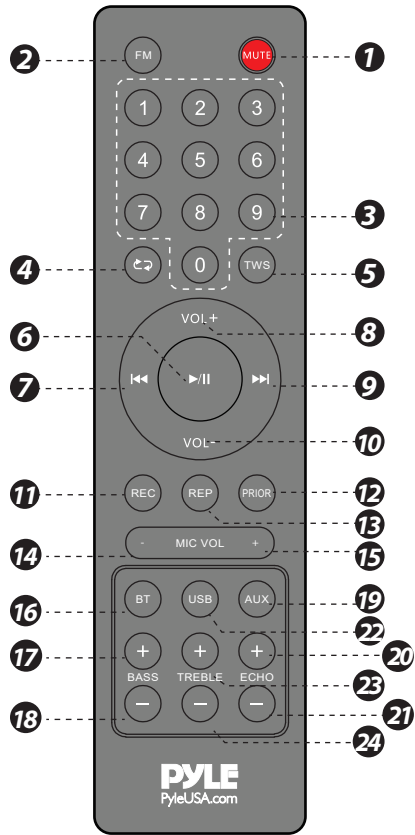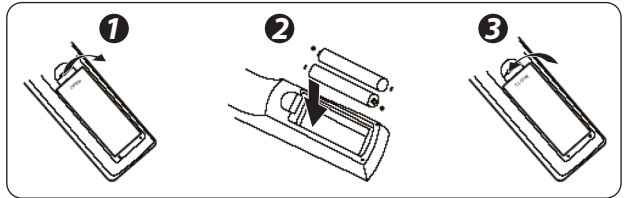


Note for remote:

1. The remote control should be used within 6m from the device, around 30 degree on the left/right side, pointed directly towards the speaker system.


OVERVIEW:

 1. USB1 INPUT
2. Micro SD CARD
3. USB2 INPUT
4. EQ
5. VOLUME
6. TERBLE
7. BASS
8. MIC. ECHO
9. MIC. VOL
10. MIC INPUT
11. POWER
12. MODE
13. REPEAT
14. PLAY/PAUSE
15. PREVIOUS SONG
16. NEXT SONG
17. REC/PLAY: Short press to start recording, press again to save and play recording
18. TWS/INST: Short press for TWS ON/OFF. Press and hold for music removing vocals function
19. PRIORITY/EQ ON/OFF: Short press for mic priority. Press and hold for EQ ON/OFF

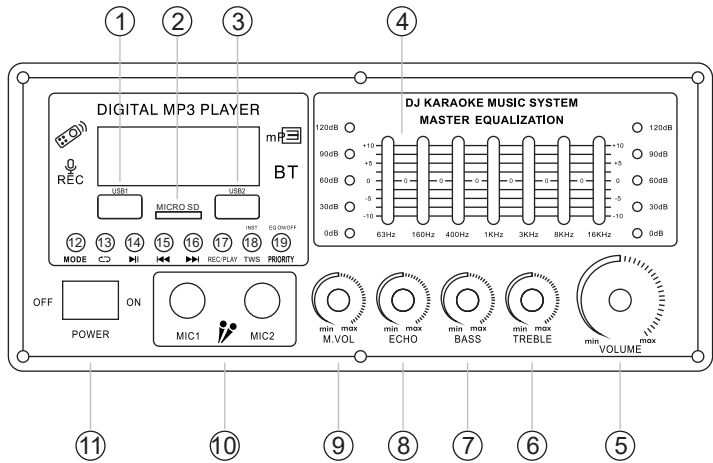

Back Panel

 1. AUX INPUT
2. LED POWER OFF/ON
3. COAXIAL INPUT
4. OPTICA INPUT
5. AC INPUT

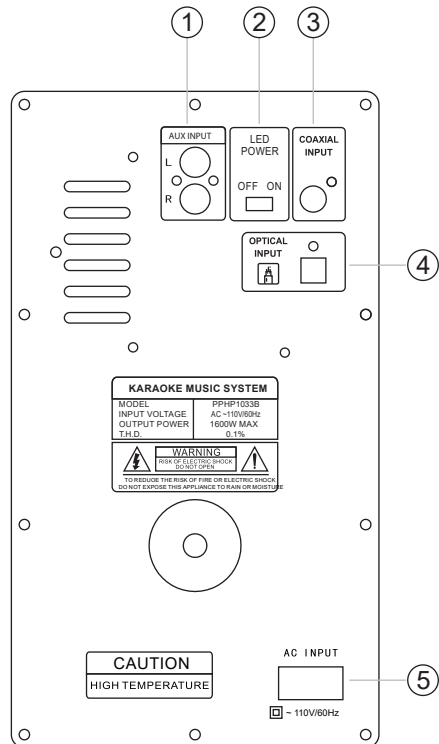

CONNECTING WIRED MICROPHONE (microphone not supplied)

Connect the microphone to MIC IN input and switch on.

Note:

If you are playing music from any other input, connecting the microphone will not mute the sound output.

Voiceover Function

The voiceover function is available with any input.

Play a track through AUX/USB/MICRO SD/FM/Wireless BT; connect a microphone to MIC IN and sing along for a "karaoke" effect.

Built-in Recording Function

1. Plug in a microphone to the MIC IN input.
2. Insert USB/MICRO SDcard into the corresponding port; press Mode button and select USB/MICRO SD mode.
3. If the USB/MICRO SD card is plugged into the speaker for the first time, the system will automatically create a folder named **RECORDM** to save recorded files (FAT32 usb file system is supported).
4. When you are ready to record, press "**Recording**" button to go to recording mode. The current sound output will stop and go to mute status, screen shows "**Recording**". The device starts recording when the screen shows 00:01 and users can use the microphone to record. Press "**REC/Recording**" button on remote control again to save recording.

USB/MICRO SD

Keep the speaker away from high temperatures, high magnetic field and high frequency interference. If the speaker hangs, please switch it off and switch on again, or unplug USB/MICRO SD card and re-plug. The speaker will work normally again. The maximum size of usb/micro sd device that can be connected is 64GB.

MUSIC FORMAT SUPPORT MP3, WMA, FLAC

1. **USB** port, plug and play.
2. **MICRO SD** slot. Plug and play.
3. **Mode key:** Choose input source from these options: AUX/USB/MICRO SD/FM/Wireless BT.
4. **Play/pause key:** When playing, press this key to pause, press the key again to play.
5. **Previous/Next key:** When playing, single press of this key will play next/previous song as per your wish.
6. **Repeat key:** When playing, pressing this key can replay the current song or all songs as per your wish. Press once for single repeat; Press twice for repeat all.

FM RADIO FUNCTION

1. Turn **ON** the unit and press repeatedly the **MODE** key on unit, or the **MODE** on remote control and select FM function (the display will show the frequency).
2. Press the **PLAY** button on the unit or the key **▶||** on remote control to activate the auto memory (the radio starts an automatic search for available radio stations and saves them automatically). The station's number stored depends on the radio signal in your area. During the search, press **PLAY** button on the remote control to stop searching.
3. Use the **NEXT** and **PREV**, or the keys **◀◀** and **▶▶** on the remote control to listen to the various radio stations saved in memory.
4. To change to a preset station, use the number keys on the remote control. For example, to call up the station number 12, first press 1 and then 2.

WIRELESS BT STREAMING

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices Smartphones, Tablets, Laptops, Computers, etc.
- BT Version: 5.0
- BT Network Name: 'PYLEUSA'
- Wireless Range: Up to 32' ft.

WIRELESS BT OPERATION

1. Turn **ON** the machine and press the **MODE** on unit, or the **BT** on remote control to select the BT function, the display shows "**BLUE**".
2. In the **BT** mode, the system automatically enters search mode.
3. Activate the **Wireless BT** feature on the external device to be coupled.
4. Initiate a search for devices. The device shows up as "**PYLEUSA**".
5. Press the **PLAY** button on the unit or the key **▶II** on remote control, to start playing and the buttons **NEXT** and **PREV**, or the keys **◀◀** and **▶▶** for the selection of songs.

TWS FUNCTION

For increase sound effect, our unit provides TWS function as follows:

Step-1: Make sure two same units are in BT mode.

Step-2: Turn ON BT mode on your device and connect one of the units.

Step-3: Press and hold the TWS button on each unit, and two units will pair automatically.

Remark:

After two units pairing, press and hold TWS button again to quit pairing.

WHAT'S IN THE BOX:

- Speaker System
- Remote Control
- Power Adapter

TROUBLESHOOTING

Users may try to solve common problems by following these guidelines. If the problem persists and can't be solved, please contact Customer Service for assistance.

California Prop 65 Warning

 **WARNING:**

This product contains Lead and lead compounds which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

TROUBLESHOOTING

Check the following points before contacting a repair company.

Symptom	May caused by	Solution
No sound when powered ON	<ol style="list-style-type: none">1. No input sound source2. Volume knob is in the lowest position3. Voice switch OFF4. USB/MICRO SD card not plugged	<ol style="list-style-type: none">1. Input AUX signal2. Adjust volume3. Turn on voice switch4. Plug USB/MICRO SD card, play MP3
Sound Distortion	<ol style="list-style-type: none">1. Volume is too loud2. Audio file error	<ol style="list-style-type: none">1. Turn the volume down2. Check and change the audio file
No sound comes from the Microphone	<ol style="list-style-type: none">1. Microphone socket may not be plugged properly.2. Microphone switch may not be on3. Microphone volume is on lowest mode.	<ol style="list-style-type: none">1. Ensure the microphone is correctly plugged into the socket.2. Turn on the microphone3. Adjust the microphone volume as per users wish
No sound comes after inserting USB/MICRO SD card	<ol style="list-style-type: none">1. Incorrect file format2. USB/MICRO SD card may not be plugged in properly.	<ol style="list-style-type: none">1. File format should be MP32. Plug USB/MICRO SD card correctly
Speaker makes loud noises	<ol style="list-style-type: none">1. Mic switched ON but too close to the speaker2. Microphone switched ON but is not being used.3. Microphone volume is too loud4. Mobile phone is too close to the speaker5. Other wireless equipments may be placed very close to the speaker.	<ol style="list-style-type: none">1. Keep the mic 2 meters away from the speaker2. Turn off mic if not in use.3. Adjust microphone volume to lower mode4. Keep mobile away from the speaker whilst attending a call.5. Keep speaker away from other wireless equipment

FEATURES:

- True Wireless Stereo Function
- Equalizer Adjustable
- Portable PA Speaker System
- High-Powered Loudspeaker Design
- Master Volume, Mic Volume, and Mic Echo Adjustable
- (2) 1/4" -inch (6.5mm) Two Microphone Inputs
- Wireless BT Music Streaming Ability
- ON/OFF Switch to Control LED Lights
- Multi-Color Flashing LED Party Lights
- LED Display
- USB/Micro SD Card Reader/FM/Remote Control
- Full Range Stereo Sound Reproduction
- Sleek & Stylish Speaker Cabinet Housing
- Connect & Stream Audio from External Devices
- Microphone Priority function
- Recording function
- Aux (RCA) Input Jack
- Rugged & Durable Molded Cabinet Design
- Convenient Rolling Wheels & Extending Carry Handle
- Used for Public Gatherings, Crowd Control, Karaoke Vocals, Stage Performances
- Perfect for Karaoke, Parties, Conferences, Indoors/Outdoors, and More

TECHNICAL SPECS:

- Construction Material: Wooden+ Polypropylene +ABS
- Max Power Output: 1600 Watt Max
- Sound System: 10" -inch Subwoofer (x 3)+ 1.5" Tweeter (x 2)
- USB Interface Type: 2.0
- Digital Audio File Support: MP3/WMA/FLAC
- Maximum USB Flash Support: 64GB
- Remote Control Battery Operated, 2 pieces AAA Batteries (Not Included)
- Power Supply: AC 110V/60Hz
- Product Dimensions (L x W x H): 13.3" x 12.2" x 43.4 " -inches

The logo for Pyle, featuring the word "PYLE" in a bold, black, sans-serif font. The letters are thick and blocky, with a slight shadow effect. The background consists of several diagonal stripes in shades of blue and grey, creating a modern, geometric look.

PYLE

PyleUSA.com

Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com