











PPHP1235WMU - PPHP1535WMU

Wireless BT Streaming PA Loud-Speaker System Includes (2) UHF Wireless Microphones

USER MANUAL

INDEX

OPERATION	. 1
GENERAL USE INSTRUCTIONS	2
CONTROLS AND CONNECTIONS	. 3
FEATURES	. 5
SAFETY NOTES	7
SPECIFICATIONS	8





- CAUTION: To Reduce the risk of electric shock, do not remove the cover (or back)
- This product must be earthed
- No user-serviceable parts inside, refer servicing to qualified service personel

OPERATION

- 1. Prior to switching on, turn volume down to minimum.
- 2. Connect the audio source to the appropriate Input socket
- 3. Ensure that the unit is connected to the appropriate power source
- 4. Switch on the audio source, followed by the active speaker.
- 5. Set the volume with the applicable control.
- 6. Adjust the bass + treble.
- 7. When using the speaker box by built-in battery, if you find the MP3 screen flickering which indicates the battery voltage is low, you have to turn off the speaker box and charge battery.
- 8. If you don't use the unit frequently, please do remember to charge the unit every three months to keep the battery in good condition.

Note: Please turn off the product when finish charging.

INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers.
- No naked flame sources, such as lighted candles, should be placed on the apparatus. -FIRE HAZARD
- Only connect to an earthed mains outlet: AC115V, 60Hz / AC230V, 50Hz.
- For indoor use only. If the box will be used outdoors, you need to make sure that theres no humidity can enter the box.
- When not in use, unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- The boxes can be hung. Use only strong and approved mounting material. During the mounting, make sure that nobody is standing below the mounting area.
- Do not place liquids on the box and protect it against humidity. Humidity can shorten the life time considerably.
- Only use suitable means of transportation if you want to move the box.
- Always unplug the unit during thunderstorms or if its not in use.
- If the unit will not be used for a long period of time, condensation may occur inside the housing. Please let the unit reach room temperature prior to use.
- Never try to repair the unit yourself. It does not contain any user serviceable parts.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of the reach of children.

CONTROLS AND CONNECTIONS

- 1. Digital Display Screen
- 2. Reception of Remote control
- 3. MP3 Control

MOD: USB/REC/FM/Bluetooth/Switch over

REC PLAY: Recording/Play function

N:Play/Pause

SCAN: Search radio station for FM

■ : Pause

REP: Repeat function

VOL-: Volume down

FM: Previous station

▶►: Next song


VOL+: Volume up

FM: Next station

- 4. SD/MMC card input
- 5. USB input
- 6. RCA Phono (R+L) line input level control
- 7. RCA line output
- 8. RCA Phono (R+L) line input
- 9. Treble control for high frequencies
- 10. Bass control for low frequencies
- 11. Master Volume control
- 12. Reverb Time Control
- 13. Echo Control
- 14. Mic input level control
- 15. Guitar input / 6.35mic 1 input
- 16. 6.35mm mic 2 input
- 17. Wireless microphone B channel indicator
- 18. Wireless microphone A channel indicator
- 19. Wireless power indicator
- 20. Wireless mic power switch
- 21. A channel volume control
- 22. B channel volume control
- 23. Wireless microphone A-B channel receiving antenna

3

- 24. FM Radio antenna
- 25. Power Indicator
- 26. Charge Indicator
- 27. Low Voltage Indicator
- 28. Fuse Socket
- 29. DC Power Interface
- 30. POWER: Main Power Switch
 - AC: AC Input
 - BATT: Battery
- 31. Power select
- 32. 115V-230V AC Input

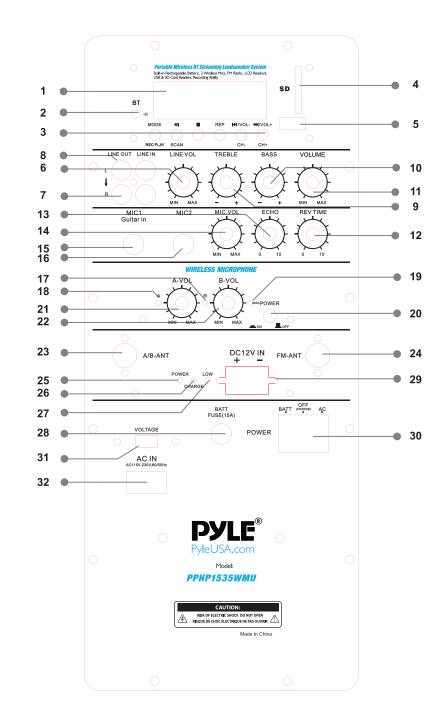

4

Features:

- Versatile PA Loud Speaker Sound System
- Bluetooth Wireless Music Streaming Ability
- Active 2-Way Full Range Stereo Sound
- Heavy Duty, Rugged & Reliable
- Built-in Rechargeable Battery
- FM Radio with Automatic Station Recognition
- USB Flash & SD Memory Card Readers
- Includes (2) Wireless Microphones
- (2) 1/4" Microphone/Guitar Inputs
- Independent Adjustable Mic/Guitar Volume Controls
- RCA (L/R) Line Input ConnectorJacks
- Ability to Connect External Devices
- RCA (L/R) Line Output Connector Jacks
- Ability to Connect to Additional Speaker Systems
- Rear Panel Button & Rotary Knob Control Center
- Volume, Bass and Treble Adjustment
- Wired Microphone Compatible
- 12 Volt Inlet for Car/ RV Use
- Digital LCD Display
- ID3 Tag Song Readout Info
- Battery LED Indicator Lights
- Engineered Fortified Molded Cabinet
- Convenient Rolling Wheels and Extendable Carry Handle
- 35mm Speaker Stand Mount

Bluetooth Wireless Streaming:

- Instantly Stream Music from Your Bluetooth Devices
- Works with All Your Favorite Bluetooth Devices (iPhone, Android, Smartphone, iPad, Tablet, PC, etc.)
- Bluetooth Network name: PYLE SPEAKER
- Bluetooth Wireless Range: 30'+ Feet

Recording function:

When you insert **USB/SD**,press "**MODE**" button to select the **REC** mode. Press "**REC/PLAY**" button once,the unit will begin recording, when the recording is finished, just press "**REC/PLAY**" button again. The recording will stop.

How to play the recorded files?

Press "MODE" button to select the REC mode.

Long press "REC/PLAY" button more than three seconds, the unit will auto play the recorded files, press CH+/CH- to select files.

5


WIRELESS MICROPHONE INTRODUCTION

- 1. Wireless Microphone head
- 2. Digital Display Screen
- 3. Power ON/OFF Switch button
- 4. Battery Box: (need 2XAA 1.5V batteries)



REMOTE CONTROL FUNCTION

- 1. Power Switch
- 2. Previous Station
- 3. Next Station
- 4. Previous Song
- 5. Next Song
- 6. Volume-
- 7. Volume+
- 8. Repeat Function
- Mode Menu Control Button
 Press it for Audio Input Selection
 LINE/REC/USB/FM/Bluetooth,etc.
- 10. Equalizer Button
- 11. Play / Pause Button
- 12. Number Buttons for Song Selection

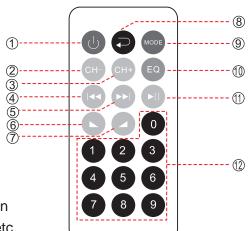

SAFETY NOTES

- Protect the unit from moisture or rain.
- Keep the unit in a well ventilated environment and keep away from, direct sunlight to prevent unit from overheating.
- Don't use volatile or dangerous chemical cleaners on the unit (like toluene, alcohol, gasoline etc.) Use gentle cleaners.
- Do not open the chassis! Extremely dangerous! Do not put your hands inside the chassis.
- If the device begins to malfunction do not attempt to repair, unplug the unit and contact Pyle immediately.
- Carefully handle, plug and unplug the power cable when handling.
 Hold the plug with a firm grip and when plugging or unplugging from sockets.
- Correct power must be used to operate this unit properly, do not use any other powering options, cords or methods.

What's in the Box:

PA Speaker

(2) Wireless Handheld Microphones

Attachable Mic Holders

Attachable Rolling Wheels

Remote Control

Power/Charging Cable

Technical Specs:	PPHP1235WMU	PPHP1535WMU
Max Power Output	1000 Watt	1600 Watt
RMS Power Output	500 Watt	800 Watt
Battery Life	Up to 4 Hours	Up to 4 Hours
Battery Charge Time	About 8 Hours	About 8 Hours
Subwoofer Frequency	80-18Khz (-10dB)	75-18kHz (-10dB)
Subwoofer	12"	15"
Tweeter	1.34"	1.34"
Impedance	4 Ohm	4 Ohm
Sensitivity	95dB (+/-2dB)	95dB (+/-2dB)
S/N Ratio	>50dB	>50dB
T.H.D.	10.0 %, 25 Watt	0.3 %, 25 Watt
Frequency Response	80-18Khz (-10dB)	80-18Khz (-10dB)
Power	110/220V, Switchable	110/220V, Switchable
Maximum USB/SD Card Support	16GB	16GB
Digital Audio File Support	MP3, WMA	MP3, WMA
Dimensions (L x W x H)	13.4" x 12.2" x 22.6" -in	17.3" x 14.6" x 26.8" -in
Sold as:	Unit	Unit

8