

PYLE
PyleUSA.com

PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com











PPHP1264A

12" Portable Wireless BT PA Speaker System
Karaoke Speaker with LED Lights, USB/Micro SD/
FM/BT/Aux/Remote Control/Mic Inputs,
Built-in Rechargeable Battery, w/ Wheels
and Handle Bar (1000 Watt)

USER MANUAL

**PLEASE READ THE INSTRUCTION MANUAL CAREFULLY
AND KEEP IT FOR FUTURE REFERENCE**


WARNING

-  1. **DO NOT** place objects on top of the device, as objects may scratch the device.
-  2. **DO NOT** expose the device to dirty or dusty environments.
-  3. **DO NOT** insert any foreign objects into the device.
-  4. **DO NOT** expose the device to strong magnetic or electrical field.
-  5. **DO NOT** use the device in the rain
-  6. Please check with your Local Authority or retailer for proper disposal of electronic products.
-  7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.
-  8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.


Illegal operation may cause personal injury, which could be fatal and may cause damage to property.

REMOTE CONTROL Functions

- 1. STANDBY BUTTON
- 2. CHOOSE INPUT SIGNAL
- 3. MUTE BUTTON
- 4. PLAY/STOP BUTTON
- 5. NEXT SONG OF USB/SD
- 6. PREVIOUS SONG OF USB/SD
- 7. EQ SOLUTION
- 8. INCREASE SPEAKER VOLUME
- 9. CHOOSE SONG NUMBER DIRECTLY
- 10. CHOOSE USB/SD SIGNAL DIRECTLY
- 11. DECREASE MUSIC VOLUME
- 12. REPEAT SONG

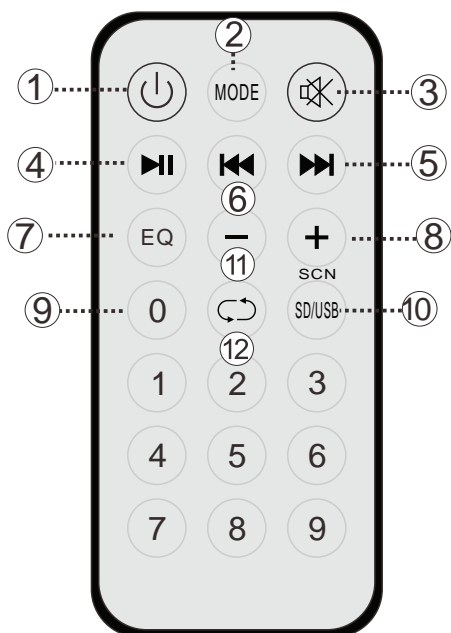

Control Board Functions

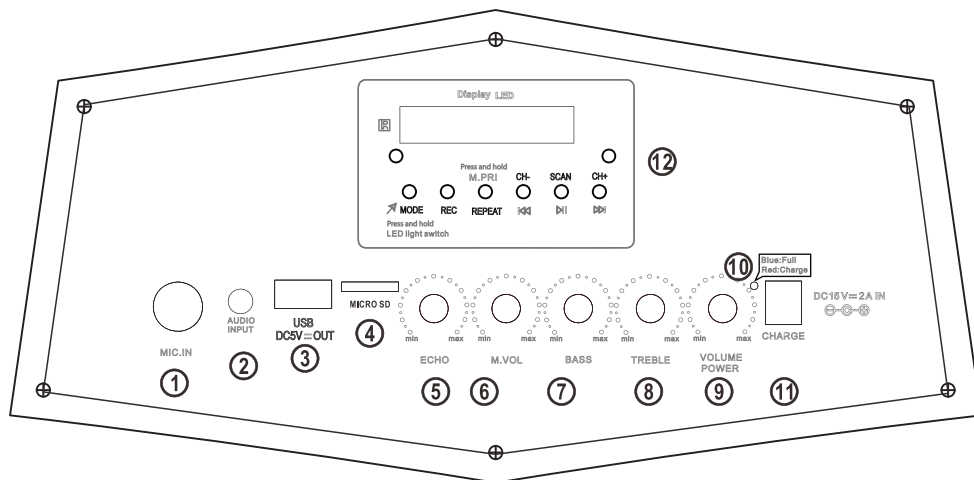

- 1. 6.5 MM microphone input
- 2. 3.5MM audio input
- 3. USB input jack for play Mp3 music
- 4. Micro SD for play Mp3 music
- 5. Echo volume for microphone
- 6. Microphone volume knob
- 7. Music bass volume knob
- 8. Music treble volume knob
- 9. Music volume and power ON/OFF
- 10. LED indicator for charge and full charge
- 11. DC15V/2A adapter input jack
- 12. Mp3 control board

Troubleshooting and Warning

Fault	Possible Cause	Solution
No sound	1. No input sound source 2. Volume is too low	1. Use a better music signal 2. Adjust volume
Distortion of sound	1. Volume too high 2. Speaker may be damaged	1. Turn down the volume 2. If speaker is damaged, Repair or replace it
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on 3. Microphone volume knob is at the lowest position	1. Plug microphone properly into the socket 2. Turn on microphone switch 3. Adjust microphone volume properly
MP3 does not play	1. The song format in the U disc is incorrect 2. Improper operation has caused a process disorder 3. USB disc is disconnected	1. Transform song format into Mp3 format 2. Reboot the machine 3. Insert USB disc properly

PPHP1264A

12" Portable Wireless BT PA Speaker System

Karaoke Speaker with LED Lights, USB/Micro SD/FM/BT/Aux/Remote Control/Mic Inputs, Built-in Rechargeable Battery, w/ Wheels & Handle Bar (1000 Watt)

Features:

- Portable PA Speaker System
- High-Powered Loudspeaker Design
- Master Volume, Mic Volume, Treble, Bass Adjustable
- ON/OFF Switch to Control LED Lights
- Wired Microphone for Home Karaoke Style Fun
- Wireless BT Music Streaming Ability
- Multi-Color Flashing LED Party Lights
- LED Display
- Built-in Rechargeable Battery



WARNING:

This products can expose you to a chemical or group of chemicals, which may include "Lead and lead compounds" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.