

PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

PYLE
PyleUSA.com



PPHP1235WMU - PPHP1535WMU

Wireless BT Streaming PA Loud-Speaker System

Includes (2) UHF Wireless Microphones

USER MANUAL

INDEX

OPERATION	1
GENERAL USE INSTRUCTIONS	2
CONTROLS AND CONNECTIONS	3
FEATURES	5
SAFETY NOTES	7
SPECIFICATIONS	8



- **CAUTION:** To Reduce the risk of electric shock, do not remove the cover (or back)
- This product must be earthed
- No user-serviceable parts inside, refer servicing to qualified service personnel

OPERATION

1. Prior to switching on, turn volume down to minimum.
2. Connect the audio source to the appropriate Input socket
3. Ensure that the unit is connected to the appropriate power source
4. Switch on the audio source, followed by the active speaker.
5. Set the volume with the applicable control.
6. Adjust the bass + treble.
7. When using the speaker box by built-in battery, if you find the MP3 screen flickering which indicates the battery voltage is low, you have to turn off the speaker box and charge battery.
8. If you don't use the unit frequently, please do remember to charge the unit every three months to keep the battery in good condition.


Note: Please turn off the product when finish charging.

INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers.
- No naked flame sources, such as lighted candles, should be placed on the apparatus. **-FIRE HAZARD**
- Only connect to an earthed mains outlet:
AC115V, 60Hz / AC230V, 50Hz.
- For indoor use only. If the box will be used outdoors, you need to make sure that theres no humidity can enter the box.
- When not in use, unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- The boxes can be hung. Use only strong and approved mounting material. During the mounting, make sure that nobody is standing below the mounting area.
- Do not place liquids on the box and protect it against humidity. Humidity can shorten the life time considerably.
- Only use suitable means of transportation if you want to move the box.
- Always unplug the unit during thunderstorms or if its not in use.
- If the unit will not be used for a long period of time, condensation may occur inside the housing. Please let the unit reach room temperature prior to use.
- Never try to repair the unit yourself. It does not contain any user serviceable parts.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of the reach of children.

CONTROLS AND CONNECTIONS

1. Digital Display Screen
2. Reception of Remote control
3. MP3 Control
MOD: USB/REC/FM/Bluetooth/Switch over
REC PLAY: Recording/Play function
▶I: Play/Pause
SCAN: Search radio station for FM
■ : Pause
REP: Repeat function
◀◀: Previous song
VOL- : Volume down
FM: Previous station
▶▶: Next song
VOL+: Volume up
FM: Next station
4. SD/MMC card input
5. USB input
6. RCA Phono (R+L) line input level control
7. RCA line output
8. RCA Phono (R+L) line input
9. Treble control for high frequencies
10. Bass control for low frequencies
11. Master Volume control
12. Reverb Time Control
13. Echo Control
14. Mic input level control
15. Guitar input / 6.35mic 1 input
16. 6.35mm mic 2 input
17. Wireless microphone B channel indicator
18. Wireless microphone A channel indicator
19. Wireless power indicator
20. Wireless mic power switch
21. A channel volume control
22. B channel volume control
23. Wireless microphone A-B channel receiving antenna
24. FM Radio antenna
25. Power Indicator
26. Charge Indicator
27. Low Voltage Indicator
28. Fuse Socket
29. DC Power Interface
30. POWER: Main Power Switch
AC: AC Input
BATT: Battery
31. Power select
32. 115V-230V AC Input

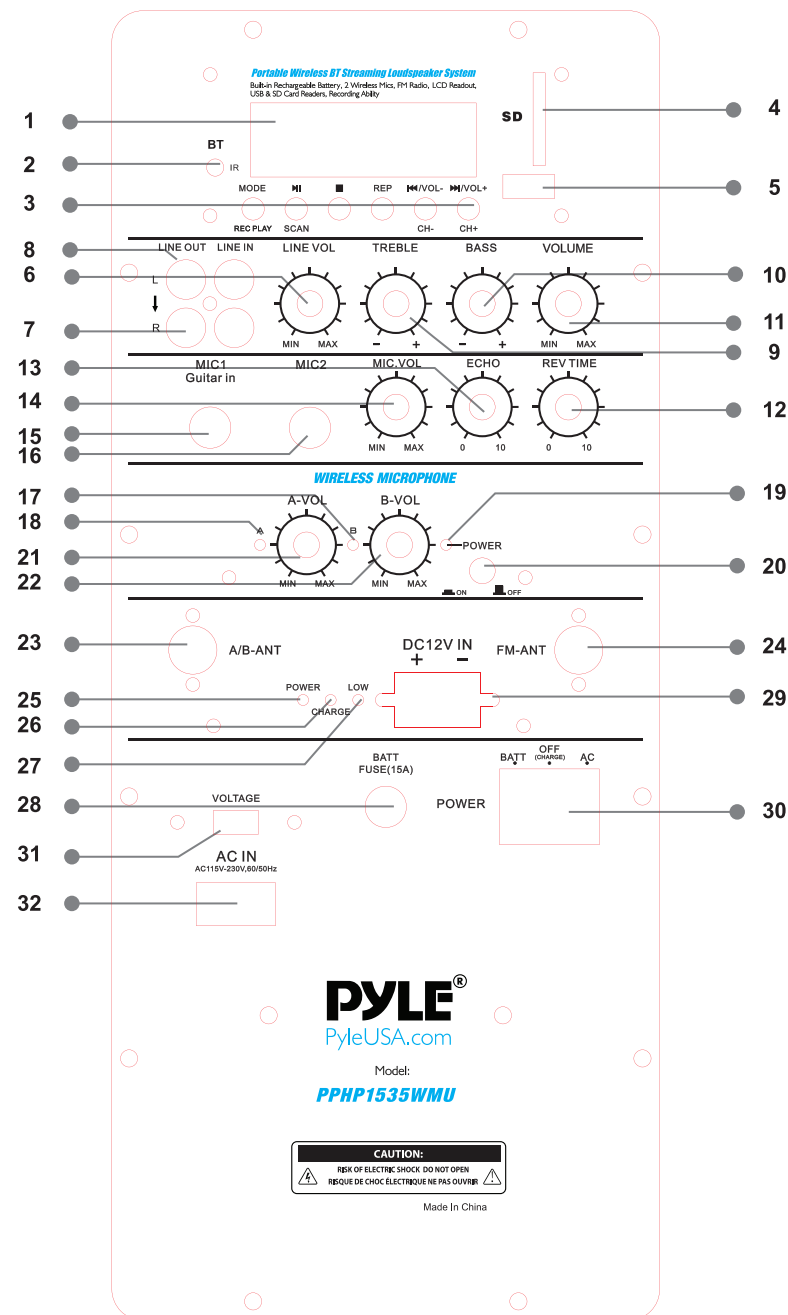

Features:

- Versatile PA Loud Speaker Sound System
- Bluetooth Wireless Music Streaming Ability
- Active 2-Way Full Range Stereo Sound
- Heavy Duty, Rugged & Reliable
- Built-in Rechargeable Battery
- FM Radio with Automatic Station Recognition
- USB Flash & SD Memory Card Readers
- Includes (2) Wireless Microphones
- (2) 1/4" Microphone/Guitar Inputs
- Independent Adjustable Mic/Guitar Volume Controls
- RCA (L/R) Line Input ConnectorJacks
- Ability to Connect External Devices
- RCA (L/R) Line Output Connector Jacks
- Ability to Connect to Additional Speaker Systems
- Rear Panel Button & Rotary Knob Control Center
- Volume, Bass and Treble Adjustment
- Wired Microphone Compatible
- 12 Volt Inlet for Car/ RV Use
- Digital LCD Display
- ID3 Tag Song Readout Info
- Battery LED Indicator Lights
- Engineered Fortified Molded Cabinet
- Convenient Rolling Wheels and Extendable Carry Handle
- 35mm Speaker Stand Mount

Bluetooth Wireless Streaming:

- Instantly Stream Music from Your Bluetooth Devices
- Works with All Your Favorite Bluetooth Devices (iPhone, Android, Smartphone, iPad, Tablet, PC, etc.)
- Bluetooth Network name: **PYLE SPEAKER**
- Bluetooth Wireless Range: 30'+ Feet

Recording function:

When you insert **USB/SD**,press "**MODE**" button to select the **REC** mode. Press "**REC/PLAY**" button once,the unit will begin recording, when the recording is finished, just press "**REC/PLAY**" button again.

The recording will stop.

How to play the recorded files?

Press "**MODE**" button to select the **REC** mode.

Long press "**REC/PLAY**" button more than three seconds, the unit will auto play the recorded files,press **CH+/CH-** to select files.


WIRELESS MICROPHONE INTRODUCTION

1. Wireless Microphone head
2. Digital Display Screen
3. Power ON/OFF Switch button
4. Battery Box: (need 2XAA 1.5V batteries)



REMOTE CONTROL FUNCTION

1. Power Switch
2. Previous Station
3. Next Station
4. Previous Song
5. Next Song
6. Volume-
7. Volume+
8. Repeat Function
9. Mode Menu Control Button
Press it for Audio Input Selection
LINE/REC/USB/FM/Bluetooth,etc.
10. Equalizer Button
11. Play / Pause Button
12. Number Buttons for Song Selection

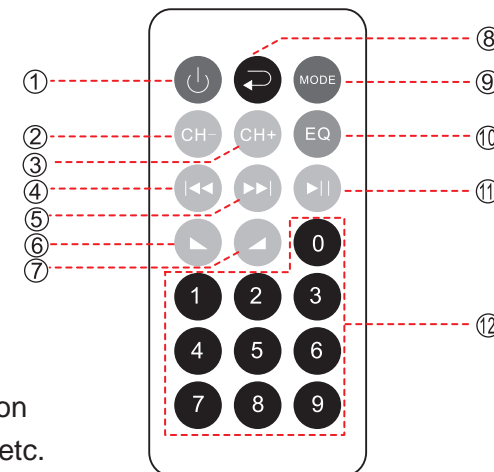

SAFETY NOTES

- Protect the unit from moisture or rain.
- Keep the unit in a well ventilated environment and keep away from, direct sunlight to prevent unit from overheating.
- Don't use volatile or dangerous chemical cleaners on the unit (like toluene, alcohol, gasoline etc.) Use gentle cleaners.
- Do not open the chassis! Extremely dangerous! Do not put your hands inside the chassis.
- If the device begins to malfunction do not attempt to repair, unplug the unit and contact Pyle immediately.
- Carefully handle, plug and unplug the power cable when handling. Hold the plug with a firm grip and when plugging or unplugging from sockets.
- Correct power must be used to operate this unit properly, do not use any other powering options, cords or methods.

What's in the Box:

PA Speaker

(2) Wireless Handheld Microphones

Attachable Mic Holders

Attachable Rolling Wheels

Remote Control

Power/Charging Cable

Technical Specs:	PPHP1235WMU	PPHP1535WMU
Max Power Output	1000 Watt	1600 Watt
RMS Power Output	500 Watt	800 Watt
Battery Life	Up to 4 Hours	Up to 4 Hours
Battery Charge Time	About 8 Hours	About 8 Hours
Subwoofer Frequency	80-18Khz (-10dB)	75-18kHz (-10dB)
Subwoofer	12"	15"
Tweeter	1.34"	1.34"
Impedance	4 Ohm	4 Ohm
Sensitivity	95dB (+/-2dB)	95dB (+/-2dB)
S/N Ratio	>50dB	>50dB
T.H.D.	10.0 %, 25 Watt	0.3 %, 25 Watt
Frequency Response	80-18Khz (-10dB)	80-18Khz (-10dB)
Power	110/220V, Switchable	110/220V, Switchable
Maximum USB/SD Card Support	16GB	16GB
Digital Audio File Support	MP3, WMA	MP3, WMA
Dimensions (L x W x H)	13.4" x 12.2" x 22.6" -in	17.3" x 14.6" x 26.8" -in
Sold as:	Unit	Unit