



# PPHP28AMX

# Stage & Studio DJ Speaker & Mixer Bundle Kit

(2) 8" Bluetooth PA Loud-Speakers, 8-Ch. Audio Mixer, Speaker Stands, Wired Microphone (300 Watt)

#### **WARNING!**

# **CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OF THIS UNIT.

# THERE ARE NO USER - SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN.



The lighting flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of "dangerous" voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of Electric shock to humans. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this manual.

### SAFETY INSTRUCTION

- 1. Please read the user manual carefully before use and retain for future reference.
- 2. The power supply must match the demand of the device with reliable ground wire.
- 3. All covering signal should be complied with the demand of device.
- 4. The device should be located far away from high temperature, moisture and powerful electromagnetic field.
- 5. Max operating temperature is 113°F.
- 6. No naked flame sources, such as lighted candles, shall be placed on the product.
- 7. Clean only with dry cloth The appliance should be cleaned only as recommended by the manufacturer.
- 8. When not in use, unplug the unit from the mains.
- 9. To establish a safe level:
  - Start your volume control at a low setting.
  - Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- 10. Only use suitable means of transportation if you want to move the speaker.

#### Note:

 
- Once the **BLUETOOTH** devices are paired, there is no need to pair them again.
- If the speaker is connected via Bluetooth device but does not play with sound, please turn off nearby devices and only leave one device to re-connect with the speaker.
- When inserting the USB/SD Card, make sure the direction you selected is correct.
  Never insert violently to avoid damaging the USB/SD Card or the unit. If it doesn't work, please check if the direction is correct.
- Turn off and pull out the USB/SD before turning off the speaker.

# **CONTROL PANELS**

# 1. MP3 Player Button

# A. MODE: Short press:


Press to switch between USB/SD/BLUETOOTH.



C. ▶I: Short press: Switch next Song, Long press Voice UP

D. REPEAT: Repeat between RA (Repeat all)/RO (Repeat One)/RR (Repeat randomly)

**E.** ►II **Short press:** Play/Pause long press to **FOLDER** tracking.

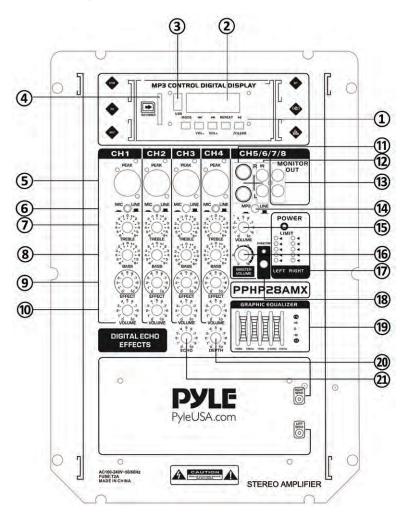

FOLDER

VOL-

VOL+

- 2. Blue LED Display
- 3. USB port
- 4. SD port
- 5. Channel 1-4 XLR Connector:

Connect Microphone and Line input using the XLR cables.

- **6. Mic / Line Input Selector Channels:** When connecting a microphone set the selector to MIC. When connecting a Line input set this selector to Line.
- **7. Treble Knob:** Channels 1-4 have individual treble controls per channel. Use this knob to adjust the treble levels for the selected channel.
- **8. Bass Knob:** Channels 1-4 have individual bass controls per channel. Use this knob to adjust the bass levels for the selected channel.
- **9. Effects Knob:** Channels 1-4 have individual effects controls per channel. Use this knob to adjust the reverb effect levels for the selected channel.
- **10. Volume Knob:** Channels 1-4 have individual volume controls per channel. Use this knob to adjust the volume levels for the selected channel.
- **11. 1/4" Line Input:** Connect your sound source to this 1/4" input. The line volume will be controlled by channel 5/6 volume control and master volume Knob. Only passive signals should be the connected input.
- **12. RCA Line Input:** Connect your sound source to this RCA input (6/7 Channel). Only passive signals should be the connected input.
- **13. RCA Line Output:** Use this connector to connect other amplifier. DO NOT connect directly to a passive speaker.
- **14. Line/MP3 Selector:** When you use USB SD Bluetooth signal push down, When you use Mic/Line input signal push the selector up.
- 15. Signal input Volume Knob:

Adjust the volume for MP3 or MIC/Line signal input.

- **16. Master Volume Knob:** Adjust all the output signal for the powered mixer.
- **17. Indicator:** Displays the signal volume for output.
- **18. Phantom Power:** Press this button to activate the 15V phantom power necessary for a condenser (capacitance) Microphone which might require 15V power supply from the mixer Channel 1-4 input.
- 19. 5 Band Graphic Equalizer: Adjusts the frequency of output signal.
- 20. Depth Knob:

Adjust the depth effects level of 1-4 Channel for Microphone input.

21. ECHO Volume Knob: Adjusts the ECHO Level for MIC input.

#### PPHP28AMX

Stage & Studio DJ Speaker & Mixer Bundle Kit - (2) 8" Bluetooth PA Loud-Speakers, 8-Ch. Audio Mixer, Speaker Stands, Wired Microphone (300 Watt)

#### **Features:**

- All-in-One DJ Audio Loud-Speaker Kit
- 8-Channel Powered Amplifier Audio Mixer
- Dual Molded Cabinet PA Speakers
- Sound System: (2) 8" Speakers, (2) 1" Tweeters
- Bluetooth Wireless Music Streaming Ability
- · Active 2-Way, Full Range Stereo Sound
- MP3 Digital Audio File Support
- USB Flash & SD Memory Card Readers
- +48V Phantom Power
- (4) XLR 3-Pin Connectors
- (2) 1/4" Microphone / Guitar Inputs
- Independent Adjustable Channel Controls
- Treble, Bass, Effect Volume Configuration

### **Bluetooth Wireless Streaming:**

- Instantly Receives Wireless Music Streaming Audio
- Works with All of Your Favorite Devices (iPhone, Android, Smartphones, iPad, Tablet, MP3 Player, etc.)
- Bluetooth Version: 3.0
- Bluetooth Network Name: 'PyleUSA'
- Bluetooth Wireless Range: Up to 65' ft.

# **Technical Specs:**

- Speaker Power Output: 300 Watt MAX
- Tweeter Type: 1" Titanium Horn Driver (x2)
- Subwoofer Type: 8" Long Throw (x2)
- Subwoofer Frequency: 48Hz-4500Hz (±10dB)
- Speaker Magnet: 30 oz (x2)
- Impedance: 4 Ohm
- Speaker Sensitivity: 90dB
- Power Mixer Sensitivity: -14dB
- S/N Ratio: 75dB
- T.H.D.: 9.2%
- Frequency Response: 48-18Khz (±10dB)

- 5-Band Graphic EQ
- Digital Echo Effects Control
- RCA (L/R) Audio Line Input/Output Jacks
- Universal Speaker Stand Mount Support, 35mm
- Rugged & Heavy-Duty Molded Cabinet Housing
- Ability to Connect Additional Microphones, Instruments, DJ Equipment
- Convenient System Design Assembles & Disassembles for Quick Setup
- Perfect for On-Stage Performances, Crowd Control, Public Gathering Events

### What's in the Box:

- Amplifier Mixer Console
- (2) 8" PA Speakers
- (2) Tripod Speaker Stands
- (2) 1/4" Connection Cables
- · Wired Handheld Mic
- Power Cable
- Maximum USB/SD Card Support: Up to 32GB
- Digital Audio File Support: MP3, WMA, MP3Pro
- +48V Phantom Power: ON/OFF
- Power Supply: 100-240V, 60/50HZ
- Single Speaker Dimensions (L x W x H): 11.22" x 9.84" x 17.72" -Inches (Each)
- Amplifier Mixer Dimensions (L x W x H): 11.61" x 7.09" x 18.11"-Inches
- Sold as: 1



